

Power Analyzer

UMG 96-PQ-L

(from firmware 3.55)

User manual and technical data

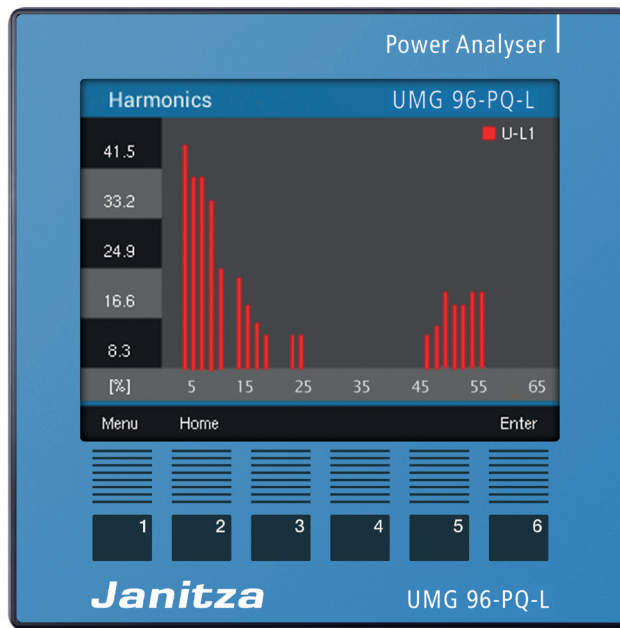


Image may differ from the original!

UMG 96-PQ-L (from firmware 3.55)

Measurement device for recording energy quantities

Doc. no.: 2.061.073.4.d

10/2024

The German version is the original edition of the documentation.

Subject to technical alterations.

The contents of our documentation have been compiled with great care and reflect the current state of the information available to us. Nonetheless, we wish to point out that updates of this document are not always possible at the same time as technical refinements are implemented in our products. Information and specifications are subject to change without notice.

Please check for the latest version at www.janitza.com.

Information about the GridVis® software.

 Janipedia: wiki.janitza.com

 Tutorials: youtube.com/@gridvis

TABLE OF CONTENTS

| | |
|--|-----------|
| 1. Information on the device and the user manual | 10 |
| 1.1 Disclaimer | 10 |
| 1.2 Copyright notice | 10 |
| 1.3 Technical changes. | 10 |
| 1.4 About this user manual | 10 |
| 1.5 Defective device/disposal. | 11 |
| 2. Safety | 12 |
| 2.1 Display of warning notices and safety information | 12 |
| 2.2 Hazard levels. | 12 |
| 2.3 Product safety. | 12 |
| 2.4 Dangers when handling the device. | 13 |
| 2.5 Electrically qualified personnel | 14 |
| 2.6 Warranty in the event of damage | 14 |
| 2.7 Safety information for handling current transformers and measurement devices with residual current measurement | 14 |
| 2.8 Handling batteries/accumulators | 15 |
| 3. Product description | 16 |
| 3.1 Device description | 16 |
| 3.2 Device versions. | 16 |
| 3.3 Incoming goods inspection. | 16 |
| 3.4 Intended use | 17 |
| 3.5 Performance characteristics. | 17 |
| 3.6 Conformity declaration | 18 |
| 3.7 FCC Declaration of Conformity. | 18 |
| 3.8 Scope of delivery | 18 |
| 3.9 Accessories. | 18 |
| 3.10 Measuring method | 19 |
| 3.11 Transformers | 19 |
| 3.12 Operating concept | 19 |
| 3.13 GridVis® network analysis software | 19 |
| 4. Structure of the device. | 20 |
| 4.1 Front panel - Display and controls | 20 |
| 4.2 Rear of the device - Connections | 21 |
| 4.3 Rating plate. | 22 |
| 5. Mounting. | 23 |
| 5.1 Installation location | 23 |
| 5.2 Mounting orientation. | 23 |
| 5.3 Securing | 23 |

| | |
|--|-----------|
| 6. Grid systems | 24 |
| 7. Installation | 25 |
| 7.1 Nominal voltages | 25 |
| 7.1.1 Three-phase four-conductor network with grounded neutral conductor | 25 |
| 7.1.2 Three-phase three-conductor system | 26 |
| 7.2 Circuit breaker | 26 |
| 7.3 Supply voltage | 26 |
| 7.4 Voltage measurement | 28 |
| 7.4.1 Overvoltage | 28 |
| 7.4.2 Frequency | 28 |
| 7.4.3 Connection variants for voltage measurement | 29 |
| 7.4.4 Voltage transformers | 30 |
| 7.5 Current measurement | 31 |
| 7.5.1 Connection variants for current measurement | 32 |
| 7.5.2 Current direction | 33 |
| 7.5.3 Summation current measurement | 33 |
| 7.5.4 Ammeter | 33 |
| 8. Connection and PC connections | 34 |
| 8.1 Connection variants | 34 |
| 8.2 RS-485 interface | 35 |
| 8.3 Shielding | 36 |
| 8.4 Termination resistors | 37 |
| 8.5 Bus structure | 37 |
| 9. Digital inputs and outputs | 38 |
| 9.1 Digital inputs | 38 |
| 9.1.1 S0 pulse input | 38 |
| 9.2 Digital outputs | 39 |
| 9.3 LED status bar | 39 |
| 10. Analog outputs | 40 |
| 11. Operation | 40 |
| 11.1 Button function | 40 |
| 11.2 Measuring display "Overview" | 41 |
| 11.3 Menu | 41 |
| 11.4 Overview of menu displays | 42 |
| 11.5 Configuring a new start screen | 43 |

| | |
|---|-----------|
| 12. Configuration | 44 |
| 12.1 The Configuration window | 44 |
| 12.2 Language | 44 |
| 12.3 Communication | 45 |
| 12.4 Measurement | 46 |
| 12.4.1 Current and voltage transformers | 46 |
| 12.4.2 Nominal values | 47 |
| 12.4.3 Connection variant | 49 |
| 12.5 Display | 51 |
| 12.5.1 Brightness | 51 |
| 12.5.2 Standby after | 51 |
| 12.5.3 Brightness (standby) | 51 |
| 12.5.6 Colors | 52 |
| 12.5.4 Auto Home return | 52 |
| 12.5.5 Home delay | 52 |
| 12.6 System | 53 |
| 12.6.1 Firmware/Serial number | 53 |
| 12.6.2 Date/time | 53 |
| 12.6.3 Password | 54 |
| 12.6.4 Reset | 55 |
| 12.7 Modbus editor | 57 |
| 13. Commissioning | 59 |
| 13.1 Applying the supply voltage | 59 |
| 13.2 Measured voltage | 59 |
| 13.3 Measured current | 59 |
| 13.4 Frequency | 60 |
| 13.5 Direction of rotary field | 60 |
| 13.5.1 Fundamentals on the phasor diagram | 61 |
| 13.6 Checking the voltage and current inputs using a phasor diagram | 62 |
| 13.7 Overrange | 62 |
| 13.8 Checking the time | 62 |
| 13.9 Checking the power measurement | 63 |
| 13.10 Checking the communication | 63 |
| 13.11 Delete min./max. values | 65 |
| 13.12 Harmonics current (harmonics) | 66 |
| 13.13 Communication in the bus system | 67 |
| 13.13.1 RS-485 | 67 |
| 13.14 Digital inputs/outputs | 68 |
| 13.14.1 Digital inputs | 68 |
| 13.14.2 Pulse counter (S0 input) | 69 |

| | | |
|---------|--|----|
| 13.14.3 | Digital outputs | 70 |
| 13.14.4 | Pulse output | 70 |
| 13.14.5 | Modbus remote output | 71 |
| 13.14.6 | Timer switch output | 71 |
| 13.14.7 | Comparator (limit value monitoring) | 72 |
| 13.15 | Configuration of the analog output | 74 |
| 13.16 | Drag indicator function | 75 |
| 13.16.1 | Internal drag indicator synchronization | 75 |
| 13.16.2 | External drag indicator synchronization | 76 |
| 13.16.3 | Configuring the drag indicator synchronization | 78 |
| 13.16.4 | Drag indicator - Measurement device displays | 79 |
| 13.16.5 | Delete drag indicator | 80 |
| 13.17 | Gridded and moving averages | 81 |
| 13.18 | Recording measured values | 82 |
| 13.18.1 | Profiles (only for class S devices) | 83 |
| 13.18.2 | Default setting, Partition A | 83 |
| 13.18.3 | Default setting, Partition B | 84 |
| 13.18.4 | Use cases – Recording examples | 85 |
| 13.19 | Events | 86 |
| 13.19.1 | Internal events | 86 |
| 13.19.2 | External events | 87 |
| 13.19.3 | Configuring events | 88 |
| 13.19.4 | Event recording time | 89 |
| 13.19.5 | Display of events | 90 |
| 13.20 | Tariff switching | 91 |
| 13.21 | Time synchronization | 92 |
| 13.21.1 | RS-485 interface (UTC time pulse) | 92 |
| 13.21.2 | RS-485 interface (DIN EN 60870) | 92 |
| 13.21.3 | Ethernet interface (NTP server) | 92 |
| 13.21.4 | Digital input 2 | 93 |
| 13.22 | "Low battery" and "Set time" warnings | 93 |
| 13.23 | Power quality according to class S (option) | 94 |
| 13.23.1 | Interharmonics | 95 |
| 13.23.2 | Flicker | 95 |
| 13.23.3 | Unbalance | 95 |
| 13.23.4 | Mains signal voltage | 95 |
| 13.23.5 | Rapid voltage changes | 95 |
| 13.23.6 | Over/under frequency events | 95 |
| 13.23.7 | Subsequent class S activation | 95 |

| | |
|--|------------|
| 14. Overview of menus and displays | 96 |
| 14.1 Overview menu (start screen) | 96 |
| 14.2 Voltage menu | 97 |
| 14.3 Current menu | 98 |
| 14.4 Power menu | 99 |
| 14.5 Energy menu | 99 |
| 14.6 Gridded averages menu | 100 |
| 14.7 Consumption overview menu | 101 |
| 14.8 Drag indicator menu | 101 |
| 14.9 Harmonics menu | 102 |
| 14.10 Oscilloscope menu | 102 |
| 14.11 Events menu | 103 |
| 14.12 System Info menu | 105 |
| 14.13 Configuration menu – Password entry | 106 |
| 14.14 Configuration menu – without password/after password entry | 107 |
| 15. Service and maintenance | 110 |
| 15.1 Repair and calibration | 110 |
| 15.2 Front panel foil and display | 110 |
| 15.3 Service | 110 |
| 15.4 Device adjustment | 110 |
| 15.5 Firmware update | 110 |
| 15.6 Clock/Battery | 111 |
| 16. Procedure in the event of a malfunction | 112 |
| 17. Technical data | 113 |
| 17.1 Performance characteristics of functions | 116 |
| 17.2 Modbus addresses of frequently used measured values | 117 |
| 17.3 Number formats | 118 |
| 17.4 Note on saving measured values and configuration data | 118 |
| 17.5 Dimensional drawings | 119 |
| 17.6 Connection example | 120 |

1. Information on the device and the user manual

1.1 Disclaimer

Compliance with the usage information for the device is a prerequisite for safe operation and attaining the stated performance characteristics and product features.

Janitza electronics GmbH assumes no liability for bodily injury, material damage or financial losses which result from disregard of the usage information.

Make sure that your usage information is readily available and legible.

1.2 Copyright notice

© 2024 - Janitza electronics GmbH - Lahnau.
All rights reserved.

Any reproduction, processing, distribution or other use, in whole or in part, is prohibited.

All trademarks and the rights arising from them are the property of the respective owners of these rights.

1.3 Technical changes

- Make sure that your device matches the user manual.
- This user manual is valid for the UMG 96-PQ-L measurement device.
Separate validities and distinctions are marked.
- First make sure you have read and understood the usage information accompanying the product.
- Keep the usage information associated with the product available for the entire service life and pass it on to any possible subsequent users.
- Find out about device revisions and the associated modifications of the usage information associated with your product at www.janitza.com.
- This manual is also valid for alternative device fronts.

1.4 About this user manual

If you have questions, suggestions or ideas for improvement of the user manual, please let us know via email at: info@janitza.com.

INFORMATION

This user manual describes the device UMG PQ-L and provides information on its operation.

In addition to this user manual, please refer to additional usage information for your device, such as:

- Installation manual.
- "GridVis® software" quick guide.
- "Safety Information" supplement.

If applicable, also refer to the usage information about expansion modules, such as

- User manuals and
- Installation manual.

Furthermore, the **GridVis®** software has an online help feature at wiki.janitza.com.

The illustrations and figures in this user manual may differ from the actual state of the device delivered!

INFORMATION

Our usage information uses the grammatical masculine form in a gender-neutral sense! This form always refers equally to women, men and diverse. In order to make the texts more readable, distinctions are not made. We ask for your understanding for these simplifications.

1.5 Defective device/disposal

Before sending **defective devices, modules or components** back to the manufacturer for testing:

- Contact the manufacturer's Support department.
- Send devices, modules or components complete with all accessories.
- When doing so, please bear the terms for transportation in mind.

INFORMATION

Please return defective or damaged devices to Janitza electronics GmbH in accordance with the shipping instructions for air or road freight (complete with accessories).

Observe special regulations for devices with built-in batteries or rechargeable batteries!

Do not attempt to open or repair the device (the component) on your own because otherwise all warranty claims become invalid!

For the **Disposal** of the device please observe national regulations! Dispose of individual parts, as applicable, depending on their composition and existing country-specific regulations, e.g. as

- Electronic waste,
- Batteries and rechargeable batteries,
- Plastics,
- Metals.

Engage a certified disposal company to handle scrapping as needed.

Information on servicing and maintenance of your device can be found in „15. Service and maintenance“ on page 110.

2. Safety

The chapter on Safety contains information which must be observed to ensure your personal safety and avoid material damage.

2.1 Display of warning notices and safety information

The warning notices shown below

- are found throughout all of the documentation,
- can be found on the devices themselves.
- indicate potential risks and hazards,
- underscore aspects of the information provided that clarifies or simplifies procedures.



The additional symbol on the device itself indicates an electrical danger that can result in serious injuries or death.



This general warning symbol draws attention to a possible risk of injury. Be certain to observe all of the information listed under this symbol in order to avoid possible injury or even death.



2.2 Hazard levels

Warning and safety information is marked by a warning symbol, and the hazard levels are shown as follows, depending on the degree of hazard:

| |
|--|
| DANGER |
| Warns of an imminent danger which, if not avoided, results in serious or fatal injury. |

| |
|--|
| WARNING |
| Warns of a potentially hazardous situation which, if not avoided, could result in serious injury or death. |

| |
|--|
| CAUTION |
| Warns of an immediately hazardous situation which, if not avoided, can result in minor or moderate injury. |

| |
|--|
| ATTENTION |
| Warns of an immediately hazardous situation which, if not avoided, can result in material or environmental damage. |

INFORMATION

Indicates procedures in which there is **no** hazard of personal injury or material damage.

2.3 Product safety

The device reflects current engineering practice and accepted safety standards, but hazards can nonetheless arise.

Observe the safety regulations and warning notices. If notices are disregarded, this can lead to personal injury and/or damage to the product.

- Every type of tampering with or use of this device,
- which goes beyond the mechanical, electrical or other operating limits can lead to personal injury and/or damage to the product;
 - constitutes “misuse” and/or “negligence” under the product’s warranty and thus voids the warranty for any possible resulting damage.

Read and understand the user manual and, if applicable, the usage information before installing, operating, maintaining and using the device.

Only operate the device when in perfect condition and in compliance with this user manual and the usage information that is included. Send defective devices back to the manufacturer in compliance with proper transport conditions. Retain the user manual throughout the service life of the device and keep it at hand for consultation.

When using the device, also observe the legal and safety regulations for your system that are applicable for the respective use case.

2.4 Dangers when handling the device

When operating electric devices, it is unavoidable for certain parts of these devices to conduct hazardous voltage. Consequently, severe bodily injury or material damage can occur if they are not handled properly. Therefore, when handling our devices, always observe the following:

- do not exceed the limit values specified in the user manual and on the rating plate! This must also be observed during testing and commissioning!
- Take note of the safety and warning notices in all usage information that belongs to the device!

WARNING

Disregarding the connection conditions of the Janitza measurement devices or their components can lead to injuries and even death or to material damage!

- Do not use Janitza measurement devices or components for critical switching, control or protection applications where the safety of persons and property depends on this function.
- Do not carry out switching operations with the Janitza measurement devices or components without prior inspection by your plant manager with specialist knowledge! In particular, the safety of persons, material assets and the applicable standards must be taken into account!

WARNING

Risk of injury due to electrical voltage!

Severe bodily injury or death can result! Therefore please abide by the following:


- Switch off your installation before commencing work! Secure it against being switched on! Check to be sure it is de-energized! Ground and short circuit! Cover or block off adjacent live parts!
- During operation and troubleshooting (especially for DIN rail devices), check your system for dangerous voltages and switch these off if necessary!
- Wear protective clothing and protective equipment in accordance with applicable guidelines when working on electrical systems!
- Before making connections to the device/the component, ground the device by means of the ground wire connection, if present.
- Do not touching bare or stripped leads that are energized! Equip stranded conductors with wire ferrules!
- Hazardous voltages can be present in all circuitry parts that are connected to the power supply.
- Protect wires, cables and devices with a suitable line circuit breaker/fuse!
- Never switch off, remove or tamper with safety devices!
- There can still be hazardous voltages present in the device or in the component even after it has been disconnected from the supply voltage (capacitor storage).
- Do not operate equipment with current transformer circuits when open.
- Only connect screw terminals with the same number of poles and design!
- Do not exceed the limit values specified in the user manual and on the rating plate! This must also be observed during testing and commissioning.
- Take note of the safety and warning notices in the documents that belong to the device!

2.5 Electrically qualified personnel

To avoid bodily injury and material damage, only electrically qualified personnel are permitted to work on the devices and their components, modules, assemblies, systems and current circuits who have knowledge of:

- The national and international accident prevention regulations.
- Safety technology standards.
- Installation, commissioning, operation, disconnection, grounding and marking of electrical equipment.
- The requirements concerning personal protective equipment.


Electrically qualified persons within the scope of the technical safety information of all usage information associated with the device and its components are persons who can furnish proof of qualification as an electrically skilled person.

| |
|--|
|  WARNING |
| <p>Warning against unauthorized manipulation or improper use of the device or its components! Opening, dismantling or unauthorized manipulation of the device and its components which goes beyond the mechanical, electrical or other operating limits indicated can lead to material damage or injury, up to and including death.</p> <ul style="list-style-type: none"> · Only electrically qualified personnel are permitted to work on the devices and their components, assemblies, systems and current circuits. · Always use your device or component only in the manner described in the associated documentation. · If there is discernible damage, send the device or the component back to the manufacturer! |

2.6 Warranty in the event of damage

Any unauthorized tampering with or use of the device constitutes "misuse" and/or "negligence" under the product's warranty and thus voids the warranty for any possible resulting damage. In this regard, please take note of section „3.4 Intended use“ on page 17.

2.7 Safety information for handling current transformers and measurement devices with residual current measurement

| |
|--|
|  WARNING |
| <p>Risk of injury due to large currents and high electrical voltage on the current transformers! Current transformers operated while open on the secondary side (high voltage peaks pose a hazard when touched) can result in severe bodily injury or death.</p> <ul style="list-style-type: none"> · Avoid operating the current transformers while open; short circuit the unloaded transformers! · Before interrupting the current supply, short circuit the secondary connections of the current transformers. Switch any test switches that automatically short circuit the secondary lines of the current transformers to the "Test" status (Check the test switch/short circuiting connection beforehand)! · Only use current transformers with basic insulation in accordance with IEC 61010-1! · Caution, even current transformers rated as safe for open operation can pose a hazard when touched during operation while open! · Make sure to mount screw terminals for the current transformer connection on the meter and, if necessary, fasten them with the enclosed screws! · Comply with the information and provisions in the documentation of your current transformers! |

⚠ CAUTION**Risk of injury or damage to the meter due to high measurement currents at the connections of the current transformers!**

High measurement currents can cause temperatures of up to 80 °C (176 °F) on the connections of the current transformers

- Use wiring that is designed for an operating temperature of at least 80 °C (176 °F)!
- The current transformers can be hot even after the power supply has been switched off. Allow the connections of the current transformers and the connecting cables to cool down before touching them!

⚠ WARNING**Risk of injury or damage to the meter due to improper use!**

Meters with residual current measurement can trigger warning pulses if limit values are exceeded, and these are used exclusively for monitoring residual currents or failure monitoring. Use of the warning pulses as a stand-alone protective device against electrical shock can lead to injury and even death!

- Do not use devices with residual current measurement as a stand-alone protective device. Employ suitable protective devices for your system!

⚠ CAUTION**Risk of injury or damage to the meter/your system due to short circuit!**

Inadequate insulation of the operating equipment at the residual current measurement input with respect to the supply circuits can cause voltages at the measurement input which represent a hazard when touched or damage to your device or system.

- Ensure reinforced or double insulation with respect to the supply circuits!
- Ensure galvanic isolation of the residual current measurement inputs from each other!

2.8 Handling batteries/accumulators

The following apply for the battery used in the device:

⚠ CAUTION**Risk of injury due to fire or burns!**

The battery used in the device may cause fire or burns if used improperly.

- Only replace the battery with the same type or types recommended by Janitza!
- Observe the polarity when installing the battery!
- Remove batteries only with non-conductive tools (e.g. plastic tweezers)!
- Do not recharge, disassemble, burn or heat batteries above 100 °C (212 °F)!
- Do not dispose of batteries with household waste! Follow the disposal instructions in the respective device documentation!
- Keep batteries away from children and animals!
- In case of damage, return devices with a soldered battery to the manufacturer, observing proper transport conditions!

3. Product description

3.1 Device description

The measurement device is a multifunctional network analyzer and is suitable for:

- Measurements and calculations of electrical quantities such as voltage, current, power, energy, harmonics current in building installations, on distribution boards, circuit breakers and busbar trunking systems.
- Measurements of voltages and currents from the same network.
- Measurements in low-voltage networks in which nominal voltages of up to 417 V from conductors to ground and surge voltages of overvoltage category III occur.
- Measurements in medium and high voltage networks via current and voltage transformers. Measurements in medium and high voltage networks are made via current and voltage transformers!
- Current measurement via external ≈ 1 A or ≈ 5 A current transformers (inductive current transformers).
- the extension of the range of functions with modules (for the range of functions, see the user manual for the modules).

Measurement results are displayed by the measurement device and can be read and processed via interfaces.

3.2 Device versions

The measurement device is available in different versions for different grid systems (see section „6. Grid systems“ on p. 24) and with or without class S (see section 13.22 "Power quality according to class S" on p. 92).

The variant can be identified by means of the part number on the rating plate:

| | Grid system, Supply | Part No. on rating plate |
|--|---------------------|--------------------------|
| UMG 96-PQ-L (without class S) | TN / TT, 230 V | 5236001 |
| | TN / TT, 24 V | 5236002 |
| | TN / TT / IT, 230 V | 5236005 |
| UMG 96-PQ-L Class S (IEC 61000-4-30) | TN / TT, 230 V | 5236021 |
| | TN / TT, 24 V | 5236022 |
| | TN / TT / IT, 230 V | 5236025 |

3.3 Incoming goods inspection

Safe and trouble-free operation of this device and its components presupposes proper transport, proper storage, set-up and assembly as well as operation and maintenance in addition to compliance with the safety information and warning notices.

Exercise due caution when unpacking and packing the device, do not use force and only use suitable tools.

Before installing the device, please check the following:

- Its flawless mechanical condition by visual inspection.
- The scope of delivery for completeness.

If it can be assumed that safe operation of the device is no longer possible:

- Disconnect the device from operation immediately!
- Secure the device against being switched on again!

It can be assumed that safe operation is no longer possible if the device, for example:

- Has visible damage.
- No longer functions despite an intact power supply.
- Was subjected to extended periods of unfavorable conditions (e.g. storage outside of the permissible climate thresholds without adjustment to the room climate, condensation, etc.) or transport stress (e.g. falling from an elevated position, even without visible external damage, etc.).

3.4 Intended use

The device is:

- Intended for use in residential and industrial areas.
- Intended for installation in stationary switchboard cabinets and small distribution boards, indoors or weather-protected.
- Not intended for installation in vehicles! Use of the device in non-stationary equipment constitutes an exceptional environmental condition and is only permissible by special agreement.
- Not intended for installation in environments with harmful oils, acids, gases, vapors, dusts, radiation, etc.
- Designed as an interior meter.

Safe and trouble-free operation of the device requires proper transport, storage, assembly, installation, operation and maintenance.

3.5 Performance characteristics

General

- Front panel installation device with dimensions of 96 x 96 mm (3.78 x 3.78 in).
- Expansion by means of module
- Connection via screw terminals
- Color graphic display 320 x 240 px
- Operation via 6 buttons
- 3 voltage measurement inputs (600 V, CAT III)
- 3 current measurement inputs (via current transformer)
- 3 digital outputs
- 3 digital inputs (configured as pulse counter with simultaneous power calculation)
- 1 analog output (0 - 20 mA)
- Data memory 64 MByte flash
- RS-485 interface (Modbus RTU, slave, up to 115 kbps)
- Clock and battery
- Working temperature range -10 °C (14 °F) to +55 °C (131 °F).

Measurement uncertainty

- Active energy, measurement uncertainty
Class 0.2S for/5 A transformers
Class 0.5 for/1 A transformers
- Reactive energy class 1

Measurement

- Acquisition of more than 800 measured values
- Measuring in TN and TT networks, and with the IT variant, in IT networks as well
- Measurement in networks with nominal voltages up to L-L 720 V_{rms} and L-N 417 V_{rms} (according to IEC)
- Measuring range, current 0.005 .. 6 A_{rms}
- True effective value measurement (TRMS)
- Continuous sampling of the voltage and current measurement inputs
- Frequency range of the fundamental oscillation 45 Hz .. 65 Hz
- Measurement of harmonics current, 1st to 65th for U_{LN} and I
- U_{LN}, U_{LL}, I, P (consumption/delivered), Q (ind./cap.)
- 2 tariffs (switching via Modbus or digital input 1)

For class S devices additionally (option):

Acquisition of class S power quality characteristics according to IEC 61000-4-30.

Provision of the class S performance characteristics in the GridVis® software and in Modbus addresses:

- Interharmonics
- Flicker
- Unbalances of voltage and current
- Rapid voltage changes
- Frequency events
- Mains signal voltages (ripple control signal)

Subsequent class S activation for devices that have already been installed is possible for a fee through the GridVis® software (part number: 5236020).

3.6 Conformity declaration

The laws, standards and directives applied by Janitza electronics GmbH for the devices can be found in the declarations of conformity at www.janitza.com.

3.7 FCC Declaration of Conformity

The device:



- complies with Part 15 of the FCC Rules for Class B digital devices (limits to protect against harmful interference in a residential installation).
- generates, uses and can radiate high-frequency energy
- can cause harmful interference to radio communications if not installed and used properly. There is no guarantee that interference will not occur in a particular installation.

If there is radio or television reception interference, which can be determined by turning the device on and off, proceed as follows:

- Align or reposition the receiving antenna.
- Increase the distance between the device and the radio/television receiver.
- Connect the device and the radio/television receiver in different circuits.
- if necessary, contact Janitza support or a radio/television technician.

Code of Federal Regulations, Title 47, Part 15, Subpart B - Unintentional Radiators.

3.8 Scope of delivery

| Quantity | Part. no. | Designation |
|----------|-----------------------|--|
| 1 | 5236xxx ¹⁾ | UMG 96-PQ-L / UMG 96-PQ-L (IT variant) |
| 1 | 3303389 | Installation manual |
| 1 | 3303342 | "Safety Information" supplement |
| 1 | 3303361 | "GridVis Software" Quick Guide |
| 1 | 5236251 | UMG 96-PQ-L accessory pack |

1) For part number see delivery note
 Tab. Scope of delivery

3.9 Accessories

| Quantity | Part. no. | Designation |
|----------|-----------|---|
| 1 | 2101058 | Battery type, lithium CR2032, 3 V (approval according to UL 1642) |
| 1 | 2901065 | Silicone seal, 96 x 96 |
| 1 | 1506015 | Interface converter RS-485 <-> RS-232 |
| 1 | 1506107 | Interface converter RS-485 <-> USB |

i INFORMATION

All supplied options and design variants are described on the delivery note.

3.10 Measuring method

The device measures

- Continuously and calculates all effective values using in a 200 ms interval.
- The true RMS value (TRMS) of the voltages and currents applied to the measurement inputs.

3.11 Transformers

Use only "Current transformers for measuring purposes" for Janitza measurement devices and components!

"Protection transformers" must not be used!

3.12 Operating concept

The operating concept of the measurement device incorporates the following methods:

- 6 function buttons with display for configuration and acquisition of data.
- The GridVis network analysis and programming software® for programming and analysis of data.
- The Modbus protocol and the Modbus address list to configure and read out data. The Modbus address list is available at www.janitza.com.

This user manual describes how to operate the measurement device using the 6 function buttons and how to use the Modbus editor.

3.13 GridVis® network analysis software

The GridVis® software (download at www.janitza.com) is the perfect tool for the configuration, readout and analysis of measurement data.

Performance characteristics of the GridVis® software

- Configure and read out data from your measurement device.
- Graphic display of measured values.
- Store measurement data in databases.
- Analyze measurement data that has been read out.
- Create reports.

Connections to the PC (GridVis® software)

Connections for communication between the PC and the measurement device can be found in section „8. Connection and PC connections“ on page 34.

4. Structure of the device

4.1 Front panel - Display and controls


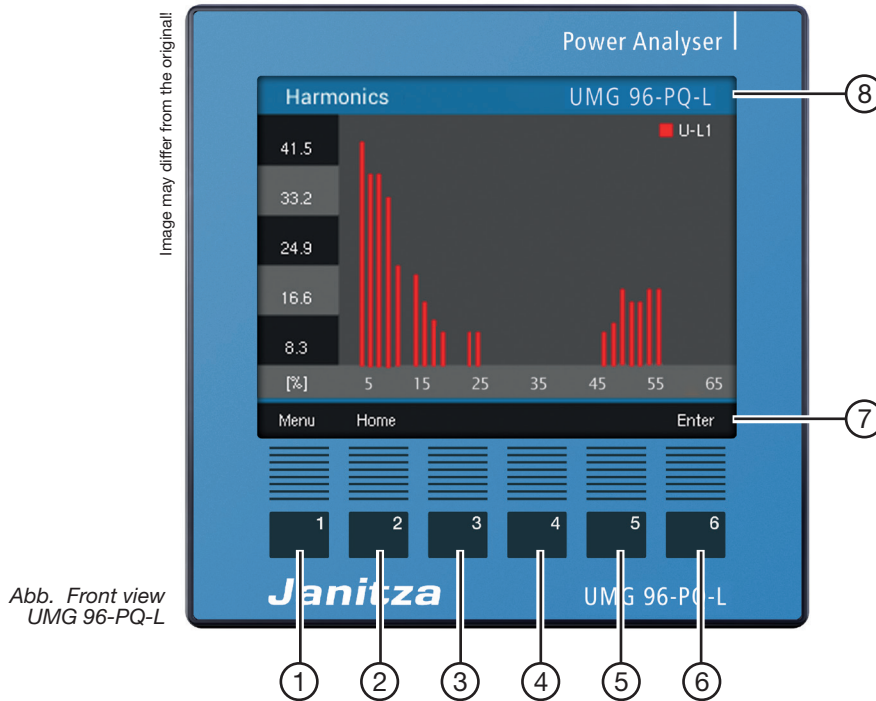


Abb. Front view UMG 96-PQ-L

| Item | Function/Designation |
|------|---|
| 1 | Button 1: · Display Menu · Exit Menu · Cancel action (ESC) |
| 2 | Button 2: · Go to the start screen. (Default setting: Display "Overview") · Select position (to the left "◀"). · Configuration of a measuring display as the start screen (press until message appears). |
| 3 | Button 3: · Select menu item or position (down "▼"). · Change (selection, number -1). |
| 4 | Button 4: · Select menu item or position (up "▲"). · Change (selection, number +1). |
| 5 | Button 5: · Select position (to the right "▶"). |
| 6 | Button 6: · Open selection menu, activate input, confirm selection (Enter). |
| 7 | Description of the function buttons |
| 8 | Device type |

Tab. Front panel - Display and controls

4.2 Rear of the device - Connections

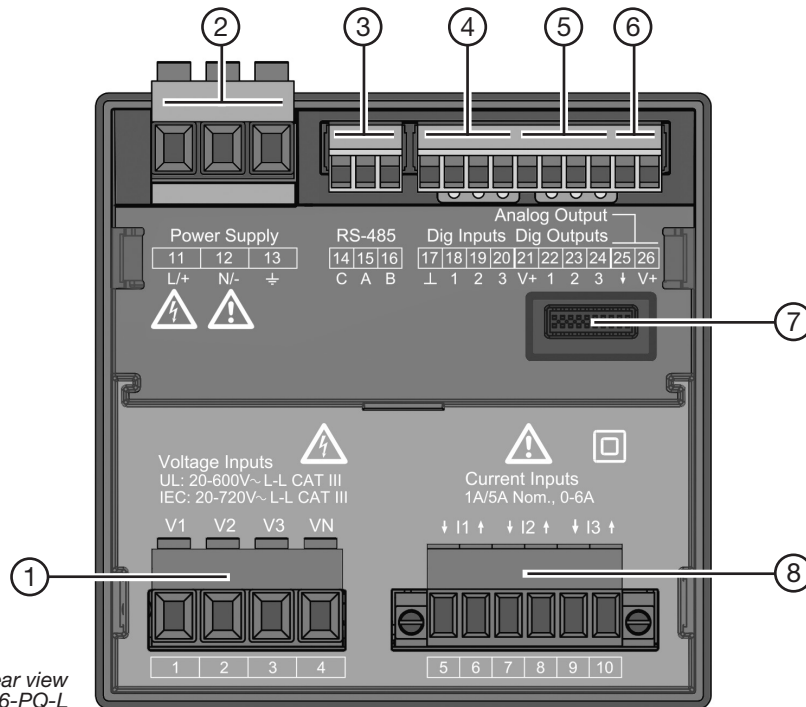

| Item | Function/Designation |
|------|--|
| 1 | Voltage measurement inputs V ₁ to V ₃ and V _N |
| 2 | Supply voltage |
| 3 | RS-485 interface |
| 4 | Digital inputs |
| 5 | Digital outputs |
| 6 | Analog outputs |
| 7 | Module connector socket |
| 8 | Current measurement inputs I ₁ to I ₃ |

Tab. Rear of the device - Connections

4.3 Rating plate



| Item | Designation | Description |
|------|-----------------------------------|--|
| 1 | Operational data | <ul style="list-style-type: none"> · Supply voltage, AC in V · Nominal frequency in Hz · Supply voltage, DC in V · Power consumption in VA · Overvoltage category |
| 2 | Part number | Manufacturer's part number |
| 3 | Symbol for "Danger sign" | General hazard symbol. Be certain to observe the warning notices applied to the device and shown in the documentation in order to avoid possible injury or even death. |
| 4 | Device type | Device designation |
| 5 | Data matrix code | Coded manufacturer data |
| 6 | Manufacturer's logo | Logo of the device manufacturer |
| 7 | CE conformity marking | See section „3.6 Conformity declaration“ on page 18. |
| 8 | Manufacturer-specific data | Manufacturer data |
| 9 | Hardware version | Hardware version of your device |
| 10 | Type/serial number | Number for identification of the device |
| 11 | Designation of origin/web address | Country of origin and manufacturer's web address |

Tab. Rating plate

5. Mounting

5.1 Installation location

⚠ DANGER

Danger of electric shock!
Electric shocks lead to serious injuries, including death.

- Disconnect your system from the power supply before mounting and connecting the device!
- Secure it against being switched on!
- Check to be sure it is de-energized!
- Ground and short circuit!
- Cover or block off adjacent live parts!
- The installation must only be carried out by qualified personnel with electrical training!

The measurement device is suitable for installation in stationary and weather-protected indoor switchboards. Ground conductive switchboards!

ATTENTION

Material damage due to disregard of the installation instructions!
Failure to observe the installation instructions can damage or destroy your device.

- **Observe the information on the mounting orientation in the sections “Mounting” and “Technical Data”.**
- **Provide adequate air circulation in your installation environment and, as needed, cooling when the temperatures are high!**

5.2 Mounting orientation

The mounting orientation is arbitrary. The cut-out dimensions in the switchboard are 92^{+0.8} mm x 92^{+0.8} mm (3.62^{+0.03} in x 3.62^{+0.03} in). Minimum clearances for adequate ventilation:

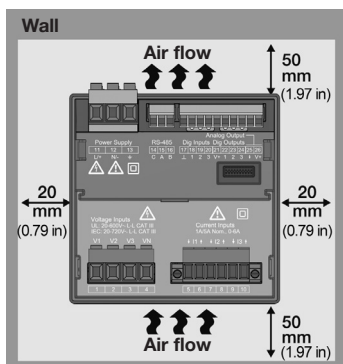


Fig. Mounting orientation of the meter (rear view)

5.3 Securing

Secure the device inside the switchboard (mounting plate) with the fastening clips on the side. To do so, proceed as follows:

- Before inserting the device, remove the fastening clips (e.g. with a screwdriver) by levering them horizontally.

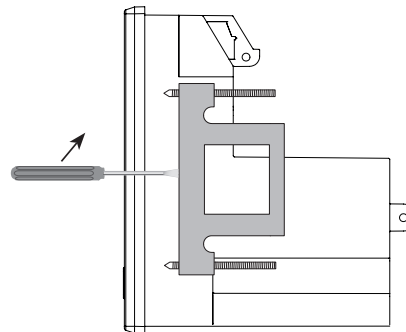


Fig. Side view of the measurement device with fastening clip.

- Guide the device through the switchboard (mounting plate) from the front.
- Attach the clips to the side of the device by pushing them in and snapping them into place.
- Screw in the clamping screws until they touch the mounting plate.
- Then tighten the clamping screws with two further turns each. **Too tightly tightened clamping screws can destroy the fastening clips!**

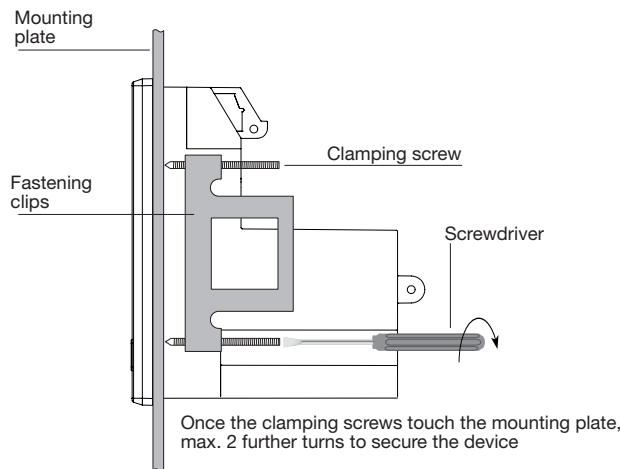


Fig. Fastening process

6. Grid systems

Grid systems and maximum rated voltages according to DIN EN 61010-1/A1:

| UMG 96-PQ-L (all variants) | | | |
|--|--|--|-----------------------|
| Three-phase 4-conductor systems with grounded neutral conductor | | Three-phase 3-conductor systems with grounded phase | |
| IEC | $U_{L-N} / U_{L-L}: 417 V_{LN} / 720 V_{LL}$ | IEC | $U_{L-L}: 600 V_{LL}$ |
| UL | $U_{L-N} / U_{L-L}: 347 V_{LN} / 600 V_{LL}$ | UL | $U_{L-L}: 600 V_{LL}$ |

| UMG 96-PQ-L (IT variant) | | | |
|--|--|---|-----------------------|
| Three-phase 4-conductor systems with ungrounded neutral conductor (IT networks) | | Three-phase 3-conductor systems ungrounded | |
| IEC | $U_{L-N} / U_{L-L}: 347 V_{LN} / 600 V_{LL}$ | IEC | $U_{L-L}: 600 V_{LL}$ |
| UL | $U_{L-N} / U_{L-L}: 347 V_{LN} / 600 V_{LL}$ | UL | $U_{L-L}: 600 V_{LL}$ |

⚠ WARNING

Risk of injury due to electrical voltage!

Rated surge voltages above the permitted over-voltage category can damage the insulation in the device. This impairs the safety of the device. This can result in serious injury or death.

- Only use the device in environments which comply with the permissible rated surge voltage.
- Observe the limit values specified in the user manual and on the rating plate.

The measurement device can be used in:

- TN and TT networks.
- IT networks (IT variant - part number: 52360x5).
- Residential and industrial areas.

ⓘ INFORMATION

The variant of the **UMG 96-PQ-L** can be identified based on the part number. The part number can be found on the rating plate of your measurement device:

- UMG 96-PQ-L: 52360x1/52360x2.
- UMG 96-PQ-L (IT variant): 52360x5.

7. Installation

Use the measurement device for voltage measurement in TN and TT grid systems or the IT variant measurement device with the approved overvoltage category of 600V CATIII (rated surge voltage 6 kV).

⚠ WARNING

Disregard of the connection conditions of the transformers to Janitza measurement devices or their components can lead to injuries or even death or to material damage!

- Do not use the outputs of the Janitza measurement devices or their components for switching protective devices or protective relays! Do not use "Transformers for protection purposes"!
- For Janitza measurement devices and their components use only "Transformers for measurement purposes" which are suitable for the energy monitoring of your system.
- Observe the information, regulations and limit values in the usage information on "Transformers for measuring purposes", including during testing and commissioning of the Janitza measurement device, the Janitza component and your system.

⚠ CAUTION

Malfunction and damage of the device or risk of injury due to improper connection.

Improperly connected devices can deliver incorrect measured values, damage the device or pose a risk of injury to persons.

Observe the following:

- Measured voltages and currents must originate from the same network.
- Do not use the measurement device for measuring direct current!
- Ground current-conducting switchboards!

7.1 Nominal voltages

7.1.1 Three-phase four-conductor network with grounded neutral conductor

Networks and nominal voltages suitable for your measurement device:

| U_{L-N} / U_{L-L} | |
|---------------------|---|
| 66 V / 115 V | |
| 120 V / 208 V | |
| 127 V / 220 V | |
| 220 V / 380 V | |
| 230 V / 400 V | |
| 240 V / 415 V | |
| 260 V / 440 V | |
| 277 V / 480 V | |
| 347 V / 600 V | Maximum nominal voltage of the network according to UL |
| 400 V / 690 V | |
| 417 V / 720 V | Maximum nominal voltage of the network according to IEC |

Fig. Nominal network voltages suitable for measurement inputs according to EN 60664-1 (valid in three-phase 4-conductor systems with grounded neutral conductor - see section "Grid systems").

ⓘ INFORMATION

Please take special note of the maximum nominal voltages of the **Measurement device in the IT variant** for three-phase 4-wire systems with a **non-grounded neutral conductor (IT networks)** - **For details see section „6. Grid systems“ on p. 24.**

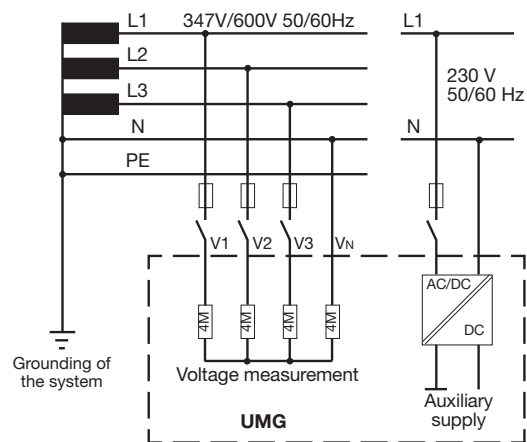


Fig. Example, schematic diagram (UMG 96-PQ-L) - Measurement in three-phase 4-conductor systems.

7.1.2 Three-phase three-conductor system

Networks and nominal voltages suitable for your device:

| U _{L-L} | |
|------------------|--|
| 100 V | |
| 120 V | |
| 200 V | |
| 240 V | |
| 347 V | |
| 380 V | |
| 400 V | |
| 415 V | |
| 440 V | |
| 480 V | |
| 600 V | Maximum nominal voltage of the network according to IEC and UL |

Fig. Nominal network voltages suitable for measurement inputs according to EN 60664-1 (valid in three-phase 3-conductor systems - see section "Grid systems").

7.2 Circuit breaker

Install a suitable circuit breaker for the supply voltage in the building installation in order to disconnect the device from voltage and current.

- Install the circuit breaker near the device and within reach of the user.
- Mark the circuit breaker as the isolation device for this piece of equipment.

7.3 Supply voltage

⚠ WARNING

Risk of injury due to electrical voltage!
Severe bodily injury or death can result from:

- Touching bare or stripped leads that are energized.
- Device inputs that pose a hazard when touched.
- **Disconnect your system from the power supply before mounting and connecting the device!**
- **Secure it against being switched on!**
- **Check to be sure it is de-energized!**
- **Ground and short circuit!**
- **Cover or block off adjacent live parts!**

Operation of the device requires a supply voltage.

The type and level of the supply voltage for your device can be found on the rating plate. Also note:

- Before applying the supply voltage, ensure that the voltage and frequency match the specifications on the rating plate.
- Connect the supply voltage via a UL/IEC approved fuse to the plug-in terminals on the rear of the device.
- After connecting the supply voltage, the display appears.

ⓘ INFORMATION

Note that the device requires an initialization phase (boot time) at startup!

If no display appears, check:

- The connection of your device.
- The supply voltage.

⚠ CAUTION

Material damage due to disregard of the connection instructions!
 Disregard of the connection instructions can damage or destroy your device.

Therefore please abide by the following:

- Observe the voltage and frequency specifications on the rating plate!
- Connect the supply voltage via a fuse according to the technical data!
- Do not tap the supply voltage from the voltage transformers!
- Provide a fuse for the neutral conductor if the neutral conductor terminal of the source is not grounded!

Overcurrent protective device (fuse) for line protection of the supply voltage

Recommendation for the overcurrent protective device of the supply voltage line protection (dependent on the device variants):

- Option 230 V --> 6 - 16 A (Char. B)
- Option 24 V --> 1 - 6 A (Char. B)

i INFORMATION

The fuse is a line protection, **not** a device protection!

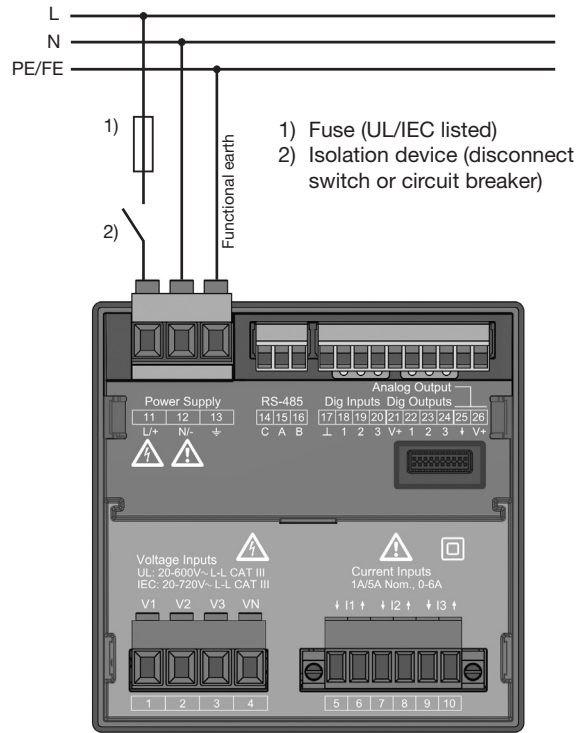


Fig. "Supply voltage" connection example

i INFORMATION

Without a functional earth, the device indicates a residual voltage that is not applied.

7.4 Voltage measurement

There are 3 voltage measurement inputs (V1 to V3) on the rear of the device.

7.4.1 Overvoltage

The voltage measurement inputs are suitable for measurement in networks where overvoltages of category 600 V CAT III (rated surge voltage 6 kV) can occur.

7.4.2 Frequency

The device:

- Requires the mains frequency for the measurement and calculation of measured values.
- Is suitable for measurement in networks in which the fundamental oscillation of the voltage is in the range from 45 Hz to 65 Hz.

The mains frequency is determined from the measured voltage of phase L1. The sampling frequency of the voltage and current measurement inputs results from the mains frequency.

When measuring with strongly distorted voltages, the frequency of the voltage fundamental oscillation can no longer be determined exactly. This means that for strongly distorted measured voltages, the corresponding mains frequency should have a fixed specification. Voltage distortions occur, for example, during measurements on consumers that are operated with phase-angle control. Distortions of the current do not influence the frequency determination.

Further information can be found in the chapter „12.4.2 Nominal values“ on page 47.

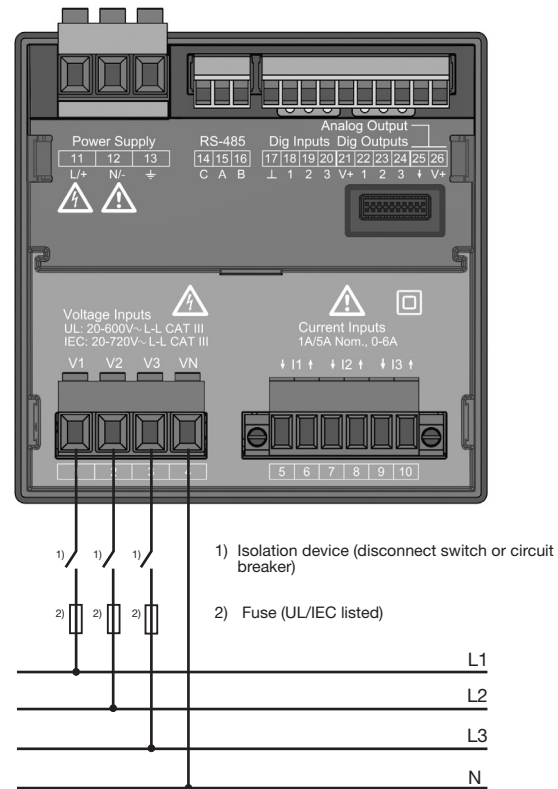


Fig. Connection example for voltage measurement.

WARNING

Risk of injury due to electrical voltage!

Serious bodily injury or death can result from failure to observe the connection conditions for the voltage measurement inputs.

Therefore please abide by the following:

- **Switch off your installation before commencing work! Check to be sure it is de-energized!**
- **Connect voltages above the permitted nominal network voltages via voltage transformers.**
- **The voltage measurement inputs on the device are dangerous to touch!**
- **Install a circuit breaker (see section chap. 7.2 on page 26).**
- Use a UL/IEC approved overcurrent protective device with a nominal value rated for the short circuit current at the connection point.

i INFORMATION

- The device only determines measured values if a voltage L1-N of greater than 20 V_{eff} (4-conductor measurement) or a voltage L1-L2 of greater than 34 V_{eff} (3-conductor measurement) is applied to voltage measurement input V1.
- Use a line protection (1-10 A) with IEC/UL approval as an overcurrent protective device for voltage measurement.

7.4.3 Connection variants for voltage measurement

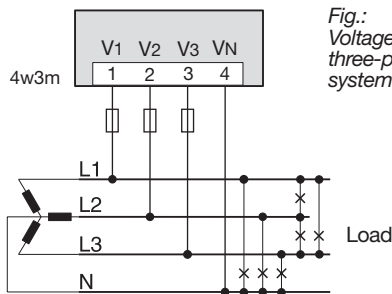


Fig.: Voltage measurement in three-phase 4-conductor system

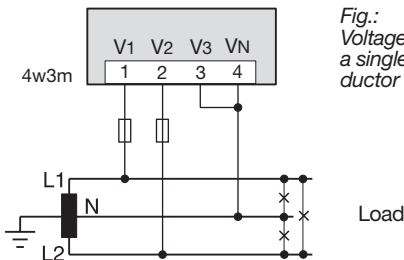


Fig.: Voltage measurement in a single-phase 3-conductor system.

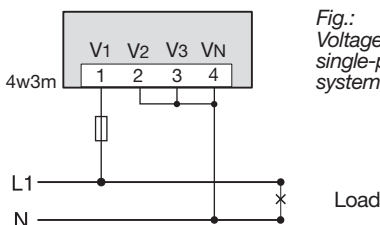


Fig.: Voltage measurement in a single-phase 2-conductor system.

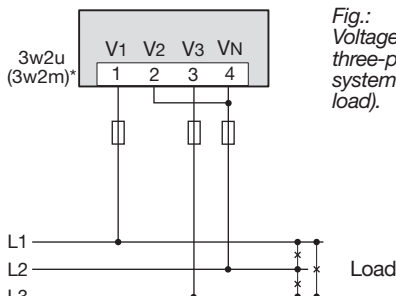


Fig.: Voltage measurement in a three-phase 3-conductor system (asymmetrical load).

* Setting 3w2u or 3w2m depending on the connection of the current measurement.

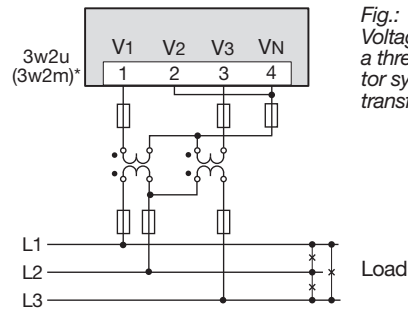


Fig.: Voltage measurement in a three-phase 3-conductor system with voltage transformer.

* Setting 3w2u or 3w2m depending on the connection of the current measurement.

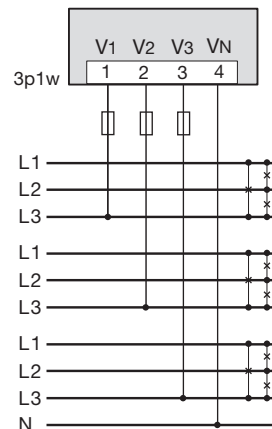


Fig.: Voltage measurement in up to three symmetrically loaded three-phase 3-conductor systems

Prerequisite: symmetrical load in each of the three systems!

One of the 3 neutral conductors must be connected.

Use the measurement device only in TN and TT networks. Only the IT variant may also be used in IT networks.

! CAUTION

Malfunction due to improper connection. Improper connection of the device can result in incorrect measured values.

Therefore please abide by the following:

- Measured voltages and currents must originate from the same network.
- The device is not suitable for measuring DC voltage.

In a three-wire system, voltage L2 must be applied to V_N so that the measurement device has a reference point. The bridge from V_N to V2 only serves to make the circuit diagram easier to understand.

Recommendation: Short-circuit unused voltage measurement inputs to the V_N input.

Connection variant “Voltage measurement with functional earthing (FE)”

For a measurement in a grounded 3-phase system without N, connect the PE as a functional earth (FE) to the voltage measurement input V_N of the device. Make sure to use the color "pink" (DIN EN 60445/VDE 0197) for the functional earth conductor and to observe the limits for the voltage measurement.

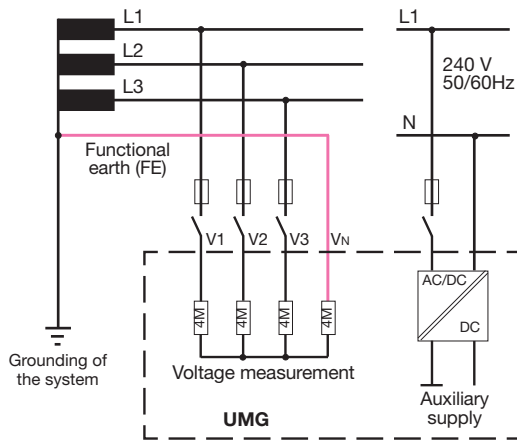



Fig. Connection variant - Voltage measurement in a grounded 3-phase system.

Do not use the protective earthing present in your system as functional a earthing!

7.4.4 Voltage transformers

If the nominal network voltage exceeds the measuring range, use voltage transformers and configure the device's transformer ratio accordingly.

The following applies when using voltage transformers:

| |
|---|
|  WARNING |
| <p>Risk of injury due to electrical voltage! Do not short-circuit secondary connections of voltage transformers! This can result in serious injury or death.</p> <ul style="list-style-type: none"> · Connect voltage transformers according to their documentation! · Check your installation! |

The device only allows the setting of **one voltage transformer ratio for all phases!**

i INFORMATION

The voltage transformer ratios can be conveniently configured via:

- The device menu.
- The GridVis® software.

For information on voltage transformer configuration, see the section „12.4.1 Current and voltage transformers“ on page 46.
 For information on overrange, see the section „13.7 Overage“ on page 62.

7.5 Current measurement

The device:

- Is designed for the connection of current transformers with secondary currents of $\dots/1$ A and $\dots/5$ A.
- Is only approved for current measurement via current transformers.
- Does not measure DC currents.

The factory-set current transformer ratio is 5/5 A and must be adapted to the current transformers used as needed.

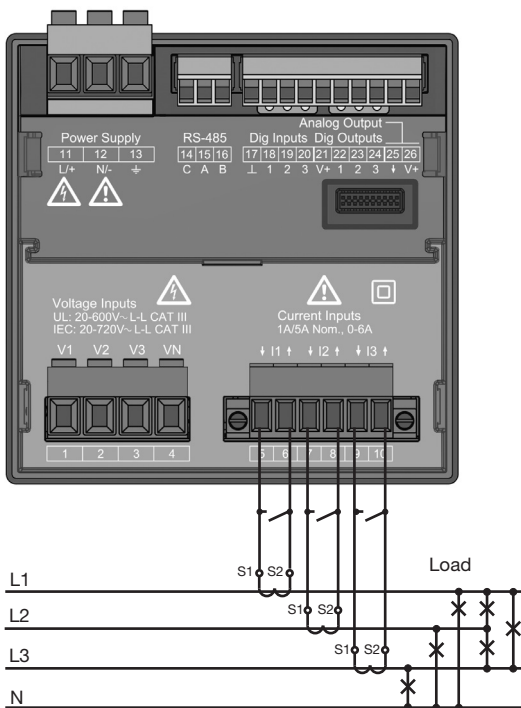


Fig. Connection example, "Current measurement via current transformer".

⚠ WARNING

Risk of injury due to electrical voltage!

Severe bodily injury or death can result from:

- Touching bare or stripped leads that are energized.
- Device inputs that pose a hazard when touched.

Disconnect your system from the power supply before starting work! Check to be sure there is no voltage! Ground the system! Use the ground connection points with the ground symbol to do so!

⚠ WARNING

Risk of injury due to electrical voltage at current transformers!

Current transformers which are operated exposed on the secondary side can carry hazardous live high voltage peaks which can lead to serious bodily injury or death.

Therefore please abide by the following:

- Switch off your installation before commencing work! Check to be sure it is de-energized!
- Avoid exposed operation of the current transformers.
- Short circuit unloaded current transformers.
- Before interrupting the supply of power, it is essential to short the secondary connections of the current transformers.
- If there is a test switch which automatically short-circuits the secondary current transformer lines, it is sufficient to set it to the "Test" position, provided that the short-circuiters have been checked beforehand.
- Only use current transformers that have basic insulation in accordance with IEC 61010-1.
- Make sure to mount the screw terminals for the current transformer connection, which are included in the scope of delivery, on the meter and fasten them with the enclosed screws!
- Even current transformers rated as safe for exposed operation are dangerous to touch if they are operated exposed.
- Observe the documentation for the current transformers!

⚠ WARNING

Risk of injury or damage to the meter due to high measurement currents at the connections of the current transformers!

High measurement currents can cause temperatures of up to 80 °C (176 °F) on the connections of the current transformers.

- **Use wiring that is designed for an operating temperature of at least 80 °C (176 °F)!**
- **The current transformers can be hot even after the power supply has been switched off. Allow the connections of the current transformers and the connecting cables to cool down before touching them!**

7.5.1 Connection variants for current measurement

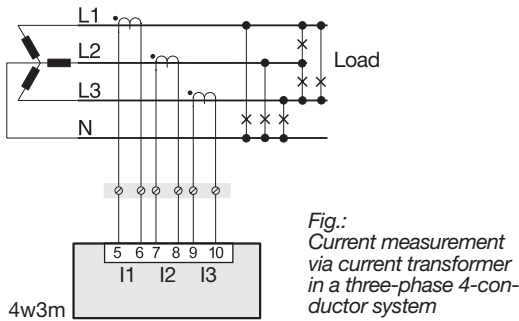


Fig.: Current measurement via current transformer in a three-phase 4-conductor system

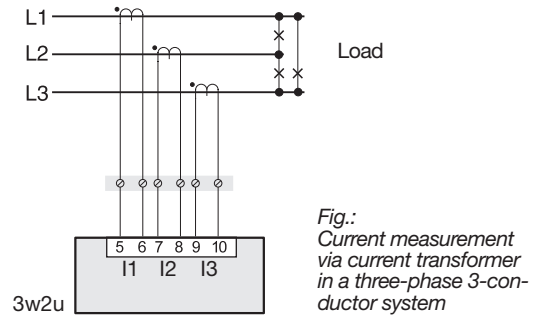


Fig.: Current measurement via current transformer in a three-phase 3-conductor system


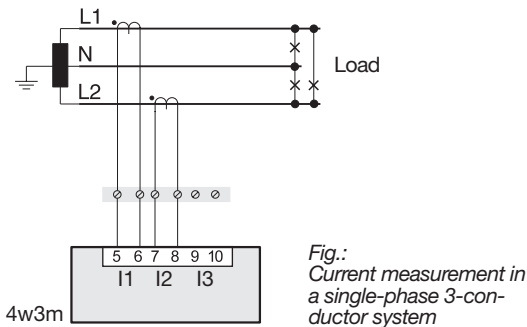


Fig.: Current measurement in a single-phase 3-conductor system

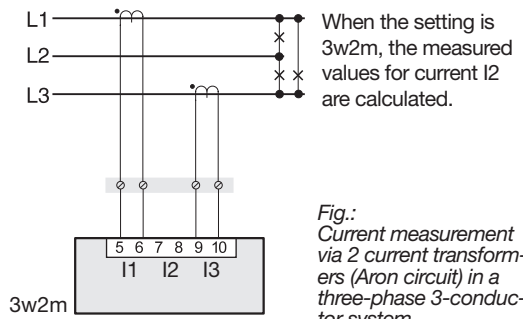

When the setting is 3w2m, the measured values for current I2 are calculated.
Fig.: Current measurement via 2 current transformers (Aron circuit) in a three-phase 3-conductor system


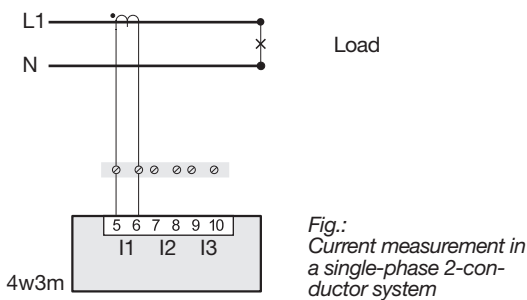


Fig.: Current measurement in a single-phase 2-conductor system

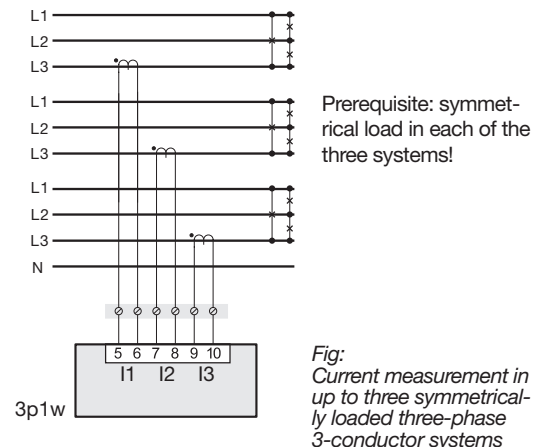

Prerequisite: symmetrical load in each of the three systems!
Fig.: Current measurement in up to three symmetricaly loaded three-phase 3-conductor systems

i INFORMATION

You must set the selected connection variant (e.g. 4w3m) in the device so that power and energy are calculated correctly (see section „12.4.3 Connection variant“ on page 49).

i INFORMATION

The device only allows the setting of **one current transformer ratio for all phases!**

You can configure **current transformer ratios** conveniently via

- The device menu.
- The GridVis® software.

For information on current transformer configuration, see the chapter „12.4.1 Current and voltage transformers“ on page 46.

i INFORMATION

If the measuring range is exceeded, the device display shows the warning **Range exceeded** with specification of the current or voltage circuit.

For information on overrange, see the section „13.7 Overrange“ on page 62.

7.5.2 Current direction

You can correct the current direction for each phase individually via the serial interfaces provided. This means that in the case of incorrect connection, no subsequent reconnection of the current transformers is necessary.

7.5.3 Summation current measurement

For a summation current measurement via two current transformers, first set their total ratio on the device. The setting of the current transformer ratios is described in section „12.4.1 Current and voltage transformers“ on page 46.

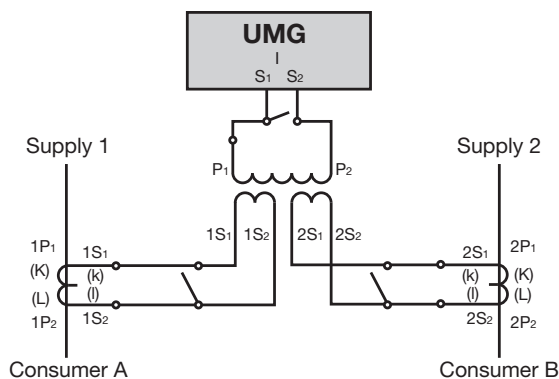


Fig. Example for current measurement via a summation current transformer

Example:

The current is measured via two current transformers. Both current transformers have a ratio of 1000/5 A. The summation measurement is carried out with a summation current transformer of 5+5/5 A.

The device must then be adjusted as follows:

Primary current: 1000 A + 1000 A = 2000 A
Secondary current: 5 A

7.5.4 Ammeter

If you want to measure the current not only with the UMG, but also with an ammeter, connect the ammeter to the UMG in series.

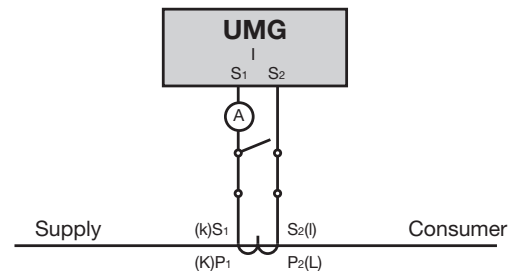



Fig. Circuit diagram with additional ammeter connected in series

8. Connection and PC connections


8.1 Connection variants

When connecting the device to a PC, there are several possibilities:

1. Connection via an interface converter of the type RS-232/RS-485 or USB/RS-485:

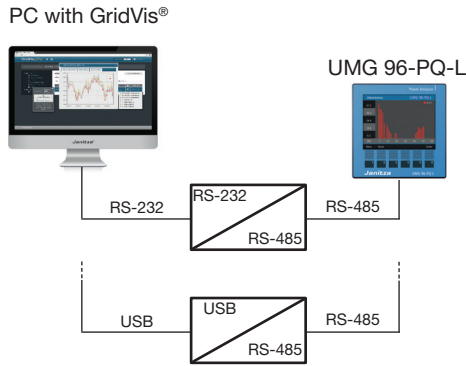

2. Connection of the UMG 96-PQ-L (basic device) via a UMG with gateway functionality:

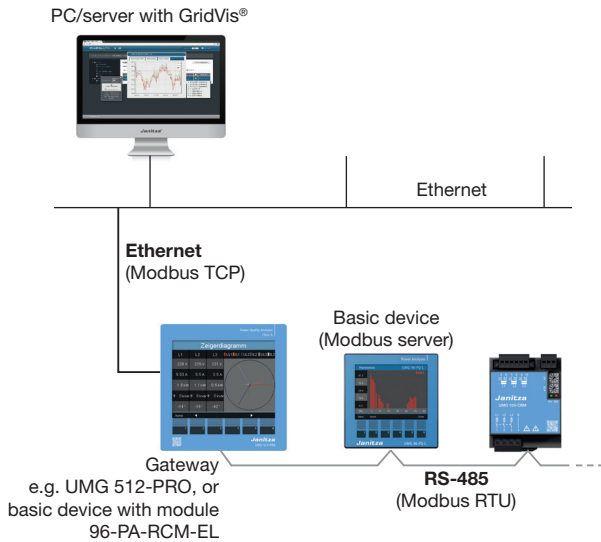

The gateway acts as a Modbus TCP server and as a Modbus RTU client.

i INFORMATION

- As an option to these connection options, an expansion module for the measurement device provides an Ethernet interface for communication.
- Information on the Expansion module with Ethernet interface can be found in the usage information on the module 96-PA-RCM-EL.

i INFORMATION

New terms of the Modbus organization!

- The **Modbus organization (modbus.org)** uses the terms "**client**" and "**server**" as a substitute for "master" and "slave".
- The client device initiates the communication and sends requests via Modbus.
- The server devices process the requests and return appropriate responses.

! CAUTION

Material damage due to incorrect network settings.

Incorrect network settings can cause faults in the IT network.

Ask your network administrator about the correct network settings for your device.

8.2 RS-485 interface

The device communicates with the Modbus RTU protocol via an RS-485 interface (3-pole plug contact).

Recommended cable type:

- **Unitronic Li2YCY(TP) 2x2x0.22 (Lapp cable)**

Connection capacity of the terminal:

- 0.2 - 1.5 mm²
(see section "Technical Data")

i INFORMATION

- CAT cables are not suitable for bus wiring! Use the recommended cable types (see above).
- A segment of an RS-485 bus structure contains up to 32 nodes/devices. Connect more than 32 nodes/devices with repeaters.
- The device does not contain an integrated termination resistor (see chapter „8.4 Termination resistors“ on p. 37).
- In an RS-485 bus structure, please observe the address settings for your server and client devices in the respective documentation.

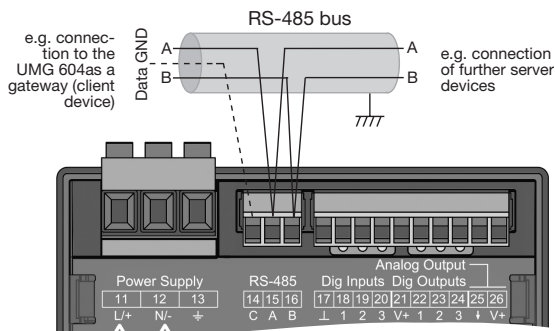


Fig. RS-485 interface, 3-pole plug contact

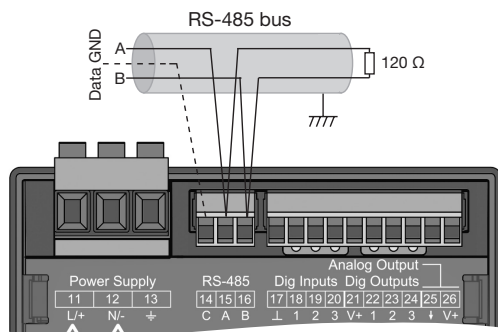


Fig. RS-485 interface, 3-pole plug contact with termination resistor (part no. 5200008)

8.3 Shielding

Provide a twisted and shielded cable for connections via the interfaces and observe the following points for shielding:

- Ground the shields of all cables leading into the cabinet at the cabinet entrance.
- Connect the shield to a noiseless ground and ensure a large surface area with good conductivity.
- Do **NOT** connect the shield to terminal C (GND)
- Mechanically restrain the cables before the grounding clamp to prevent damage from cable movement.
- Use suitable cable glands, for example PG glands, to lead the cable into the switchboard cabinet.

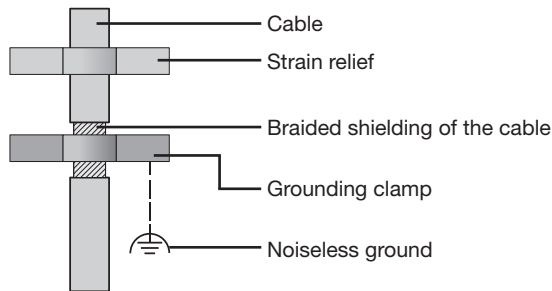


Fig. Shielding design for cabinet entry.

WARNING

Transmission error and risk of injury due to electrical fault!

Atmospheric discharge can cause transmission errors and hazardous voltages on the device.

Therefore please abide by the following:


- **Connect the shielding to functional earth (PE) at least once.**
- **In the case of larger sources of interference, frequency converters in the switchboard cabinet, connect the shielding to functional earth (PE) as close as possible to the device.**
- **Observe the maximum cable length of 1200 m (3936 ft.) at a baud rate of 38.4 k.**
- **Use shielded cables.**
- **Route interface cables spatially separated or additionally insulated from mains voltage-carrying system components.**

8.4 Termination resistors

At the beginning and end of a segment, the cable is to be terminated with resistors (120 Ω, 1/4 W).

i INFORMATION

The device does not contain an integrated termination resistor!

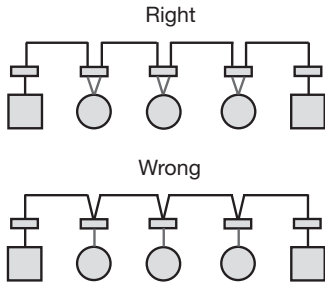


| | |
|--|---|
| | Terminal strip in the switchboard cabinet. |
| | Device with RS-485 interface. (Without termination resistor) |
| | Device with RS-485 interface. (With termination resistor on the device) |

8.5 Bus structure

In a bus structure:

- Connect all devices in line.
- Each device has its own address.
- One segment contains up to 32 nodes/devices.
- At the beginning and end of a segment, the cable must be terminated with resistors (bus termination, 120 ohms, 1/4 W)!
- With more than 32 participants, use repeaters (line amplifiers) to connect segments!
- Devices with bus termination switched on must be powered.
- Position the client device (formerly master device) at the beginning or end of the bus structure. If the client device is replaced with the bus termination switched on, the bus is out of service.
- The bus can become unstable if a server device with bus termination switched on is replaced or is de-energized.
- Devices that are not involved in the bus termination can be replaced without the bus becoming unstable.

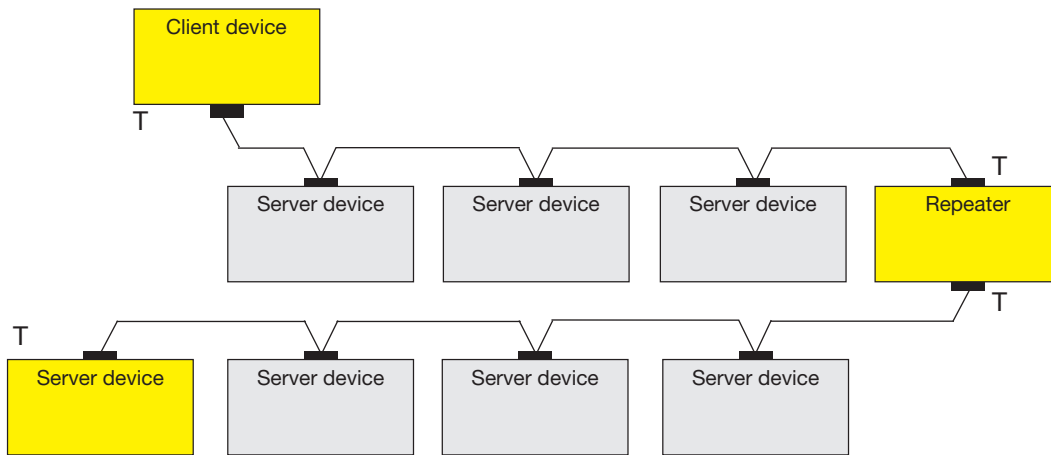

Power supply necessary

T Bus terminator on

Client device - e.g. UMG 604-PRO

Server device - UMG 96-PA/PQ series

Fig. Representation of a bus structure *

* In a **Modbus system**, the Modbus organization (modbus.org) uses the terms "client" and "server" to describe Modbus communication. This is characterized by communication between client devices - formerly master devices - that initiate communication and make requests, and server devices - formerly slave devices - that process the requests and return an appropriate response (or error message).

9. Digital inputs and outputs

The device has:

- 3 digital inputs and
- 3 digital outputs

9.1 Digital inputs

The device has 3 digital inputs for the connection of, for example, one signal generator each. If a signal is present, the corresponding LED lights up green.

The device recognizes an input signal at the digital input if:

- A voltage of at least 18 V and at most 28 V DC (typically at 4 mA) is present.
- A current of at least 0.5 mA and at most 6 mA flows.

Observe the polarity of the supply voltage!

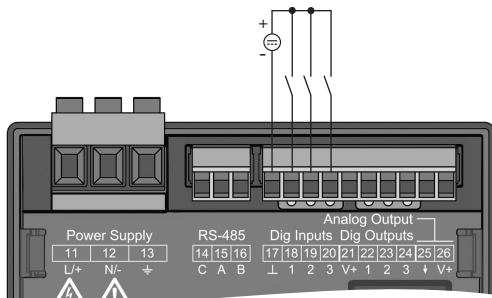


Fig. Connection of the digital inputs

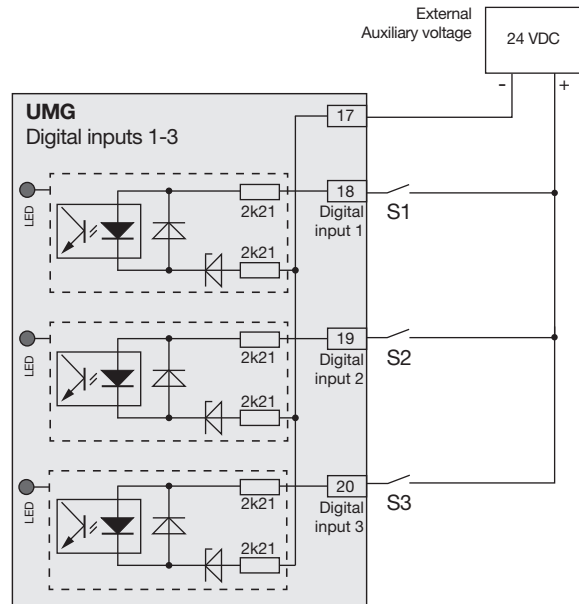


Fig. Example for the connection of the external switching contacts S1-S3 to the digital inputs 1, 2 and 3.

9.1.1 S0 pulse input

Each digital input is designed for the connection of an S0 pulse generator according to DIN EN62053-31.

You need an external auxiliary voltage with an output voltage in the range of 18 .. 28 VDC and a resistance of 1.5 kOhms.

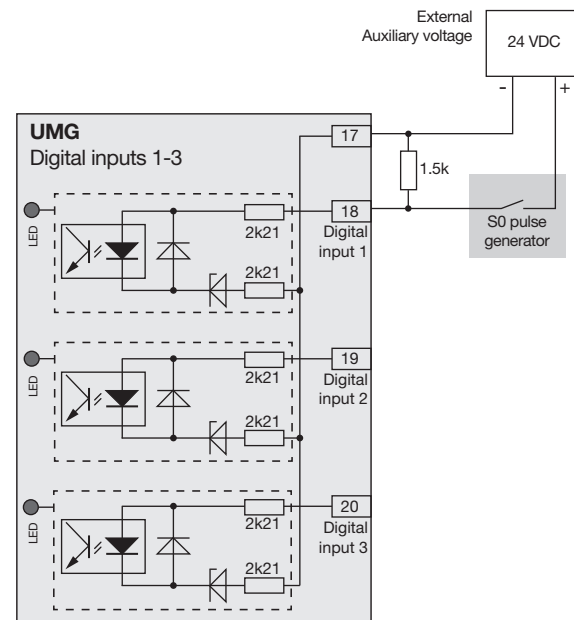


Fig. Example for the connection of an S0 pulse generator to digital input 1.

CAUTION

Transmission error and material damage due to electrical malfunction.

With a cable length of more than 30 m (32.81 yd), there is an increased probability of transmission errors and damage to the device due to atmospheric discharge!

Use shielded cables for the connections to the digital inputs and outputs!

9.2 Digital outputs

The measurement device has 3 digital outputs, which:

- Are electrically isolated from the evaluation electronics via optocouplers.
- Have a common reference.
- Are **not** short-circuit proof.
- Require an external auxiliary voltage.
- Can be used as impulse outputs.
- Are able to switch direct and alternating current loads.
- Can be controlled via Modbus.
- Output the results of comparators.

⚠ CAUTION

Material damage due to connection errors.
The digital outputs are not short-circuit proof! Connection errors can therefore lead to damage to the connections.
Make sure that the wiring is correct when connecting the outputs.

i INFORMATION

- Functions for the digital outputs can be configured easily and clearly in the GridVis® software (see www.janitza.com).
- Use of the GridVis® software requires a connection between the device and the PC via an interface.

⚠ CAUTION

Measurement error when used as a pulse output.
When the digital outputs are used as pulse outputs, measurement errors can occur due to residual ripple.
For the supply voltage (DC) of the digital inputs and outputs, use a power supply whose residual ripple is less than 5% of the supply voltage.

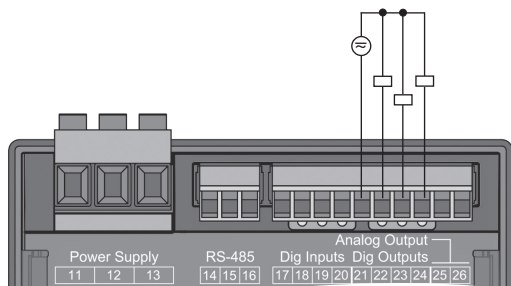


Fig. Connection of digital/pulse outputs

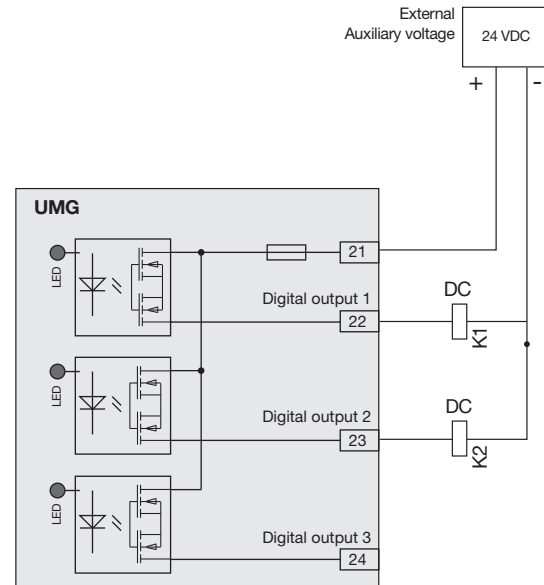


Fig. Connection example of two relays to the digital outputs

9.3 LED status bar

The LED status bar on the back of the measurement device shows the different states of the inputs and outputs.

Digital inputs

The LED assigned to the respective input lights up green if a signal of at least 4 mA is flowing at this interface.

Digital outputs

The respective LED assigned to the output lights up green when the output is set as active - independent of any further connection to this interface.

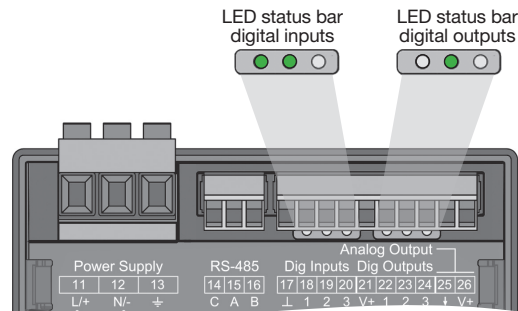


Fig. LED status bars of the digital inputs and outputs

10. Analog outputs

The measurement device has 1 passive analog output which can deliver a current of 0 - 20 mA. An external power supply unit (24 V DC) is required for operation.

The connectable load must not exceed a resistance of 300 ohms.

If the analog output is loaded with a higher resistance, the output range(20 mA) is restricted.

The measured value assigned to the analog output, the start and end values, and the output range of **4 - 20 mA** or **0 - 20 mA** must be set using the Grid-Vis® software (for more information, refer to section „13.15 Configuration of the analog output“ on page 74).


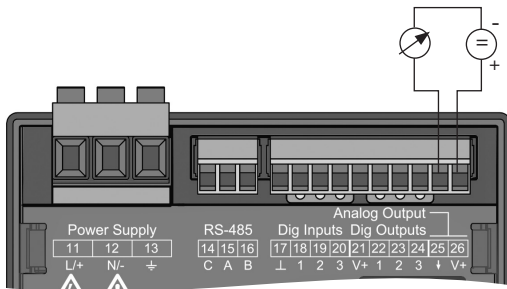


Fig. Analog output connection

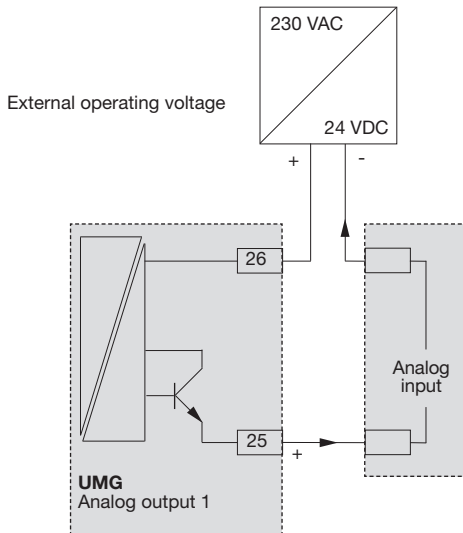

11. Operation

The device is operated via 6 function buttons which have different functions:

- Selecting measuring displays.
- Navigation within the menus.
- Editing device settings.

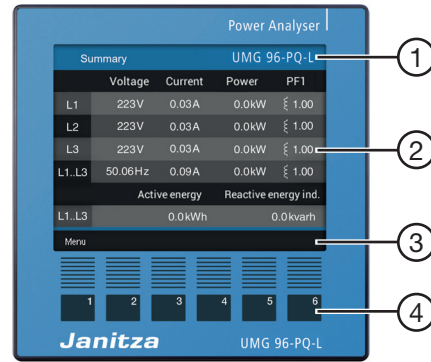


Fig. Measuring display "Overview"

| Item | Function/Designation |
|------|----------------------------------|
| 1 | Title displayed |
| 2 | Measured values |
| 3 | Labeling of the function buttons |
| 4 | Function buttons |

Tab.: Operating the device

11.1 Button function

| | Functions |
|---|--|
| 1 | <ul style="list-style-type: none"> · Display Menu · Exit Menu · Cancel action (Esc) |
| 2 | <ul style="list-style-type: none"> · Go to the start screen. · Select position (to the left "◀"). · Configuration of a measuring display as the start screen (press until message appears). |
| 3 | <ul style="list-style-type: none"> · Select menu item or position (down "▼") · Change (selection, number -1). |
| 4 | <ul style="list-style-type: none"> · Select menu item or position (up "▲") · Change (selection, number +1) |
| 5 | <ul style="list-style-type: none"> · Select position (to the right "▶") |
| 6 | <ul style="list-style-type: none"> · Confirm selection (Enter) |

11.2 Measuring display "Overview"

Start screen:

After a power recovery, the **measurement device** starts with the *Overview* measuring display.

The *Overview* measuring display contains the device name and an overview of important measured values. In the delivery condition, the device name consists of the type and the serial number of the measurement device.

Button 2 (*Home*) takes you back to the **Overview** start screen from any screen (default setting).

| Summary | | UMG 96-PO-L | | | |
|---------------|---------|----------------------|----------|--------|--|
| | Voltage | Current | Power | PF1 | |
| L1 | 223V | 0.03A | 0.0kW | ~ 1.00 | |
| L2 | 223V | 0.03A | 0.0kW | ~ 1.00 | |
| L3 | 223V | 0.03A | 0.0kW | ~ 1.00 | |
| L1..L3 | 50.06Hz | 0.09A | 0.0kW | ~ 1.00 | |
| Active energy | | Reactive energy ind. | | | |
| L1..L3 | 0.0kWh | | 0.0kvarh | | |
| Menu | | | | | |

Fig. Measuring display "Overview" - measurement in a three-phase four-wire network (default setting).

11.3 Menu

Button 1 opens the menu of your measurement device:

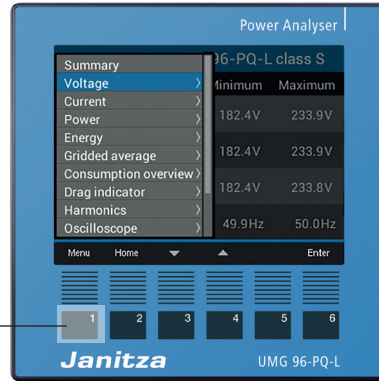


Fig. Open menu

Button 1: Menu

i INFORMATION

- The representation above of the measuring display "Overview" depends on the grid system configuration of your measurement device. In this regard, please take note of section „12.4.3 Connection variant“ on page 49.
- To configure a new start screen, please refer to section „11.5 Configuring a new start screen“ on page 43.

11.4 Overview of menu displays

Menu

- **Overview**
- **Voltage**
 - Voltage L-N ¹⁾
 - Voltage L-L
 - THD U
 - History
 - Phasor diagram
- **Current**
 - Current
 - THD I
 - TDD I
 - History
- **Power**
 - Total power
 - Power factor
 - Active power ¹⁾
 - Reactive power ¹⁾
 - Apparent power ¹⁾
 - Active power history
 - Reactive power history
 - Apparent power history
- **Energy**
 - Active energy
 - Reactive energy
 - Apparent energy
 - Tariff
- **Gridded average values**
 - Voltage L-N ¹⁾
 - Voltage L-L
 - Current
 - Total power
 - Active/reactive/apparent power ¹⁾
- **Consumption overview**
 - Daily
 - Active energy
 - Reactive energy
 - Apparent energy
 - Monthly
 - Active energy
 - Reactive energy
 - Apparent energy

Drag indicator

- Current
 - Current L1
 - Current L2
 - Current L3
- Active power
 - Active power L1
 - Active power L2
 - Active power L3
 - Active power L1 .. L3
- Apparent power
 - Apparent power L1
 - Apparent power L2
 - Apparent power L3
 - Apparent power L1 .. L3

Harmonics

- Voltage
 - L1 / L2 / L3
- Current
 - L1 / L2 / L3

Oscilloscope

- Voltage
 - L1 / L2 / L3
 - L1 .. L3
- Current
 - L1 / L2 / L3
 - L1 .. L3

Events

- All events
- Voltage
 - Overvoltage
 - Undervoltage
 - Voltage interruption
- Current
 - Overcurrent
- External events
 - Digital inputs
 - Modbus
- Comparator
 - Group 1
 - Group 2

1) Only available in the four-wire network (4w3m) and with 3p1w configuration

System info

- Com. RS-485
- Peripherals
- Comparator groups
 - Comparator group 1
 - ...
 - Comparator group 5
- Basic device info

Configuration

- Language
 - German
 - English
- Communication/Fieldbus
 - Device address
 - Baud rate
 - Data frame
- Measurement
 - Transformer
 - Current/voltage transformer
 - Nominal values
 - Frequency / voltage / current
 - Connection variant
- Display
 - Brightness
 - Standby after
 - Brightness (standby)
 - Auto Home return
 - Home delay
 - Colors
- System
 - Version ²⁾
 - Serial number ²⁾
 - Time
 - Password
 - Reset
- Modbus editor
 - Address
 - Value
 - Minimum ²⁾
 - Maximum ²⁾
 - Type ²⁾
 - Access ²⁾

Select the menu item:

- Use *buttons* 3 (▼) and 4 (▲) to select the menu item.
- Confirm this with *button* 6 (Enter).
- Use *button* 1 (Esc) to leave the selection.
- Use *button* 2 (Home) to go to the “Overview” start screen (default setting).

***i* INFORMATION**

- **The meter has the factory password 00000 (no password).**
- The measurement device locks the device configuration for 10 min. if the password is entered incorrectly 5 times.
- Write down your password and keep it safe!
- Without the password you cannot configure your device! Notify the device manufacturer’s Support if the password is lost!

11.5 Configuring a new start screen

In the default setting of the measurement device, the “Overview” display is configured as the start screen. Any **measuring display** of the device can be configured as the new start screen by pressing and holding *button* 2 (Home).

- To do so, go to the corresponding **measuring display** and press *button* 2 (Home) until the message “Home display reset” appears.

***i* INFORMATION**

The entries in the menu display overview depend on the network system configuration of your measurement device (three-phase 4-wire system or three-phase 3-wire system). In this regard, please take note of section „12.4.3 Connection variant“ on p. 49.

2) Not configurable

12. Configuration

12.1 The Configuration window

The *Configuration* menu contains all configurable device parameters.

i INFORMATION

If the device is password protected, the password is required for configuration.

The device requires a supply voltage for configuration (see chap. 13.1 on page 59).

Opening the Configuration menu

- Press button 1 (*Menu*) to open the menu.
- Use buttons 3 (▼) and 4 (▲) to select the menu item *Configuration* and confirm with button 6 (*Enter*).

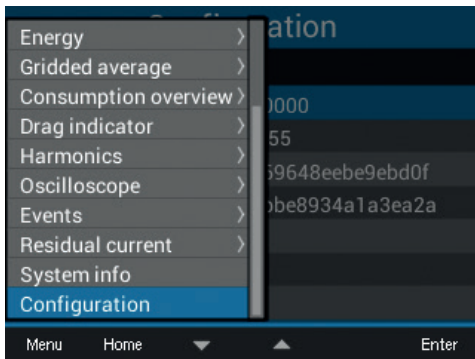


Fig. "Configuration" menu item

- If no password is entered, the *Configuration* window will open immediately.

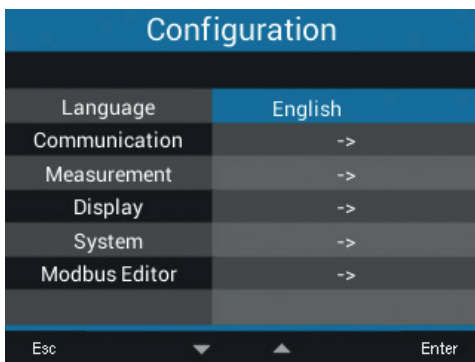


Fig. Window Configuration -> Language entry

- Make the necessary settings, especially for the grid system and the transformer ratio (see section „12.4 Measurement“ on page 46).

Enter password (if required)

- Press button 6 (*Enter*). The digits 00000 are displayed in yellow (input mode).

- Enter the first digit of the password using buttons 3 (▼) and 4 (▲).
- Switch between the digits of the password using buttons 2 (◀) and 5 (▶).
- Confirm the password with button 6 (*Enter*).

12.2 Language

Use the *Language* item of the *Configuration* window to configure the language for the device's user interface:

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Language* and confirm with button 6 (*Enter*).
- The item *Language* is shown in yellow letters.



Fig. The Language Configuration window

- Use buttons 3 (▼) and 4 (▲) to select the language (*German* or *English*) and confirm with button 6 (*Enter*).
- The user interface entries change to the selected language.
- Use button 1 (*Esc*) to return to the menu.
- Then press button 2 *Home* to go to the start screen.

12.3 Communication

Use the *Communication* item of the *Configuration* window to configure parameters for the RS-485 interface of your device.

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Communication* and confirm with button 6 (Enter).
- The *Communication* window appears with the parameters:
 - Device address.
 - Baud rate.
 - Data frame.

| Communication | |
|----------------|-----------|
| Field bus | |
| Device address | 1 |
| Baud rate | 115200 |
| Framing | 1 stopbit |
| | |
| | |
| | |
| Esc | Enter |

Fig. Communication window for fieldbus parameters (RS-485 interface)

- Use the *Communication* window to configure the parameters for the fieldbus (RS-485 interface), such as Device address, Baud rate and Data frame by selecting the respective item and confirming with button 6 (Enter).
- Depending on the parameter selected, the corresponding item is shown in "yellow".
- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 twice (Esc) and then press button 2 (Home).

Settings:

• Device address:

Select a device address for the device with which the device can be addressed in the bus structure. Each device address exists only once in a bus structure!

Setting range: 1 - 250

Default value: 1

• Baud rate:

Select a uniform baud rate for all devices in the bus structure!

Setting range: 9600, 19200, 38400, 57600, 115200 kbps.

Default setting: 115200

i INFORMATION

Automatic detection of the baud rate is no longer available as of firmware 3.51.

• Data frame:

Select a uniform data frame for all devices in the bus structure.

Setting range:

- odd (parity odd , with 1 stop bit)
- even (parity even, with 1 stop bit)
- 1 stop bit (parity none, with 1 stop bit).
- 2 stop bits (parity none, with 2 stop bits).
- Default value: 1 stop bit(no parity).

! CAUTION

Material damage due to incorrect network settings.

Incorrect network settings can cause faults in the IT network.

Consult your network administrator for the correct network settings for your device.

12.4 Measurement

Use the "Measurement" menu to configure the ratio of the current and voltage transformers (primary to secondary side), the connection variants, the nominal current and the nominal frequency.

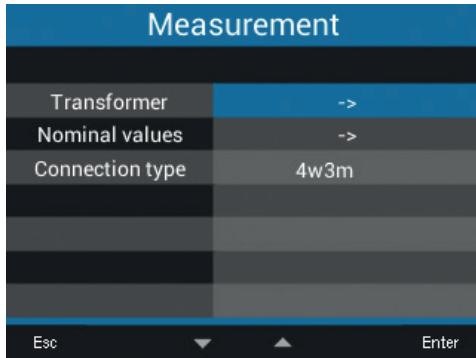


Fig. Measurement window with the entries Measuring transformer, Nominal values and Connection variant

12.4.1 Current and voltage transformers

Configure the current and voltage transformers according to their specifications on the rating plate or in the technical data.

- Open the Configuration window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item Measurement and confirm with button 6 (Enter).
- The Measurement window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item Transformer and confirm with button 6 (Enter).

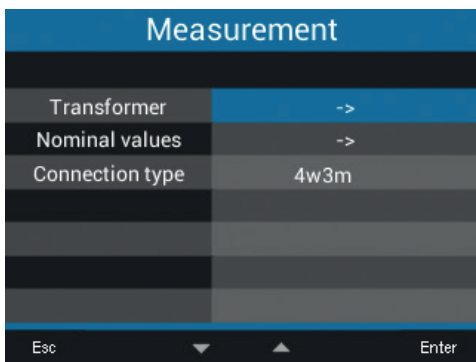


Fig. Measurement window -> Transformer item

- The Measurement window appears with the settings for the current and voltage transformers (primary and secondary).

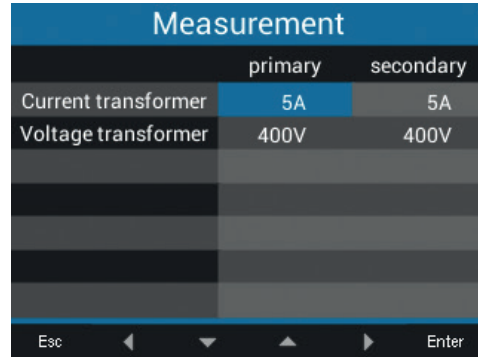


Fig. Measurement window -> Current transformer item

- Use buttons 2 (◀), 3 (▼), 4 (▲) and 5 (▶) to select the entry for the primary or secondary side of the transformer to be set and confirm with button 6 (Enter).
- The selected item is shown "yellow".
- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 three times (Esc) and then press button 2 (Home).

| | Setting range | Default setting |
|---|---------------|-----------------|
| Current transformer (for L1, L2, L3) | | |
| primary | 1 - 10000 A | 5 A |
| secondary | 1- 5 A | 5 A |
| Voltage transformer (for L1, L2, L3) | | |
| primary | 100 - 60000 V | 400 V |
| secondary | 100 - 400 V | 400 V |

Tab. UMG 96-PQ-L transformer settings

12.4.2 Nominal values

For defined operation, the measurement device requires at least the nominal frequency, which it can usually determine automatically. The other nominal values are required optionally for the determination of certain performance characteristics.

| | Setting range | Default setting |
|--|---|----------------------|
| Frequency ¹⁾ | Auto (42.5 .. 69 Hz), 50 Hz, 60 Hz (fixed) | Auto (42.5 .. 69 Hz) |
| Voltage ²⁾ | 0 .. 999 999 V | 230 V |
| Current TDD ³⁾ | 0 .. 999 999 A | 150 A |
| Current L1-L3 (nominal current) ²⁾ | 0 .. 999 999 A | 5 A |
| Current L4 ²⁾⁴⁾ | 0 .. 999 999 A | 5 A |
| ¹⁾ Required information ²⁾ Optional, for events (power quality) ³⁾ Optional, for the TDD parameter ⁴⁾ Only with module 96-PA-RCM-EL | | |

Tab. Nominal value settings

Set nominal values

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Measurement* and confirm with button 6 (Enter).
- The *Measurement* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Nominal values* and confirm with button 6 (Enter).

| Measurement | |
|-------------------|------------------|
| Transformer | -> |
| Nominal values | -> |
| Connection type | 4w3m |
| Module mode | Residual current |
| Residual current | -> |
| Temp. sensor type | PT100 |
| Esc | Enter |

Fig. Measurement window -> Nominal values item
(the lower 3 entries refer to the 96-PA-RCM-EL module)

- Use buttons 3 (▼) and 4 (▲) to select the desired item and confirm with button 6 (Enter).

| Nominal values | |
|----------------|-------------------|
| Frequency | Auto (42,5-69 Hz) |
| Voltage | 230V |
| Current TDD | 150A |
| Current L1-L3 | 100A |
| Current L4 | 100A |
| Esc | Enter |

Fig. Measurement window -> Frequency item

- The selected item is shown "yellow".
- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 twice (Esc) and then press button 2 (Home).

Frequency

The device requires the mains frequency for measuring and calculating measured values. For class S devices, the frequency is also required as a basis for frequency events (cf. *Measurement* > *Power quality* in the GridVis device configurator).

The measurement device can determine the mains frequency automatically if a sufficiently high voltage is present at voltage measurement input V1: at least 20 Veff for 4-wire measurement; at least 34 Veff for 3-wire measurement.

i INFORMATION

With the **Auto** setting, the measurement device needs about 10 seconds after being switched on to determine the mains frequency. During this time, the measurement device assumes 50 Hz.

If the measurement device cannot determine the frequency (in the case of poor power quality, the sine wave of the voltage may be distorted to such an extent that double zero crossings occur, for example), you can set a fixed nominal frequency of 50 or 60 Hz. If the frequency setting is fixed, the measurement device does not determine the actual frequency.

i INFORMATION

If the mains frequency is outside the range of 45-65 Hz:

- There is no error or warning alert.
- When a constant frequency (50/60 Hz) is indicated, the corresponding setting is used.
- When automatic frequency detection is selected (Auto), the last determined frequency in the range of 45-65 Hz is used.

The determination of the frequency runs over a period of 10 seconds. The frequency does **not** represent a 200 ms measured value!

Voltage

This specification serves as a reference value for all voltage events, such as overvoltage/undervoltage (cf. *Measurement > Power quality* in the GridVis device configurator).

Specify the nominal voltage at the voltage measurement inputs (e.g. 230 V for 4-wire measurement) or the primary voltage when using voltage transformers.

Current TDD

TDD stands for Total Demand Distortion and is similar to THD (Total Harmonic Distortion). TDD is a characteristic parameter for the harmonic current distortions that occur in relation to the maximum current of the system that occurs.

Enter the maximum current of the system (nominal current under full load) to calculate the TDD value. The measurement interval for TDD is 15-30 min. The characteristic parameter TDD is widely used in North America and elsewhere.

While the TDD value is fixed in relation to the nominal current entered, THD is a dynamic parameter for the harmonic distortion in relation to the actual measured current.

Current L1-L3

This specification serves as a reference value for overcurrent events in phases L1-L3 (cf. *Measurement > Power quality* in the GridVis device configurator).

Enter the nominal current of the system to be measured (primary side of the current transformer).

| Nominal values | |
|------------------------------|-------------------|
| Frequency | Auto (42,5-69 Hz) |
| Voltage | 230V |
| Current TDD | 150A |
| Current L1-L3 | 100A |
| Current L4 | 100A |
| Esc ▼ ▲ Enter | |

Fig. Measurement window -> Nominal values -> Current L1-L3 item

Current L4 (with module)

This specification serves as a reference value for overcurrent events in the neutral conductor (cf. *Measurement > Power quality* in the GridVis device configurator).

Enter the nominal value of the neutral conductor current.

12.4.3 Connection variant

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Measurement* and confirm with button 6 (Enter).
- The *Measurement* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Connection variant* and confirm with button 6 (Enter).

| Measurement | |
|-------------------|------------------|
| Transformer | -> |
| Nominal values | -> |
| Connection type | 4w3m |
| Module mode | Residual current |
| Residual current | -> |
| Temp. sensor type | PT100 |
| Esc | ▼ ▲ Enter |

Fig. Measurement window -> Connection variant item (the lower 3 entries refer to the 96-PA-RCM-EL module)

- The selected item is shown "yellow".
- Select the desired connection variant with buttons 3 (▼) and 4 (▲).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 three times (Esc) and then press button 2 (Home).

Setting range **Connection variant**: 4w3m, 3w2u, 3w2m, 3p1w.

Connection variant 4w3m

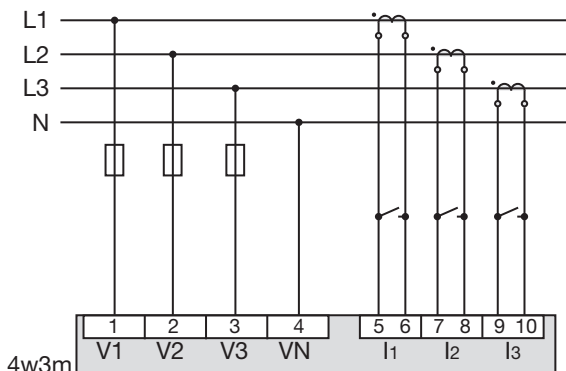


Fig. Connection variant 4w3m - measurement in a three-phase 4-conductor network with asymmetrical load.

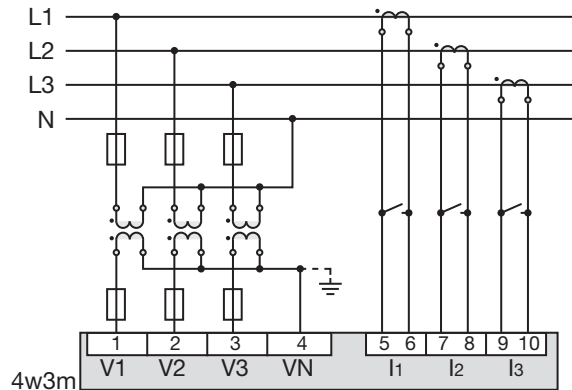


Fig. Connection variant 4w3m - Measurement via 3 voltage transformers in a three-phase 4-conductor network with asymmetrical load.

Connection variant 3w2u

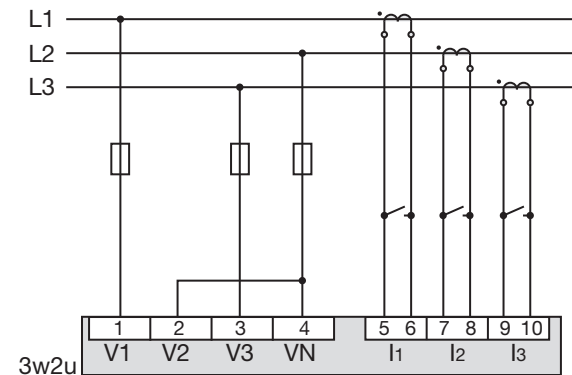


Fig. Connection variant 3w2u - measurement in a three-phase 3-conductor network with asymmetrical load.

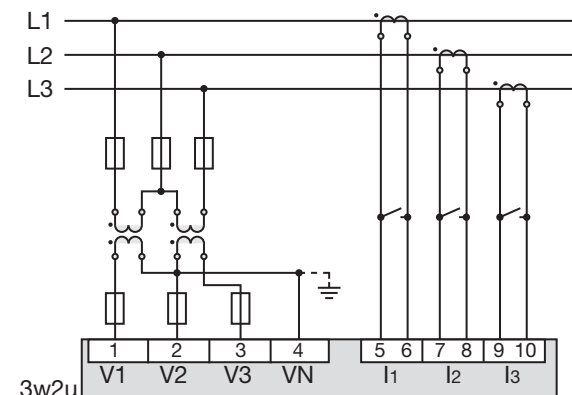


Fig. Connection variant 3w2u - measurement via 2 voltage transformers in a three-phase 3-conductor network with an asymmetrical load.

i INFORMATION

In the GridVis® software, configure the connection variant under *Measurement* > *Mains*.

Connection variant 3w2m

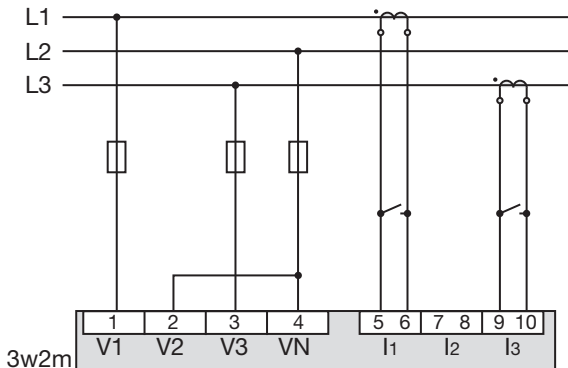


Fig. Connection variant 3w2m - measurement in a three-phase 3-conductor network with asymmetrical load.

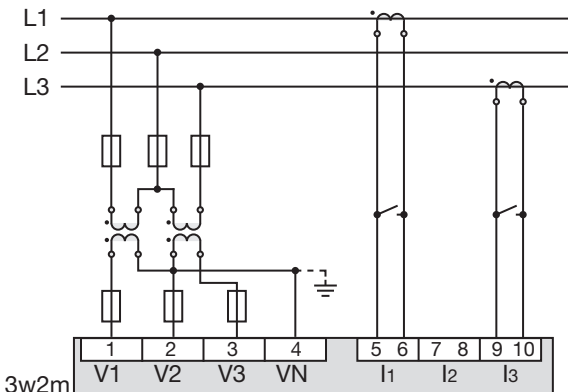


Fig. Connection variant 3w2m - measurement via 2 voltage transformers in a three-phase 3-conductor network with an asymmetrical load.

Connection variant 3p1w (3 x L3)

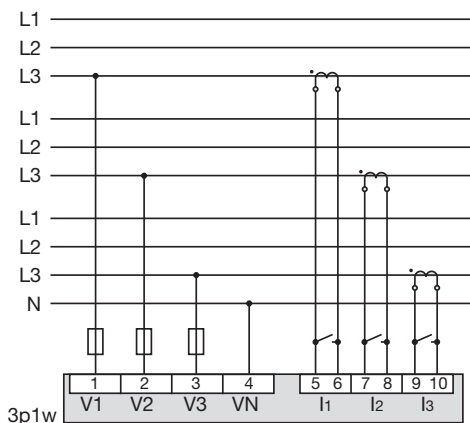


Fig. Three systems with uniform loading of the phases. The unapplied measured values L2/L3 or L1/L3 or L1/L2 of the respective systems are calculated.

Only use the 3p1w connection variant if it is ensured that the connected loads in each system always load all 3 phases equally!

In the connection variant **3p1w**, the power and energy values determined in one phase of a system are multiplied by the factor 3 and displayed as total values of the system. In the *Overview* menu (start screen), the power is displayed as "3 x P" and all three phases are displayed as "L3".

| Summary | | UMG 96-PA | | | |
|-----------|---------|-----------|-----|-------|--|
| | I | I max. | U | 3 x P | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| | --- | --- | --- | --- | |
| Frequency | | | | | |
| L3 | 50.00Hz | | | | |
| Menu | | | | | |

Fig. Start screen for the connection variant 3p1w (3 x L3)

i INFORMATION

The start screen displays the correct measured values in the 3p1w (3 x L3) connection variant. Other display indicators are not designed for this connection variant and may show invalid measured values. This mainly affects the following menus or displays:

- Voltage >Phasor diagram
- Power (active, reactive and apparent power)
- Energy (active, reactive and apparent energy, tariff)
- Consumption overview
- Drag indicator

12.5 Display

Use the *Display* item on the measurement device to configure the following display settings:

- Display brightness,
 - Energy saving (standby),
 - Return to the start screen, and
 - Use of colors for L1, L2, L3.
- Open the *Configuration* window as previously described.

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

Esc ▼ ▲ Enter

Fig. Configuration window -> Display item

- Use buttons 3 (▼) and 4 (▲) to select the item *Display* and confirm with button 6 (Enter).
- The *Display* window appears.

| Display | |
|----------------------|------|
| Brightness | 70% |
| Standby delay | 900s |
| Brightness (standby) | 30% |
| Auto Home return | No |
| Home delay | 90s |
| Colors | -> |

Esc ▼ ▲ Enter

Fig. Display window

- Use buttons 3 (▼) and 4 (▲) to select the corresponding item of the *Display* window and confirm with button 6 (Enter).
- The selected item is shown "yellow".
- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 twice (Esc) and then press button 2 (Home).

Other settings in the *Display* window:

| Display | |
|----------------------|------|
| Brightness | 70% |
| Standby delay | 900s |
| Brightness (standby) | 30% |
| Auto Home return | No |
| Home delay | 90s |
| Colors | -> |

Esc ▼ ▲ Enter

Fig. Display window

12.5.1 Brightness

Display brightness of the measurement device.

- Setting range: 30% - 100%
- Default value: 70%

with 30% = dark
100% = very bright

12.5.2 Standby after

Time in seconds after which the display brightness is set to the *Brightness (Standby)* that has been configured.

- Setting range: 60 s - 3600 s
- Default value: 900 s

12.5.3 Brightness (standby)

Display brightness to which the meter switches after the standby time has expired.

- Setting range: 20% - 60%
- Default value: 30%

with 20% = dark
60% = very bright

12.5.4 Auto Home return

The display automatically shows the start screen again after the set time. When activated, this function prevents the *Configuration* menu from remaining open unintentionally and thus allowing unauthorized access.

- Setting range: Yes, No

12.5.5 Home delay

The display automatically shows the start screen again after this time has elapsed.

- Setting range: 30 s - 300 s
Default value: 90 s

12.5.6 Colors

Colors for the display of current and voltage in the graphical visualizations.

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Display* and confirm with button 6 (Enter).
- The *Display* window appears.
- Use the buttons 3 (▼) and 4 (▲) to select the item *Colors* and confirm with button 6 (Enter).
- The *Colors* window appears.



Fig. Colors window

- Use buttons 2 (◀), 3 (▼), 4 (▲) and 5 (▶) to select the color for the voltage or current of the phase to be set and confirm with button 6 (Enter).
- The selected color is shown framed in blue.
- Use buttons 3 (▼) and 4 (▲) to select the desired color and confirm with button 6 (Enter) or end the action with button 1 (Esc).
- To return to the start screen, press button 1 three times (Esc) and then press button 2 (Home).

12.6 System

In the *System* window, the user of the measurement device can:

- View device-specific system settings.
- Configure a password.
- Delete or reset measured values and device parameters.
- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).

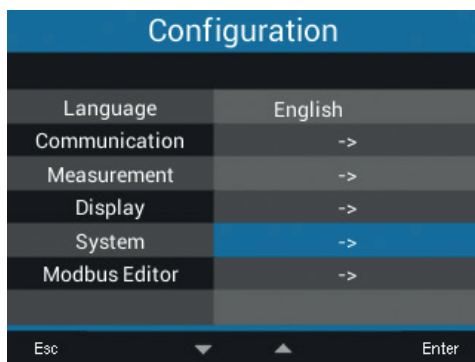


Fig. Configuration window -> System item

- The *System* window appears.

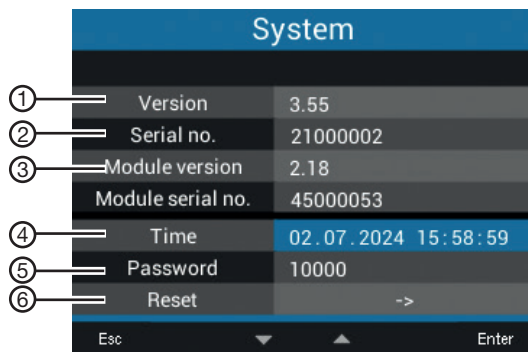


Fig. System window

| Item | Function/Designation |
|------|---|
| 1 | Firmware version |
| 2 | Serial number of the measurement device |
| 3 | Details on the module, if available |
| 4 | Date/time |
| 5 | Set password |
| 6 | Resetting saved values |

Tab. Entries in the System window

12.6.1 Firmware/Serial number

The firmware and the serial number of the measurement device are required for support requests or registration on the homepage (www.janitza.com).

12.6.2 Date/time

Here you can set the date and time in the device. A changed time is adopted immediately for all newly recorded measured values.

The settings for time synchronization, the date and time zones can be defined using the GridVis® software.

The date and time can also be synchronized and monitored across devices (see chap. 13.21 on page 92).

12.6.3 Password

Use a password to block access to the configuration. The device can only be configured after entering the password.

The password consists of a number combination of up to 5 digits.

Setting ranges:

- 1-99999 = with password
- 00000 = without password

Default value:

00000 = without password

The UMG 96-PQ-L is configured ex works without a password (00000).

For a password change, you need the current password.

i INFORMATION

- The measurement device locks the device configuration for 10 min. if the password is entered incorrectly 5 times.
- Write down your password and keep it safe!
- Without the password you cannot configure your device! Notify the device manufacturer's Support if the password is lost!

Setting the password

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).
- The *System* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Password* and confirm with button 6 (Enter).
- The entry for the *Password* is shown "yellow".

| System | |
|-------------------|---------------------|
| Version | 3.50 |
| Serial no. | 21000000 |
| Module version | 2.18 |
| Module serial no. | 45000053 |
| Time | 02.05.2024 16:11:45 |
| Password | 00000 |
| Reset | -> |
| Esc ◀ ▶ Enter | |

Fig. System window -> Password item

- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 twice (Esc) and then press button 2 (Home).

12.6.4 Reset

This function is used to delete and reset measured values and device parameters.

Energy

You can delete all energy meters in the device simultaneously. It is not possible to select certain energy meters.

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).
- The *System* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Reset* and confirm with button 6 (Enter).
- The *Reset* window appears.



Fig. Reset window, resetting the energy meters

- Use buttons 3 (▼) and 4 (▲) to select the item *Energy* and confirm with button 6 (Enter).
- The item *Energy* is shown "yellow".
- Use buttons 3 (▼) and 4 (▲) to select "Yes" or "No".
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 three times (Esc) and then press button 2 (Home).

Minimum and maximum values

You can use this function to delete **all** minimum and maximum values, the drag indicator values, as well as the maximum values of the average values in the device.

To delete only selected values, use the GridVis® function *Reset values*.

i INFORMATION

Before commissioning, delete any production-related contents of the energy meters, Min./Max. values and records!

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).
- The *System* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Reset* and confirm with button 6 (Enter).
- The *Reset* window appears.



Fig. Reset window, delete min/max values

- Use buttons 3 (▼) and 4 (▲) to select the item *Min./max. values* and confirm with button 6 (Enter).
- The item *Min./Max. values* is shown "yellow".
- Use buttons 3 (▼) and 4 (▲) to select "Yes" or "No".
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 three times (Esc) and then press button 2 (Home).

Standard factory settings

This function resets all settings, such as configurations and recorded data, to the factory settings.

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).
- The *System* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Reset* and confirm with button 6 (Enter).
- The *Reset* window appears.



Fig. Reset window, standard factory settings

- Use buttons 3 (▼) and 4 (▲) to select the item *Standard factory setting* and confirm with button 6 (Enter).
- The item *Factory setting* is shown "yellow".
- Use buttons 3 (▼) and 4 (▲) to select "Yes" or "No".
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- Use button 6 (Enter) to confirm the warning message or end the action with button 1 (Menu).
- Pressing button 6 (Enter) resets the device to the standard factory settings.

Restart

This function restarts the measurement device.

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *System* and confirm with button 6 (Enter).
- The *System* window appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Reset* and confirm with button 6 (Enter).
- The *Reset* window appears.

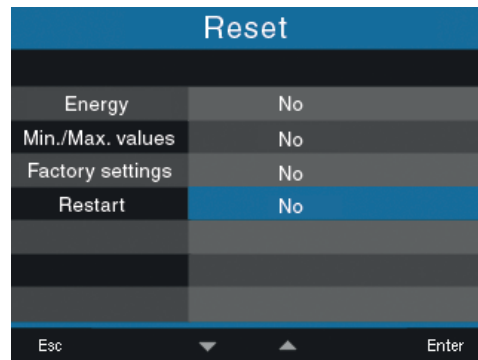


Fig. Reset window, restart device

- Use buttons 3 (▼) and 4 (▲) to select the item *Restart* and confirm with button 6 (Enter).
- The item *Restart* is shown "yellow".
- Use buttons 3 (▼) and 4 (▲) to select "Yes" or "No".
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- Pressing button 6 (Enter) restarts the device.

12.7 Modbus editor

The function **Modbus Editor** is used to configure various functions or to read out measured values directly on the measurement device, without parametrization software or a network connection. Your measurement device does not require a network connection for this.

INFORMATION

Optionally, you can configure Modbus addresses easily and conveniently in the GridVis® software.

You can use the Modbus address list (download at www.janitza.com) to configure the **analog output** of the measurement device, for example, via the device keyboard.

Example of configuring the measured value for the analog output:

To assign a measured value to the analog output of your measurement device, write the Modbus address of the measured value (see the table of frequently used measured values) to the

Modbus address 30001

To configure a start value for your measured value, write the start value to the

Modbus address 30002

A final value for your measured value can be entered in

Modbus address 30004

To assign the output ranges to the analog output of a device, write as follows to the

Modbus address 30006

- a **0** for the output range **0-20 mA**;
- a **1** for the output range **4-20 mA**.

INFORMATION

Further information on the analog output can be found in the sections „10. Analog outputs“ on page 40 and „13.15 Configuration of the analog output“ on page 74.

Table of frequently used measured values

Frequently used measured values and their Modbus addresses for output on the **analog output (Modbus address 30001)**:

| Modbus address | Measured value |
|---|---|
| 19026 | Active power, sum L1-L3, instantaneous value |
| 19042 | Reactive power, sum L1-L3, instantaneous value |
| 19012 | Current L1, instantaneous value |
| 19014 | Current L2, instantaneous value |
| 19016 | Current L3, instantaneous value |
| 1050 | Cos phi sum L1-L3, instantaneous value |
| For measurement devices with RCM module | |
| 20053 | Neutral conductor current I4, instantaneous value |
| 20055 | Residual current RCM 1 (I5), instantaneous value |
| 20057 | Residual current RCM 2 (I6), instantaneous value |
| 20061 | Temperature, instantaneous value |

Tab. Modbus addresses of frequently required measured values.

INFORMATION

A continuation of the table can be found in section „17.2 Modbus addresses of frequently used measured values“ on page 117.

You can access the Modbus editor as follows:

- Open the *Configuration* window as previously described.
- Use buttons 3 (▼) and 4 (▲) to select the item *Modbus editor* and confirm with button 6 (Enter).

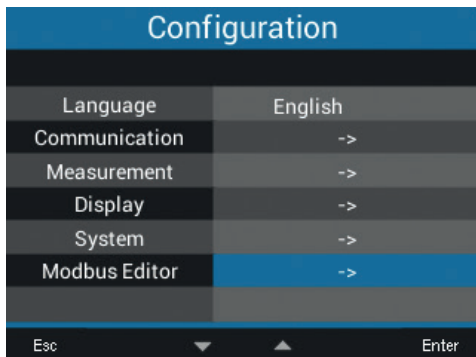


Fig. Configuration window, Modbus editor

- The *Communication* window appears with the *Modbus editor*.

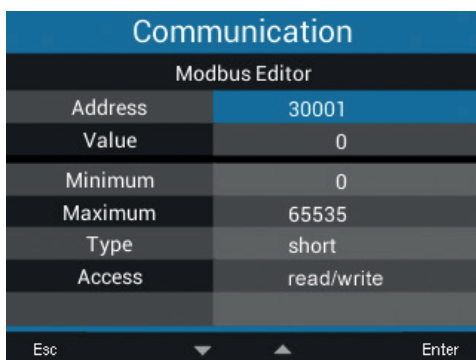


Fig. Communication window, Modbus editor

- Use buttons 3 (▼) and 4 (▲) to select the item *Address* or *Value* and confirm with button 6 (Enter).
- The selected item is shown "yellow".
- Use buttons 2 (◀) and 5 (▶) to change the position of the digit to be set for each item and use buttons 3 (▼) and 4 (▲) to change the digit (-1/+1).
- Confirm your entries with button 6 (Enter) or end the action by pressing button 1 (Esc).
- To return to the start screen, press button 1 twice (Esc) and then press button 2 (Home).

Example for the measured value *Active power*:

- In the *Configuration* window, select the item *Modbus editor* and confirm with button 6 (Enter).
- The *Communication/Modbus Editor* window appears with the items *Address* and *Value*.
- Select the item *Address* and press button 6 (Enter).
- The item *Address* is shown "yellow".
- Use buttons 2 (◀), 5 (▶), 3 (▼) and 4 (▲) to configure the number 30001.
- Confirm the entry with button 6 (Enter).
- Then select the item *Value* and press button 6 (Enter).
- The item *Value* is shown "yellow".
- Use buttons 2 (◀), 5 (▶), 3 (▼) and 4 (▲) to configure the number 19026 for the measured value *Active power sum, L1-L3*.
- Then configure the *Start* and *End value* of the active power in the addresses 30002 and 30004. For example, start value 500 W and end value 1000 W. Please note that the measured value variables must always be entered in the basic unit (e.g. W, A, V).

Further information on this example can be found in section „13.15 Configuration of the analog output“ on page 74.

i INFORMATION

- Measured values and Modbus addresses for the analog outputs can be configured easily and clearly in the GridVis® software (see www.janitza.com).
- Using the GridVis® software requires a connection between the measurement device and a PC (server) running the GridVis® software (see section „8. Connection and PC connections“ on page 34).
- Also observe the documentation for the RCM modules.

13. Commissioning

13.1 Applying the supply voltage

1. Connect the supply voltage with a terminal on the back of the device.
2. After connection of the supply voltage, the start screen *Overview* appears (default setting) on the display of your measurement device.
3. If no display appears, check whether the supply voltage is within the nominal voltage range.



CAUTION

Material damage due to disregard of the connection instructions!

Disregard of the connection instructions can damage or destroy your device.

Observe the following:

- Observe the voltage and frequency specifications on the rating plate!
- Do not use the device for measuring DC voltage!

INFORMATION

Before commissioning, delete any production-related contents of the energy meters, Min./Max. values and records (see section „Minimum and maximum values“ on page 55)!

13.2 Measured voltage



WARNING

Risk of injury due to electrical voltage!

If the device is exposed to surge voltages above the permissible overvoltage category, safety-relevant areas of insulation in the device can be damaged. This means that the safety of the product can no longer be guaranteed.

Only use the device in environments in which the permissible overvoltage category is not exceeded.

INFORMATION

In networks with nominal voltages that exceed the specified nominal voltages, connect the voltage measurement inputs via voltage transformers (see section „7.1 Nominal voltages“ on page 25)!

Connect measured voltage:

1. Connect the measured voltage to the terminals of the voltage measurement inputs on the back of the device.

2. After connecting the measured voltage, check the measured values displayed by the device for the voltages L-N and L-L.
Take into account any voltage transformer factors that may be set!

13.3 Measured current

The device:

- Is designed for the connection of current transformers with secondary currents of $\dots/1$ A and $\dots/5$ A.
- Does not measure DC currents.

1. Adjust the factory-set current transformer ratio to the current transformers used.
2. Short-circuit all current transformer outputs except one.
3. Compare the current displayed on the device with the applied input current.
 - The currents must match after taking the current transformer ratio into account.
 - In the short-circuited current measurement inputs, the device must indicate approx. 0 amperes.

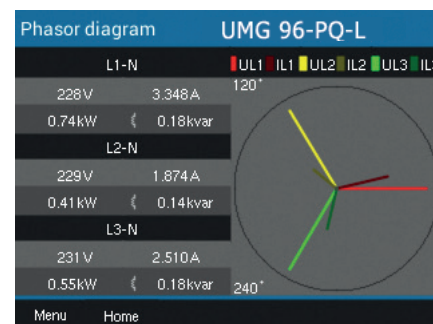


Fig. Phasor diagram

13.4 Frequency

For the measurement and calculation of measured values, the device requires the nominal or mains frequency. The mains frequency can either be specified by the user or determined automatically by the device.

- To determine the mains frequency, the voltage measurement input V1 requires a voltage greater than 20 V_{eff} (4-wire measurement) or an L1-L2 voltage of greater than 34 V_{eff} (3-wire measurement).
- The mains frequency must be in the range from 45 Hz to 65 Hz.
- If the measured voltage is not sufficiently high, the device cannot determine the mains frequency and therefore cannot carry out a measurement.

For further information, see section „12.4.2 Nominal values“ on page 47.

13.5 Direction of rotary field

Check the direction of the voltage rotating field in the measuring display of the device.

- Usually it is a "right" rotating field.

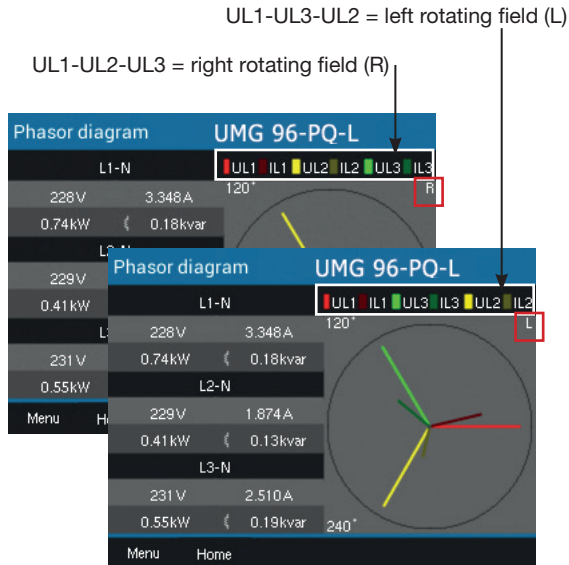


Fig. Phasor diagram window showing the phase sequence according to the direction of the rotating field.

To check the voltage rotating field, open the menu display "Phasor diagram":

- If you are not in the start screen, you can go to this view by pressing button 2 (Home).
- Open the menu with button 1 (Menu).

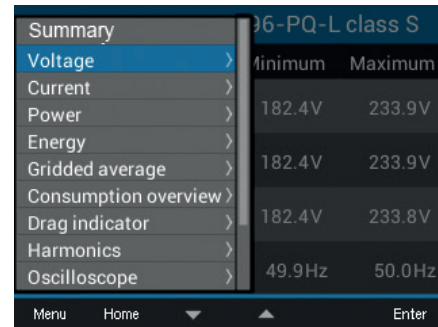


Fig. Voltage menu item

- Use buttons 3 (▼) and 4 (▲) to select the item Voltage and confirm with button 6 (Enter).
- The submenu with the item Phasor diagram appears.

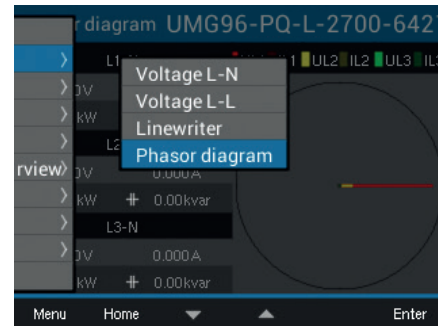


Fig. Submenu item Phasor diagram


- Use buttons 3 (▼) and 4 (▲) to select the item Phasor diagram and confirm with button 6 (Enter).
- The Phasor diagram window appears.

13.5.1 Fundamentals on the phasor diagram

The phasor diagram graphically describes the phase shift or phase angle between the voltage and the current. The phasors rotate at a constant angular speed – proportional to the frequency of the voltage and current – around an origin. The phasor diagram thus shows the momentary state of the variables in an AC circuit.


Representation of ohmic resistance:

- Voltage and current are in phase.

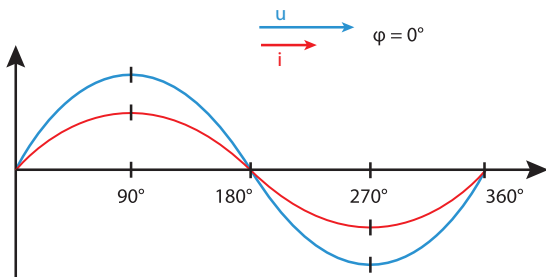


Representation of inductance:

- The voltage is ahead of the current.
- The phase shift for an “ideal coil” is 90°.

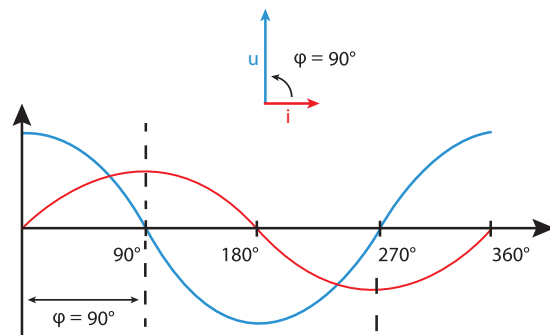


Representation of capacitance:


- The current is ahead of the voltage.
- The phase shift of an “ideal capacitor” is 90°.

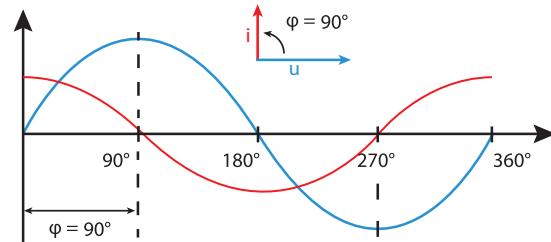

With a combination of the states, the phase angle “current to voltage” can assume values between -90° and +90°.

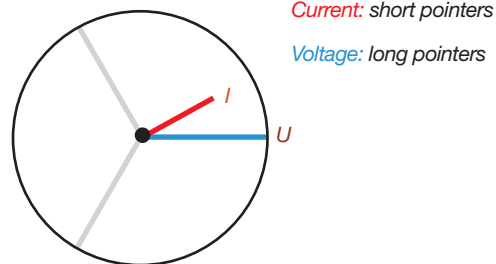

Example phasor diagram (3-phase)

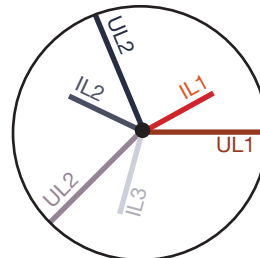


Current and voltage are shifted against each other. The current is ahead the voltage, i.e. the network is capacitively loaded.

13.6 Checking the voltage and current inputs using a phasor diagram

The phasor diagram can be used to check incorrect connections at the voltage and current inputs.

Example 1

Primarily ohmic load.

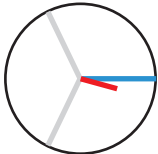


Voltage and current have only a small deviation in the phase position.

- The current measurement input is assigned to the correct voltage measurement input.

Example 2

Primarily ohmic load.

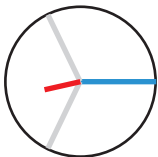

Voltage and current have a deviation of about 180° in the phase position.

- The measured current input is assigned to the correct voltage measurement input.
- In the current measurement under consideration, the connections k and l are reversed or there is a feedback into the supply network.



WARNING

Material damage due to disregard of the connection instructions!

Voltages and currents outside the permissible measuring range can destroy the device.

Comply with the measuring range specifications from the technical data.

13.7 Overrange

If the measuring range is exceeded, a warning appears in the device display, e.g. for the voltage, the warning "Overvoltage" with an indication of the voltage circuit.

The overrange message is displayed as long as the condition is present. Warnings can be acknowledged with button 5 *Alarms*. The measuring range is exceeded if at least one of the voltage or current measurement inputs lies outside its specified measuring range.

Limit values for overrange (200 ms effective values):

$$I = 6 A_{rms}$$

$$U_{L-N} = 600 V_{rms}$$

| Overvoltage L1 11:34 | | | | |
|----------------------|---------|---------------|----------------------|--------|
| | Voltage | Current | Power | PF1 |
| L1 | 0V | 0.000A | 0.00kW | < 1.00 |
| L2 | 0V | 0.000A | 0.00kW | < 1.00 |
| L3 | 0V | 0.000A | 0.00kW | < 1.00 |
| L1..L3 | 50.00Hz | 0.000A | 0.00kW | < 1.00 |
| | | Active energy | Reactive energy ind. | |
| L1..L3 | 0.0kWh | | 0.0kvarh | |
| Menu | | | Alarms | |

Fig. Example warning message, overvoltage in phase L1.

i INFORMATION

If the measuring range is exceeded, please check your installation and connections. Comply with the connection conditions specified in the technical data.

13.8 Checking the time

To enable correct assignment of times to the measurement data records requires a correct specification of the time. Check and, if needed, correct the time and date settings in the **Configuration / System** menu (see section „12.6.2 Date/time“ on page 53).

13.9 Checking the power measurement

Short-circuit all current transformer outputs except one and check the indicated powers.

- The device must only display power in the phase with the current transformer input that is not short-circuited.
- If this is not the case, check the connection of the measured voltage and measured current.

If the amount of active power is correct, but the sign of the active power is negative, this can have two causes:

1. The connections S1(k) and S2(l) on the current transformer are reversed.
2. Active energy is returned to the grid.

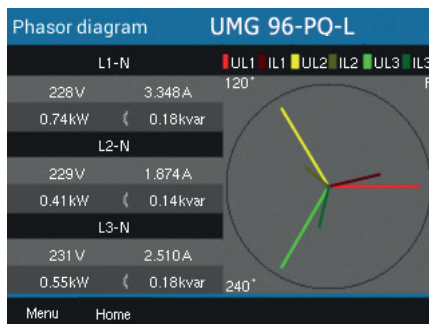


Fig. The phasor diagram shows voltages with long phasors and currents with short phasors.

Call up the phasor diagram with details on the power:

- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).
- Use buttons 3 (▼) and 4 (▲) to select the item Voltage and confirm with button 6 (*Enter*).
- The submenu with the item *Phasor diagram* appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Phasor diagram* and confirm with button 6 (*Enter*).
- The *Phasor diagram* window appears.

13.10 Checking the communication

The device counts all received (RX), all sent (TX) and all faulty data packets.

Ideally, the number of errors in the Error column will be "0" (see figure below, window *Com. RS-485*).

- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).
- Use buttons 3 (▼) and 4 (▲) to select the item *System Info* from the menu and confirm with button 6 (*Enter*).
- The following submenu appears:

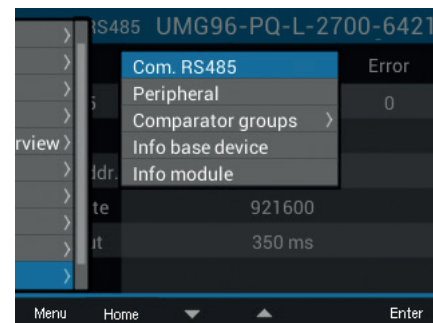


Fig. System Info submenu -> Com. RS-485 item

- Use buttons 3 (▼) and 4 (▲) to select the submenu item *Com. RS-485* and confirm with button 6 (*Enter*).
- The *Com. RS-485* window appears with the parameters for the RS-485 communication interface.

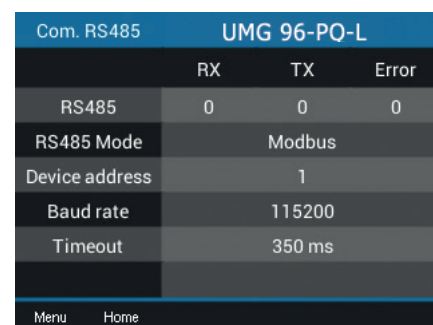


Fig. Display of the parameters that are set for the RS-485 communication interface.

Now check the RS-485 communication parameters, such as:

- All received (RX), all sent (TX) and all faulty data packets. Ideally, the number of errors in the column *Error* will equal "0".
- The mode that is set, the device address, baud rate and timeout.

Check the parameters of the measurement device to the digital inputs and outputs and the analog output as follows:

- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).
- Use buttons 3 (▼) and 4 (▲) to select the item *System Info* from the menu and confirm with button 6 (*Enter*).
- The following submenu appears:

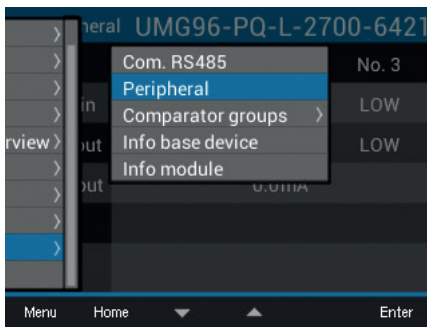


Fig. System Info submenu -> Peripherals item

- Use buttons 3 (▼) and 4 (▲) to select the submenu item *Peripherals* and confirm with button 6 (*Enter*).
- The *Peripherals* window appears with the states of the digital inputs and outputs and the value of the analog output:

| Peripheral | | UMG 96-PQ-L | | |
|-------------|-------|-------------|-------|--|
| I/O | No. 1 | No. 2 | No. 3 | |
| Digital in | LOW | LOW | LOW | |
| Digital out | LOW | HIGH | LOW | |
| Analog out | | 0.0mA | | |
| | | | | |
| | | | | |

At the bottom of the table, there are navigation buttons: 'Menu' and 'Home'.

Fig. Displays the states of the digital inputs and outputs and the value of the analog output.

13.11 Delete min./max. values

In the measuring displays for voltage, current and power, the device offers the function of deleting *Min./Max. values* using button 6 (*Enter*). The *Min./Max. values* can be deleted for the following measured values:

In the submenu **Voltage:**

- Voltage L-N
- Voltage L-L
- THD U (Total Harmonic Distortion - voltage)

In the window **Current:**

- Current
- THD I (Total Harmonic Distortion - current)
- TDD I (distortions with reference to nominal current)

In the window **Power:**

- Total power
- Active power
- Reactive power
- Apparent power

The following are deleted in each case:

- Minimum values
- Maximum values
- Maximum values of the average values
- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).
- Use buttons 3 (▼) and 4 (▲) to select the item Voltage, Current or Power and confirm with button 6 (*Enter*).

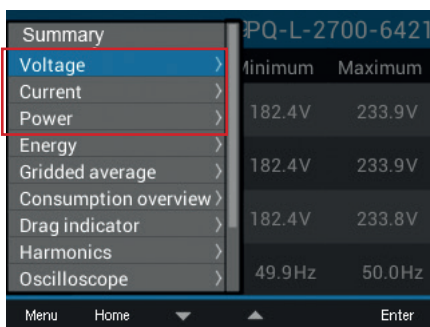


Fig. Voltage, current and power menus

The following description explains the *Delete min./max. values* function using the example of the measuring display *Voltage L-N*. Deleting the *Min./Max. values* for current and power requires the same procedure.

- The submenu for *Voltage* appears.
- In the submenu, select the item *Voltage L-N* with buttons 3 (▼) and 4 (▲) and confirm with button 6 (*Enter*).
- The voltage measuring display appears with the measured values L1-N, L2-N and L3-N.
- To delete the *Min./Max. values*, press button 6 (*Enter*).
- The *Min./max. values* submenu appears.
- In the *Min./Max. values* submenu, use buttons 3 (▼) and 4 (▲) to select the item *Delete* or end the action with the item *Cancel*.
- Confirm your action by pressing button 6 (*Enter*).

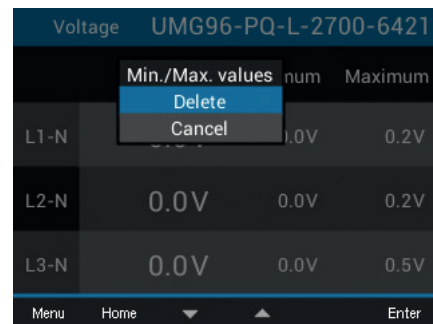


Fig. Measuring display, voltage L-N with menu *Delete/Cancel min./max. values*

13.12 Harmonics current (harmonics)

Harmonics are caused, for example, by equipment with non-linear characteristics. These additional frequencies represent the integral multiple of a fundamental oscillation and show how the equipment affects the mains. Possible effects of harmonics are, for example:

- Additional heating of operating equipment.
- An additional current on the neutral conductor.
- Overloading and a reduced service life of electrical equipment.

Harmonic loads are the main cause of invisible power quality problems involving enormous costs for repair and investment for the replacement of defective equipment.

The device measures the fundamental oscillation of the voltage in the range of 45 - 65 Hz. The calculated harmonics of the voltages and currents refer to this fundamental oscillation.

The measurement device calculates harmonics up to 65 times the fundamental oscillation.

- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).
- Use buttons 3 (▼) and 4 (▲) to select the item Harmonics and confirm with button 6 (*Enter*).
- A selection list appears with voltage and current.
- Use buttons 3 (▼) and 4 (▲) to select Voltage, for example, and confirm with button 6 (*Enter*).
- A further selection list appears with the entries L1, L2 and L3.
- Use buttons 3 (▼) and 4 (▲) to select the respective phase (e.g. L1) and confirm with button 6 (*Enter*).
- The *Harmonics* window of the selected measured value appears.

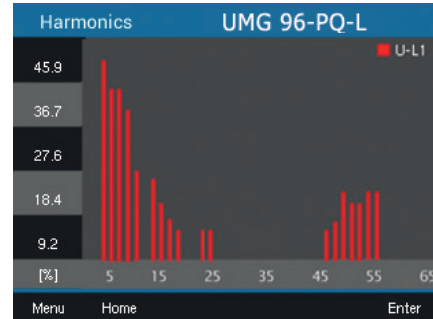


Fig. Measuring display for harmonics (e.g. Voltage L1)

Interharmonics can additionally be detected by measurement devices of the "Class S" variant. These values can be read out in the GridVis® software or via Modbus, but not on the display.

13.13 Communication in the bus system

13.13.1 RS-485

The device sends and receives data via the RS-485 interface. For example, the device receives data from the parameter and measured value list via a MODBUS RTU protocol with CRC check.

Modbus functions (slave device)

02 Read Input Status
 03 Read Holding Registers
 04 Read Input Registers
 06 Preset Single Register
 08 Diagnostic Function
 16 (10Hex) Preset Multiple Registers
 23 (17Hex) Read/Write 4X Registers

The order of the bytes is high before low byte (Motorola format).

Transmission parameters

Data bits: 8
 Parity: odd
 even
 none (1 stop bit)
 none (2 stop bits)

Stop bits (device): 1 / 2
 External stop bits: 1 / 2

Number formats

short 16-bit ($-2^{15} .. 2^{15} - 1$)
 float 32-bit (IEEE 754)

Further information can be found at the following locations:

- For connections and PC connection of the device via the interface, see section „8.2 RS-485 interface“ on page 35.
- For configuration of the RS-485 interface on the device, see section „12.3 Communication“ on page 45.
- For the Modbus functions, see the document "Modbus address list and formulary" for the measurement device. It is available in the download area of the homepage.

Example: Reading the voltage L1-N

The voltage L1-N is located in the list of parameters and measured values at address 19000 in the FLOAT format.

In this example 01 is assumed as the device address.

The "Query Message" then looks as follows:

| Designation | Hex | Comment |
|-------------------|-----|--------------------|
| Device address | 01 | Address=1 |
| Function | 03 | "Read Holding Reg" |
| Start address Hi | 4A | 19000dec = 4A38hex |
| Start address Lo | 38 | |
| No. of values Hi | 00 | 2dec = 0002hex |
| No. of values Lo | 02 | |
| Error check (CRC) | - | |

The "response" of the device can then look as follows:

| Designation | Hex | Comment |
|-------------------|-----|----------------|
| Device address | 01 | Address=1 |
| Function | 03 | |
| Byte counter | 06 | |
| Data | 00 | 00hex = 00dec |
| Data | E6 | E6hex = 230dec |
| Error check (CRC) | - | |

The voltage L1-N sent from address 19000 is 230 V.

13.14 Digital inputs/outputs

The measurement device has three digital outputs and three digital inputs.

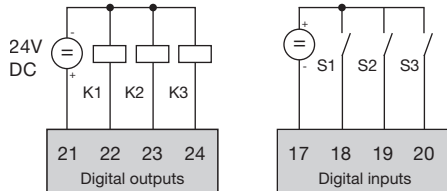


Fig. Digital outputs and inputs

- You configure the digital inputs and outputs using the GridVis® software
- The GridVis® software is available for download from our website (www.janitza.com).

13.14.1 Digital inputs

The measurement device can receive pulses from other devices that have a digital output (pulse counter, S0 input) via the digital inputs.

Alternatively, you can assign a special function to each digital input. A function input **cannot** be used simultaneously as a pulse counter.

The digital inputs can be configured in the GridVis® software in the device configurator under *Peripherals*.

The states of the digital inputs each have their own Modbus address.

For each digital input, the last 16 switching actions (events) are logged with a time stamp.

Function mode (Mode)

A separate function can be assigned to each digital input:

- Digital input 1:
 - S0 input (pulse counter)
 - Tariff switching (HT/NT)
 - External event recording
- Digital input 2:
 - S0 input (pulse counter)
 - Synchronization of the device clock with the selection Minutes or Hours synchronization (preconfigured pulse counters for minutes or hours). Alternatively, the time can be synchronized via Modbus addresses (see section „13.21 Time synchronization“ on page 92).
 - External event recording
- Digital input 3:
 - S0 input (pulse counter)
 - Reset input for the synchronous values of the drag indicator function. The synchronization of the drag indicator is also possible via a Modbus address.
 - External event recording

Pulse counter (S0 input)

- Value type of the incoming signal (e.g. electrical energy, gas/water consumption, CO₂ ...)
- Pulse valency for measured or power values.
- Length of the averaging time.

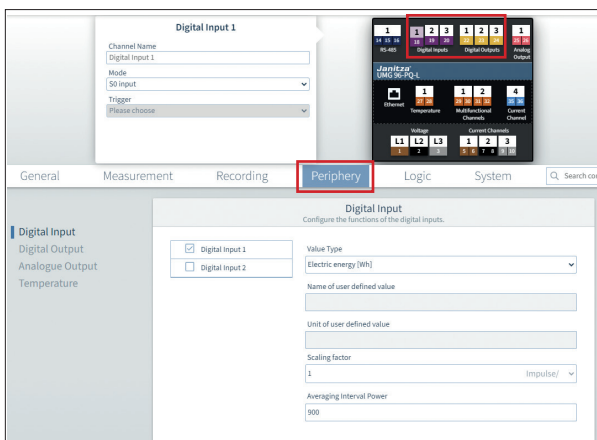


Fig. Configuring the digital inputs in the device configurator

13.14.2 Pulse counter (S0 input)

All digital inputs can be operated with a frequency of 25 Hz. The pulse duration (pulse width) and the pulse pause must be greater than 20 ms.

The typical pulse duration for S0 pulses is 30 ms.



The maximum number of pulses per hour is calculated based on the minimum pulse duration and the minimum pulse pause:

| Pulse length (pulse duration) | Pulse pause (pulse pause) | Max. pulses/h |
|-------------------------------|---------------------------|---------------|
| 20 ms | 20 ms | 90000 pul./h |
| 30 ms | 30 ms | 60000 pul./h |
| 50 ms | 50 ms | 36000 pul./h |
| 100 ms | 100 ms | 18000 pul./h |
| 500 ms | 500 ms | 3600 pul./h |
| 1 s | 1 s | 1800 pul./h |
| 10 s | 10 s | 180 pul./h |

Tab. Examples of the maximum number of pulses per hour

The pulse counters can be configured with simultaneous measured-value or power calculation. The pulses are counted as a 64-bit number and will overflow after approx. 1.17×10^{10} years of continuous operation (25 Hz).

Pulse valency

A pulse valency can be assigned to each digital input. With the pulse valency you specify which measured value or power value (e.g. energy) should correspond to one pulse.

i INFORMATION

The pulse interval is proportional to the power within the selected settings.

Measured value calculation:

$$\text{Measured value} = \text{pulse} \times \text{pulse valency}$$

Power value calculation:

$$\text{Power value} = \frac{\text{Pulse} \times \text{pulse valency}}{\text{Time [s]}}$$

Since the pulse interval can be very large, continuous calculation of the measured or power values is not possible. Consequently, only average values are calculated. The calculation of the average values for the measured value calculation results from the number of pulses per period multiplied by the pulse valency. For the calculation of the mean power values, this value must be divided by a configurable time value.

The period is assigned to the respective digital input and can be set to between 1 and 60 minutes. After the period has expired, the value can be called up via Modbus.

An external synchronization can be connected for each digital input, whereby one synchronization pulse completes a period and starts a new one. A capture time of 30 seconds is permanently preset for the external synchronization. If there is still no synchronous pulse after the period has expired, the software waits a maximum of 30 seconds and then synchronizes. All further periods are then synchronized by the software.

A period of 15 minutes is set at the factory.

The calculation result of the S0 power value is only available at the end of the period.

i INFORMATION

A selection of energy values derived from power values is available in the GridVis® software for the purpose of configuring the pulse counters.

13.14.3 Digital outputs

Different functions can be assigned to the 3 digital outputs:

- Digital output 1¹⁾
 - Pulse output for active energy
 - Output for a comparator group 1-5
 - Output for a timer switch
 - Modbus remote output
- Digital output 2
 - Pulse output for inductive reactive energy
 - Output for a comparator group 1-5
 - Output for a timer switch
 - Modbus remote output
- Digital output 3
 - Output for a comparator group 1-5
 - Output for timer switch
 - Modbus remote output

In the GridVis[®] software, you can define the digital outputs in the device configurator under *Peripherals*:

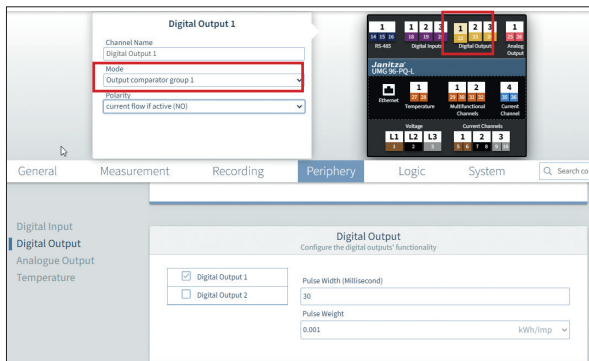


Fig. Configuring the digital outputs in the device configurator

13.14.4 Pulse output

Digital outputs 1 and 2 can be used to output pulses for measuring active energy and reactive energy. To do so, a pulse is applied to the output after a certain, configurable amount of energy has been reached.

Configuring the pulse output

To use a digital output as a pulse output, configure the corresponding parameters in the device configurator of the GridVis[®] software:

- Pulse width
- Mode for the digital input: S0 output
- Output polarity: Normally open, normally closed
- Pulse valency

Pulse valency

The pulse valency indicates how much energy (Wh or varh) corresponds to one pulse.

The pulse valency is determined by the maximum connected load and the maximum number of pulses per hour.

i INFORMATION

Since the **Active energy meter** operates with a reverse running stop, the device only sends pulses when electrical energy is consumed.

Since the **Reactive energy meter** operates with a reverse running stop, the device only sends pulses when there is an inductive load.

Determine pulse valency

1. Set the pulse length according to the requirements of the connected pulse receiver. With a pulse length of 30 ms, for example, the device can emit a maximum of 60,000 pulses (see „Tab. Examples of the maximum number of pulses per hour“ on p. 69) per hour.

2. Determine the maximum connected load:

Example:

| | | |
|---------------------------|---|---------------|
| Current transformer prim. | = | 150 A |
| Voltage L-N | = | max. 300 V |
| Power per phase | = | 150 A x 300 V |
| | = | 45 kW |

Power with 3 phases = 45 kW x 3

Max. connected load = 135 kW

3. Calculate pulse valency:

$$\text{Pulse valency} = \frac{\text{Max. connected load}}{\text{Max. number of pulses/h}} \quad [\text{Wh/pulse}]$$

Pulse valency = 135 kW / 60000 pulses/h
 Pulse valency = 0.00225 kWh/pulse
 Pulse valency = 2.25 Wh/pulse

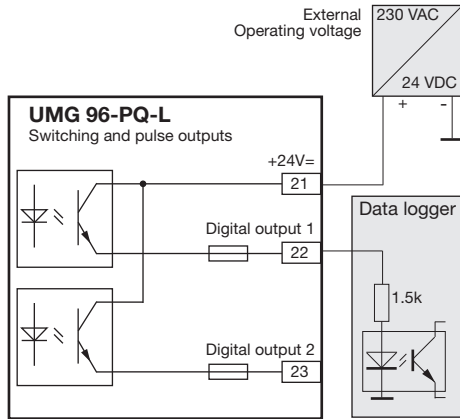


Fig. Connection example for wiring as a pulse output.

⚠ CAUTION

Measurement error when used as a pulse output.
 When the digital outputs are used as pulse outputs, measurement errors can occur due to residual ripple.
For the supply voltage of the digital inputs and outputs, use a power supply whose residual ripple is less than 5% of the supply voltage.

13.14.5 Modbus remote output

The value of a Modbus register is used to switch the assigned digital output.

Configure the digital outputs as Modbus remote outputs in the GridVis® software as follows:

- Open the device configuration in GridVis®.
- Set the mode of the digital outputs to *Modbus Remote Output* under *Peripherals*.
- Specify the output polarity with:
 - Current flow active (normally open contact)
 - Current flow inactive (normally closed contact)

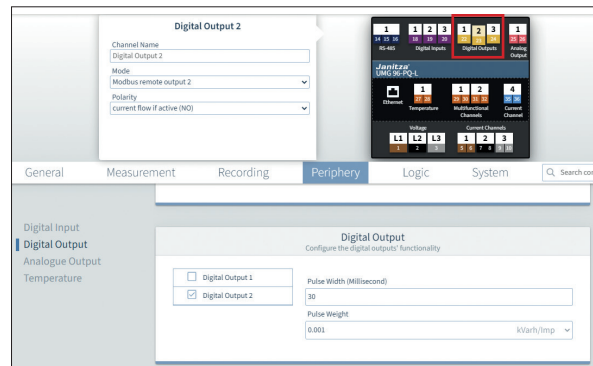


Fig. Configuring the digital outputs as a "Modbus remote output" in the device configurator

13.14.6 Timer switch output

Timers, e.g. for switching digital outputs, can only be set in the GridVis® software under *Management > Scheduling*.

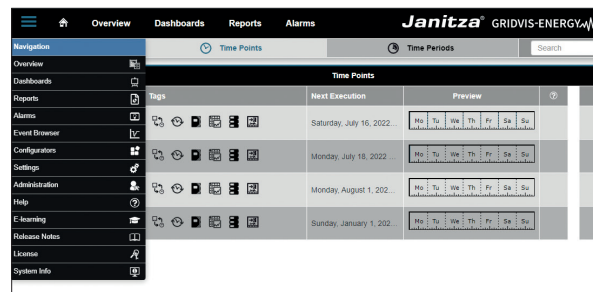


Fig. Timer setting (GridVis® software)

13.14.7 Comparator (limit value monitoring)

Five comparator groups (*Comparator groups*) with 10 comparators each (A - J) are available for monitoring limit values.

You can link the results of the individual comparators A to J with "AND" or "OR". You can assign the result of a comparator group to one of the three digital outputs.

To configure the comparators, only use the device configurator in the GridVis® software under *Logic > Comparator*.

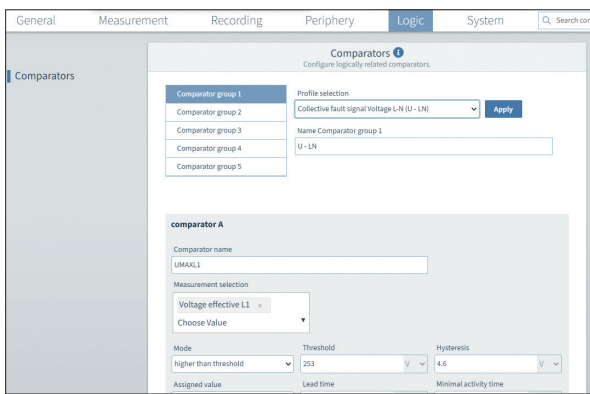


Fig. Configuring the comparator in the device configurator

The preset profiles in the GridVis® software simplify the configuration of the comparators. You can assign one name to each comparator (max. 7 digits), e.g. "UMAXL13" for the phase-to-phase voltage L1-L3.

Reading out comparator settings on the device:

- Open the menu with button 1.
- Use buttons 3 (▼) and 4 (▲) to select the item *System Info*.
- Confirm using button 6 (Enter).
- The submenu appears.
- Use buttons 3 (▼) and 4 (▲) to select the item *Comparator groups*.
- Confirm using button 6 (Enter).
- Select a comparator group using buttons 3 (▼) and 4 (▲).
- Confirm using button 6 (Enter).

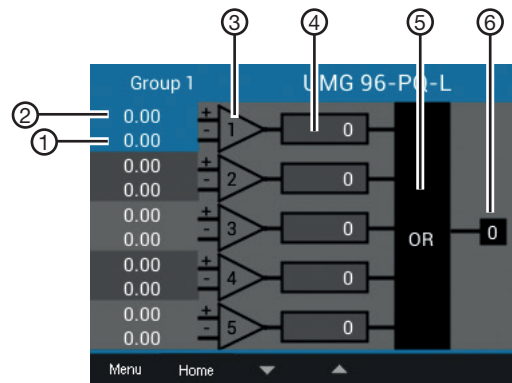


Fig. Display of comparator group 1 ("System Info > Comparator groups" menu)

| Item | Function/Designation |
|------|--------------------------------|
| 1 | Actual value |
| 2 | Limit value |
| 3 | Comparator |
| 4 | Comparator running time |
| 5 | Logic |
| 6 | Result of the comparator group |

Tab. Legend for the figure above

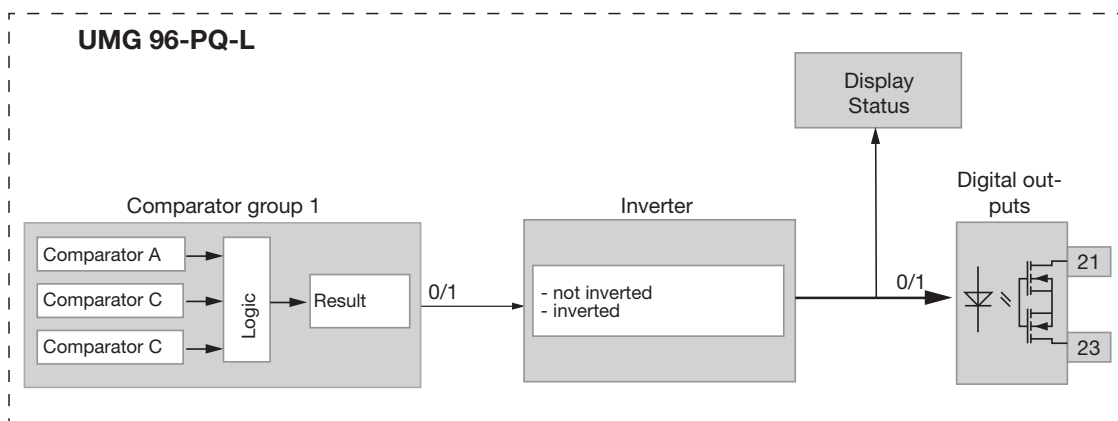


Fig. Block diagram "Using digital output 2 for limit value monitoring"

Comparator without hysteresis

- The set limit value is compared with the measured value.
- If there is a limit violation for at least the duration of the lead time, the comparator result is changed.
- The result of the comparator is retained during the limit violation, but at least for the duration of the minimum activity time (minimum initialization time 0..3600 s).
- The comparator result is reset as soon as there is no longer a limit violation and the minimum activity time has expired.

Comparator running time

The comparator running time is a time counter for each comparator that adds up the total time that the comparator output was set to active. This means that if the condition of the comparator is fulfilled and the lead time has expired, the counter increases by the corresponding amount of time. The minimum activity time (minimum initialization time) is taken into account here.

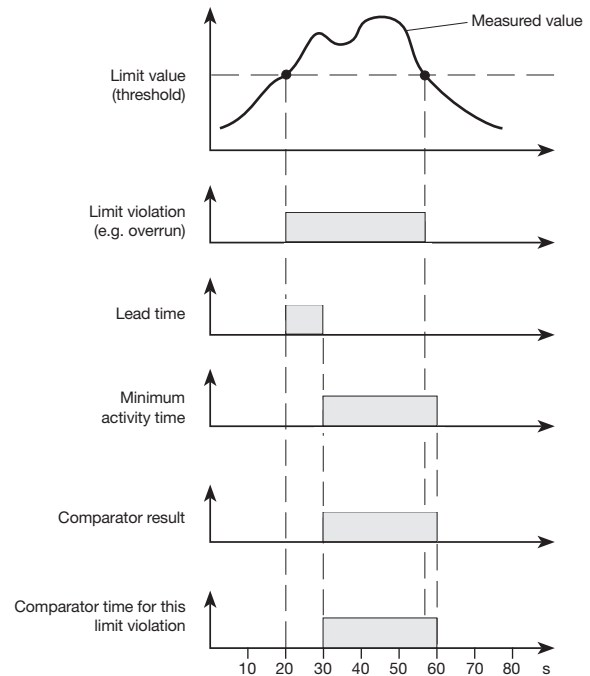


Fig. Comparator without hysteresis
Example with 10 s lead time and 30 s minimum activity time

Comparator with hysteresis

With the hysteresis in %, the switching off of the comparator can be delayed (as with an event).

Example: In the "above threshold" mode, the momentary measured value must again fall below the threshold value minus the hysteresis in order to change the output of the comparator.

Recording events (as of FW3.50)

Comparators are not only useful for setting digital outputs. Group 1 and 2 comparators can also start event recording when a threshold value is exceeded or undershot (see section „13.19 Events“ on page 86).

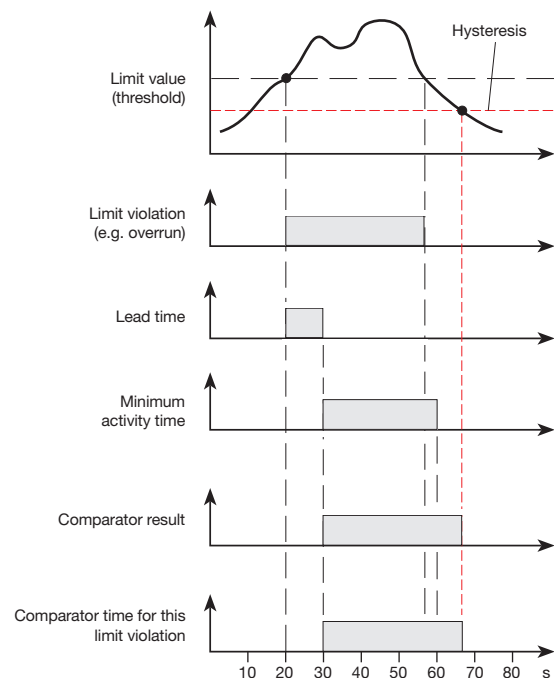


Fig. Comparator with hysteresis
Example with 10 s lead time and 30 s minimum activity time

13.15 Configuration of the analog output

The device has an analog output that can output a maximum current of 20 mA. An external 24 VDC power supply unit is required for operation.

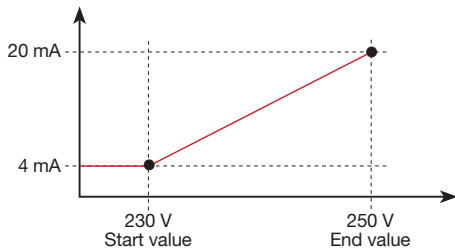


Fig. Principle of analog output with voltage monitoring

The configuration of the analog output can be carried out in a user-friendly manner using the GridVis® software. To do so, enter the assigned measured value, the start and end value and the output range in the device configuration under *Peripherals*.

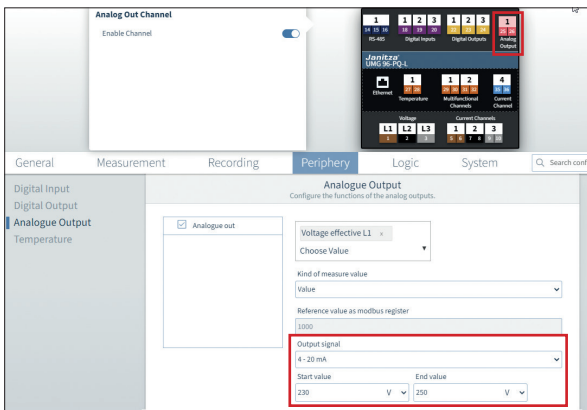



Fig. Configuration of the analog output in the GridVis® software

i INFORMATION

Information on configuring the analog output via the device keyboard can be found in section „12.7 Modbus editor“ on page 57.


Examples:

Assignment of active power L1 (output range 4 - 20 mA):

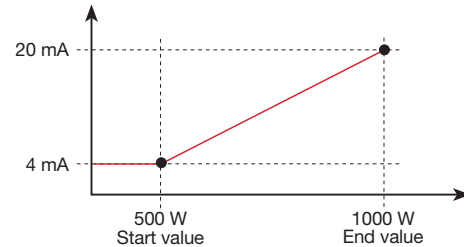

- With an active power of 500 W, the current at the analog output is 4 mA; with an active power of 1000 W --> 20 mA. The measured active power is proportional to the current at the analog output.

Assignment of the calculated active power factor cos φ (math.) (output range 4 - 20 mA):

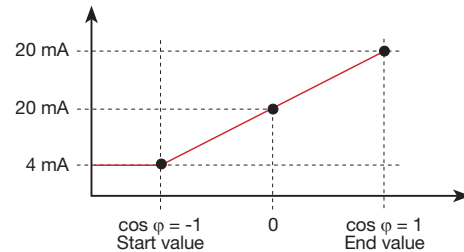

- Monitoring of the active power factor cos φ (math.) with:
 cos φ (math.) > 0 active power, consumed
 cos φ (math.) < 0 active power, delivered.

13.16 Drag indicator function

The "Drag indicator" function captures the 3 highest average values over a defined period (time base).

- The device displays the measured maximum average values in the Drag Indicator menu (see section „13.16.4 Drag indicator - Measurement device displays“ on page 79).
- The average values determined can be called up via the GridVis® software and via a parameter with a time stamp.
- The period duration (time base), synchronization and capture time can be set in the GridVis® software or by setting the corresponding parameters.
- The average value calculation is made from the measured values of the following value types:
 - Current L1
 - Current L2
 - Current L3
 - Active power L1
 - Active power L2
 - Active power L3
 - Active power sum (L1...L3)
 - Apparent power L1
 - Apparent power L2
 - Apparent power L3
 - Apparent power sum (L1...L3)

Period duration (time base):

Individually configurable period duration in seconds for the calculation of the average values over this period (duration of measured value recording). If internal synchronization is selected, the average values are recalculated after the set period of time has elapsed.

Synchronization mode:

A synchronization determines a start time for the calculation periods of the average values.

You can optionally start a synchronization via:

- the internal device clock (*internal synchronization*);
- the setting of a parameter (*via Modbus*);
- digital input 3 (*external synchronization*).

Capture time:

The individually configurable *Capture time* describes a time window in which an incoming pulse synchronizes the point in time. If the device receives a pulse outside the capture time, the calculated average values are deleted and the time is reset.

Note: The setting for the capture time – e.g. in the GridVis® software – describes half the time window of the total capture time!

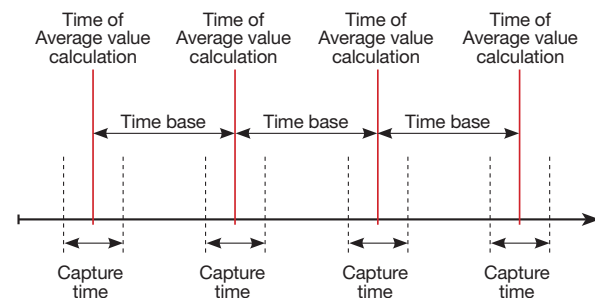


Fig. Principle of synchronization

13.16.1 Internal drag indicator synchronization

The average values are calculated after the configurable period of time (time base) has expired. The internal synchronization takes place at the full minute if this is a multiple of the time base.

| Time base [min] | Sync 1 (time) | Sync 2 (time) | Sync 3 (time) | Sync 4 (time) |
|-----------------|---------------|---------------|---------------|---------------|
| 2 | 09:00:00 | 09:02:00 | 09:04:00 | 09:06:00 |
| 5 | 09:00:00 | 09:05:00 | 09:10:00 | 09:15:00 |
| 15 | 09:00:00 | 09:15:00 | 09:30:00 | 09:45:00 |

Tab. Examples of internal synchronization with different time bases

i INFORMATION

For an *internal synchronization*, the options *Synchronization via Modbus* **AND** *Synchronization via digital output 3* must both be deactivated!

13.16.2 External drag indicator synchronization

An external synchronization for the calculation of the 3 highest average values is performed:

- via digital input 3 (e.g. via a pulse generator) or
- via a Modbus command.

External synchronization scenarios:

"No pulse despite setting"

If there is no pulse via digital input 3 or a Modbus command, the measured values are stored as with an internal synchronization – but not only at each full minute!

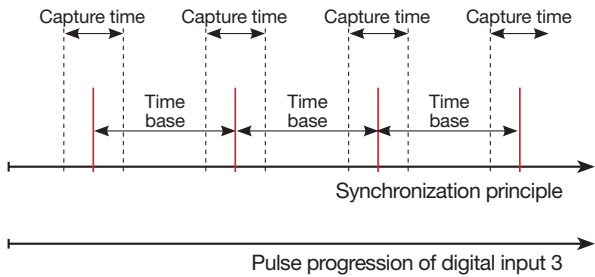


Fig. Principle of synchronization with "No pulse despite setting"

"One pulse"

If the device receives a pulse or a Modbus command once outside the capture time, the measured values added up to that point are reset for the calculation of the average value and the time. The time is redefined as a relative zero point and a new calculation is performed!

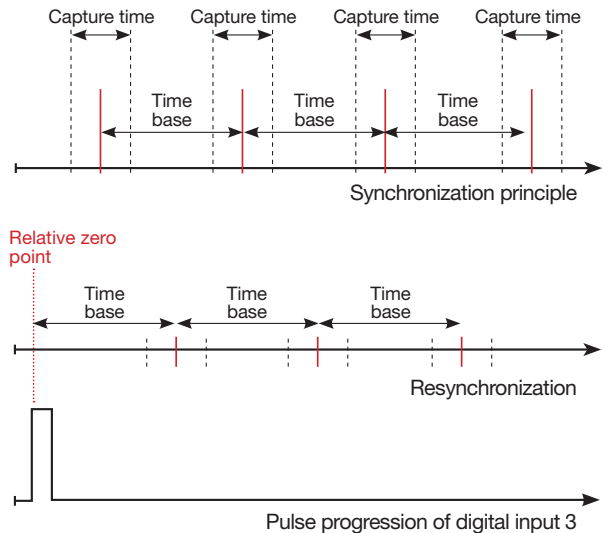


Fig. Principle of synchronization with "One pulse outside the capture time"

| Example | Maximum value | Value | Time stamp |
|----------------------|------------------|--------|------------|
| Effective current L1 | Drag indicator 1 | 3.51 A | 09:13:07 |
| Effective current L1 | Drag indicator 2 | 2.52 A | 09:08:07 |
| Effective current L1 | Drag indicator 3 | 1.52 A | 09:03:07 |

Tab. Example of drag indicator storage with a time stamp (with set time base of 5 min)

Example:

| Example | Maximum value | Value | Time stamp |
|-----------------|------------------------------|----------|------------|
| Active power L1 | Drag indicator Consumption 1 | 396.73 W | 09:18:47 |
| Active power L1 | Drag indicator Consumption 2 | 207.34 W | 09:13:47 |
| Active power L1 | Drag indicator Consumption 3 | 80.59 W | 09:08:47 |

Tab. Example of drag indicator storage with a time stamp (with set time base of 5 min)

The power increases with time. The values are reset to 0 by the pulse (09:06:47) outside the capture time. A new summation of the intermediate values begins from this point on. As no further impulse is received, the average value is calculated after the set time (time base).

“Periodic pulses”

If the device receives periodic pulses via digital input 3 or periodic Modbus commands, there are different scenarios.


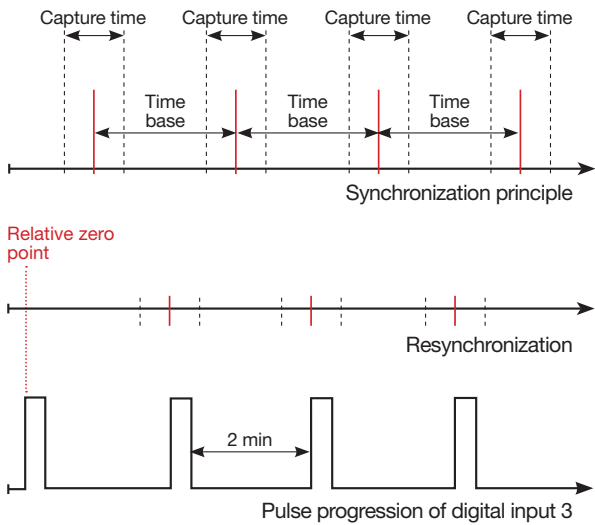


Fig. Principle of synchronization with “periodic pulses” to digital input 3

capture time”:

- Perform value calculation now.
- The time is set to 0 (new relative zero point).
- Delete summed intermediate values.

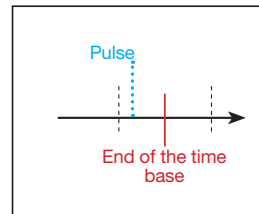


i INFORMATION

With periodic synchronization, the time is synchronized with each pulse!


Scenario “Pulse outside the capture time”:

- Summed intermediate values are set to 0.
- The time is set to 0 (new relative zero point).
- There is no value calculation.

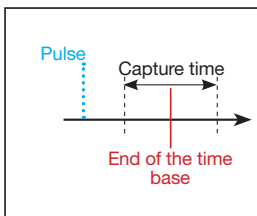

Scenario “Pulse after time base, but within the capture time”:

- Summed intermediate values are set to 0.
- The time is set to 0 (new relative zero point).
- There is no value calculation.

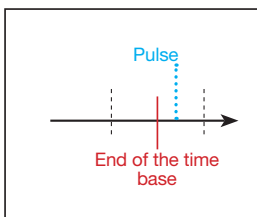

Scenario “Pulse before time base, within the

13.16.3 Configuring the drag indicator synchronization

The synchronization determines a start time for the calculation periods of the drag indicator average values.

There are 3 types of synchronization, which have the following priority internally in the device. Select one of them:

- **Priority 1: Modbus synchronization**

In the device configurator in the GridVis® software under *General > Drag indicator*, select the option *Synchronization via Modbus*.

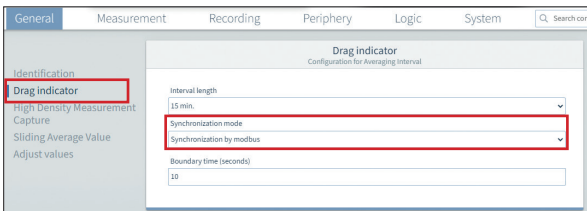


Fig. Drag indicator configuration in the device configurator

Alternatively, set the "Enable flag" via the Modbus tool (Addr.: 822).

- **Priority 2: Synchronization via digital input 3**

In the device configurator for digital input 3 in the GridVis® software, select the option *Drag indicator synchronization*.

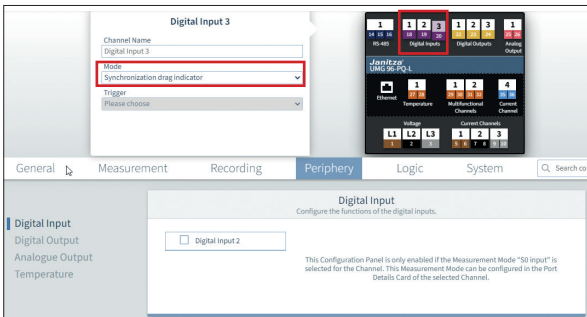


Fig. Synchronization of the drag indicator via digital input 3

- Alternatively, set the Modbus parameter for digital input 3 (addr. 30048) to the value 4 for drag pointer synchronization.

| Modbus address | Function | Setting range |
|----------------|---|---------------|
| 820 | Set trigger flag for drag indicator synchronization | 0 / 1 |
| 821 | Time base in seconds | 60 .. 65535 |
| 822 | Drag pointer synchronization via Modbus: no/yes (enable flag) | 0 / 1 |
| 823 | Capture time in seconds | 0 .. 255 |
| 30048 | Configuration of digital input 3 | |
| | · Off | 0 |
| | · Drag indicator synchronization | 4 |
| | · Start event recording with rising/falling/any edge | 5 / 6 / 7 |

Tab. Modbus addresses for synchronization

- **Priority 3: Internal synchronization**

In the device configurator in the GridVis® software under *General > Drag indicator*, select the option *Internal synchronization only* if no synchronization via Modbus or a digital input is desired.

i INFORMATION

Recommendation: Only activate one type of drag indicator synchronization. If several types are activated, only the type with the highest priority is effective. For an *internal synchronization*, the options *Synchronization via Modbus* **AND** *Synchronization via digital output 3* must both be deactivated!

13.16.4 Drag indicator - Measurement device displays

As already described in the section „Drag indicator function“ on page 75, the drag indicator function shows the **3 highest average values of value types over a defined period (time base)**.

The drag indicators of the respective measured value types can be called up on the measurement device display under *Menu > Drag indicator*. To do so, proceed as follows:

- If you are not in the start screen, you can go to this view by pressing button 2 (*Home*).
- Open the menu with button 1 (*Menu*).

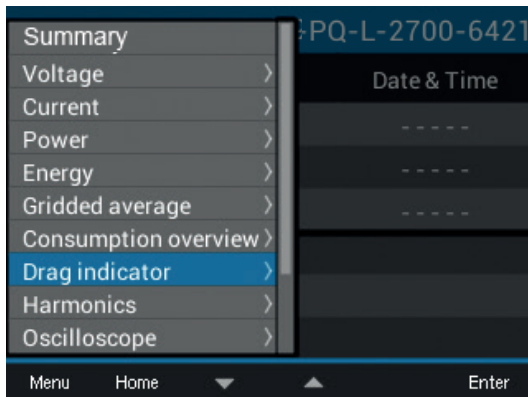


Fig. Drag indicator menu item

- Use buttons 3 (▼) and 4 (▲) to select the item Drag indicator and confirm with button 6 (*Enter*).
- The submenu with the entries *Current*, *Active power* and *Apparent power* appears.

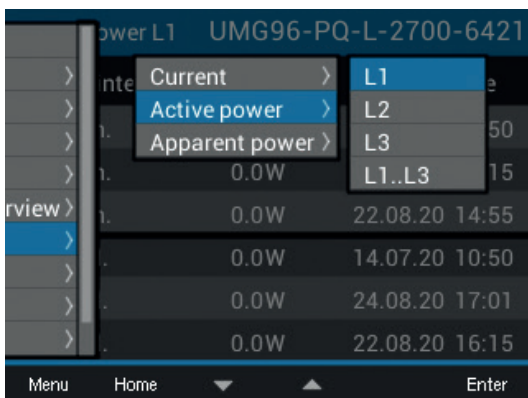


Fig. Drag indicator display with the submenu items *Current*, *Active power* and *Apparent power*.

- Use buttons 3 (▼) and 4 (▲) to select, for example, the item **Active power** and then in the drop-down menu, for example, the item **L1**.

- Confirm using button 6 (*Enter*).
- The *Active power L1* window appears with the following measured values:

| Active power L1 UMG 96-PQ-L | | |
|-----------------------------|--------|----------------|
| Drag indicator | Value | Date & Time |
| 1. Con. | 1395W | 14.07.20 10:50 |
| 2. Con. | 1188W | 01.08.20 09:58 |
| 3. Con. | 0.000W | ----- |
| 1. Del. | 395W | 14.07.20 10:50 |
| 2. Del. | 270W | 01.08.20 09:58 |
| 3. Del. | 0.000W | ----- |
| Menu | Home | Delete |

Fig. Drag indicator display - Active power L1 (effective) – of the last 3 maximum values with a time stamp.

- In addition to the drag indicators of the **Currents L1, L2, L3**, the measurement device also shows you the drag indicators for **Active power** (applied and delivered) and **Apparent power - individually for phases L1, L2, L3 and for the totals L1 - L3**.

| Active power Σ UMG 96-PQ-L | | |
|----------------------------|-------|----------------|
| Drag indicator | Value | Date & Time |
| 1. Con. | 3487W | 27.07.20 11:38 |
| 2. Con. | 2886W | 27.07.20 11:40 |
| 3. Con. | 2201W | 27.07.20 11:37 |
| 1. Del. | 1395W | 27.07.20 11:43 |
| 2. Del. | 1395W | 27.07.20 11:44 |
| 3. Del. | 1188W | 27.07.20 11:42 |
| Menu | Home | Delete |

Fig. Drag indicator display - active power sum (consumed and delivered) – of the last 3 maximum values with a time stamp.

| Apparent pwr Σ UMG 96-PQ-L | | |
|-----------------------------------|--------|----------------|
| Drag indicator | Value | Date & Time |
| 1. | 3487VA | 27.07.20 11:38 |
| 2. | 2886VA | 27.07.20 11:40 |
| 3. | 2201VA | 27.07.20 11:37 |
| Menu Home Delete | | |

Fig. Drag indicator display - Apparent power sum - of the last 3 maximum values with a time stamp.

13.16.5 Delete drag indicator

In each drag indicator display of the device - current, active and apparent power - a dialog box for deleting the drag indicator values appears when button 6 is pressed:

| Active power Σ UMG 96-PQ-L | | |
|---|--------|----------------|
| Drag indicator | Value | Date & Time |
| 1. Con. | 0.000W | 14.07.20 10:50 |
| 2. Con. | 0.000W | 22.08.20 14:15 |
| 3. Con. | 0.000W | 22.08.20 14:55 |
| 1. Del. | 0.000W | 14.07.20 10:50 |
| 2. Del. | 0.000W | 22.08.20 16:15 |
| 3. Del. | 0.000W | 22.08.20 14:15 |
| Menu Home Enter | | |

Fig. Dialog box for deleting the drag indicator values

i INFORMATION

The deletion of current, active power or apparent power drag indicator values of one phase also causes the deletion of the drag indicator values for the other phases of the respective category. If, for example, you delete the drag indicator "Current" of phase L1, the device also deletes the drag indicator "Current" for phases L2 and L3!

13.17 Gridded and moving averages

The measurement device records average values for the measured voltages, currents and powers. The time interval for determining the mean value must be defined in the GridVis® software. The average values and the associated 200 ms minimum and maximum values can be read out via Modbus addresses. In addition, gridded average values can also be shown on the device display.

- **Gridded** averages are calculated for a fixed time grid (averaging interval). The time grid always starts on the hour. Gridded averages allow you to evaluate the same time periods from several measurement devices that are synchronized.

With the factory setting of 15 min., the time intervals always start at the full hour, a quarter of an hour after, at the half hour and a quarter of an hour before the full hour. The gridded average values can be read out as of Modbus address 32000.

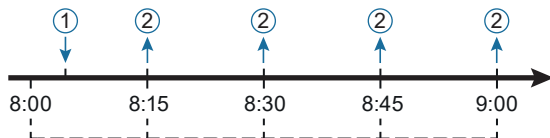


Fig. Gridded average values: 1) Switch on (start measurement); 2) New average value of the last 15 min time grid available

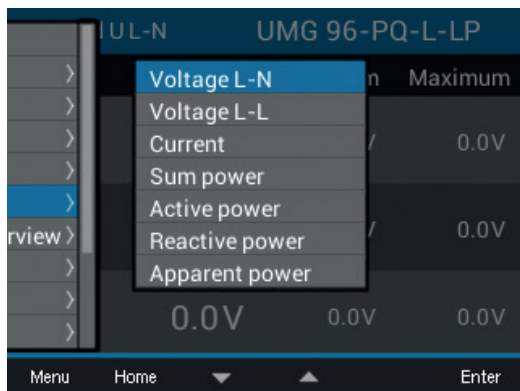


Fig. Gridded averages menu

- **Moving** averages always apply to the last elapsed time interval, starting from the current time. The average values are recalculated every minute. The averaging interval for moving averages is preset to 15 min.
Example: When the values are queried at 10:18, the average values for the interval 10:03 to 10:18 are sent (accurate to the second for the last 900 s).

i INFORMATION

The meter overwrites the Modbus addresses with the average values and the associated minimum and maximum values for each interval, even if the previous values were not retrieved. For gridded and moving averages, the time stamp is provided in Modbus addresses (time and date in the DIN EN 60870 format) in addition to the measured values. The Address 32609 contains the time instant of the current gridded average value as a Unix time stamp (UTC time).

13.18 Recording measured values

You can configure measured value recordings for the measurement device easily and conveniently in the GridVis® software.

The default settings of the measurement device already include recording sets with integrated measured values for 2 separate partitions in the device memory:

- **Measured values partition A** = For long-term recording (up to 7 recording sets).
- **Measured values partition B** = For detailed recording, which can optionally be started by triggering (up to 7 recording sets).

More measured values can be added in the standard recording sets.

Further notes on configuration:

- The minimum averaging time for measured value recordings on measured values partition A is 60 s (default setting, 600 s).
- The minimum averaging time for measured value recordings on measured values partition B is 3 s (default setting, 600 s).
- The measurement device allows 7 recordings per partition with 30 measured values each.

- Within the recording configuration, measured values are defined via a time interval according to the types *Average*, *Sample*, *Maximum* and *Minimum*:
 - *Average value* type: Arithmetic mean of the measured values over the specified time interval.
 - Type *RMS*: Root-mean-square value of the measured values over the specified time interval.
 - *Maximum* and *Minimum* type: Maximum or minimum values in the time interval.
 - *Sample* type: Measured value (instantaneous value) at the end of the specified time interval.

The following sections show the recording sets configured in the default setting. A detailed description of the measured value recordings can be found in the online help of the GridVis® software.

Measurement devices of "**Class S**" have preset recording profiles in addition to the recording sets, e.g. a profile "In accordance with EN 50160". This covers the requirements of EN 50160 for recording, which defines and specifies measured values according to the characteristics of power quality in public electricity supply networks.

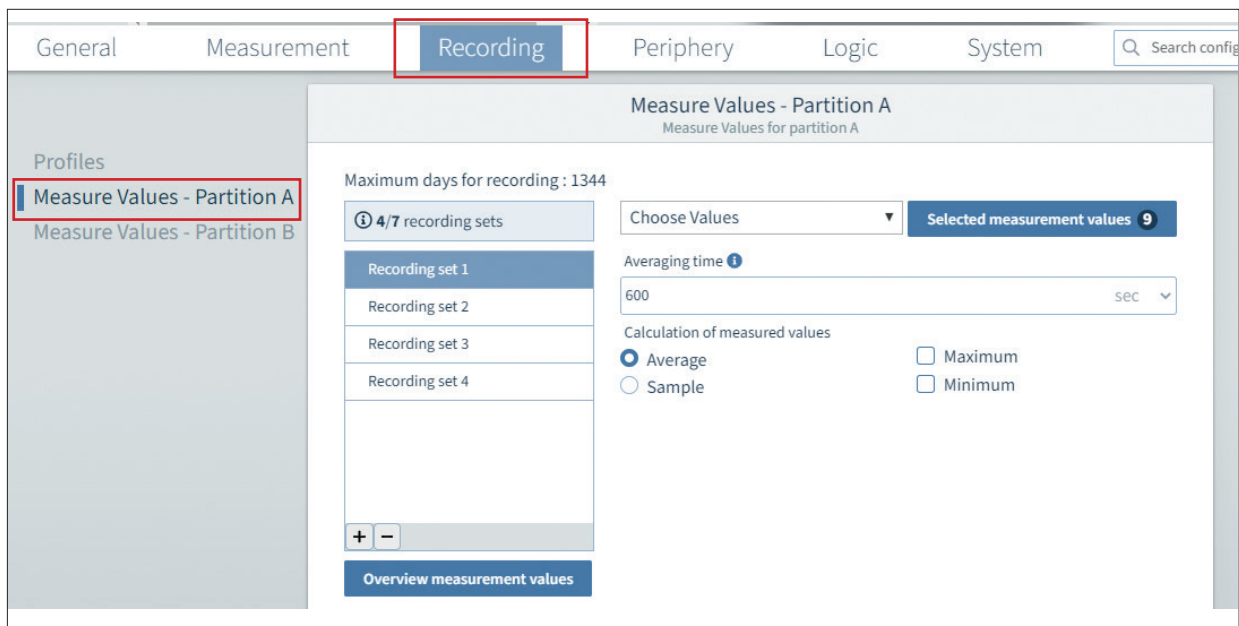


Fig. Recording configuration of measured value partition A in the GridVis device configurator

13.18.1 Profiles (only for class S devices)

Class S devices display an additional menu item called *Profiles* in the device configurator in the Grid-Vis® software under *Records*. Predefined recording profiles allow you to record measured values that are relevant for power quality.

- The profiles offered for selection are based on various international standards for power quality. Further information can be found in the online help of the GridVis® software.
- *User defined* is displayed when one of the profiles is selected and customized.

13.18.2 Default setting, Partition A

The measurement device uses measured value partition A for recording measured values relevant for energy management systems.

The measured values are recorded continuously in partition A (24 h a day, 7 days/week).

Recording set 1 (9 measured values)

The measurement device calculates the following arithmetic mean values from the continuously recorded measured variables over an interval of 600 seconds and records them.

| Preset recording set 1 (600 s) | |
|--------------------------------|-------|
| RMS voltage | L1 |
| | L1-L3 |
| | L2 |
| | L2-L1 |
| | L3 |
| Voltage THD [%] | L3-L2 |
| | L1 |
| | L2 |
| | L3 |

Recording set 2 (20 measured values)

The measurement device calculates the following arithmetic mean values from the continuously recorded measured variables over an interval of 600 seconds and records them.

| Preset recording set 2 (600 s) | |
|---|------------|
| Reactive power, fundamental oscillation | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |
| Cos phi (math.) | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |

| Preset recording set 2 (600 s) | |
|--------------------------------|------------|
| Apparent power | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |
| RMS current | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |
| Active power | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |

Recording set 3 (4 measured values)

At the end of an interval of 900 s, the measurement device records the instantaneous values for current and voltage (*Sample*) and calculates the work values for the recording by adding them up.

| Preset recording set 3 (900 s) | |
|--|------------|
| Active energy consumed, overall tariff | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |

Recording set 4 (8 measured values)

At the end of an interval of 3600 s, the measurement device records the instantaneous values for current and voltage (*Sample*) and calculates the work values for the recording by adding them up.

| Preset recording set 4 (3600 s) | |
|---|------------|
| Active energy consumed, overall tariff | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |
| Inductive reactive energy, overall tariff | L1 |
| | L2 |
| | L3 |
| | Sum L1..L3 |

13.18.3 Default setting, Partition B

The measurement device uses measured values partition B for recording measured values relevant for power quality.

You can control the recording in partition B using the GridVis software and this applies for all recording sets together:

- 1. Recording always active:**
The measurement device records the selected measured values 24 hours a day, 7 days a week.

- 2. Event triggered recording**
The meter starts recording when an event occurs and records the selected measured values for 15 min. If another event occurs during these 15 min, recording starts again. The event trigger can be external (digital input or Modbus) or internal (configured under *Measurement > Power quality*). This recording variant is recommended for recording event-relevant measured values with a low time base (see section „13.19 Events“ on page 86).

- 3. Manual Start/Stop for recording:**
Start or stop the recording of the selected measured values with the Start/Stop button in the GridVis software in the area *Measured values partition B* or via Modbus register 533 (Start = value 1, Stop = value 2).
This recording mode is recommended for recording many measured values at a low time base over a certain period of time.

Partition B has 3 preset recording sets (configurable via the GridVis® software):

Recording set 1 to 3 (25 measured values each)

The measurement device calculates the following arithmetic mean values from the continuously recorded measured variables over an interval of 600 seconds and records them.

| | Recording set | | |
|-------------------------------|---------------|----|----|
| | 1 | 2 | 3 |
| 1st to 25th Voltage harmonics | L1 | L2 | L3 |

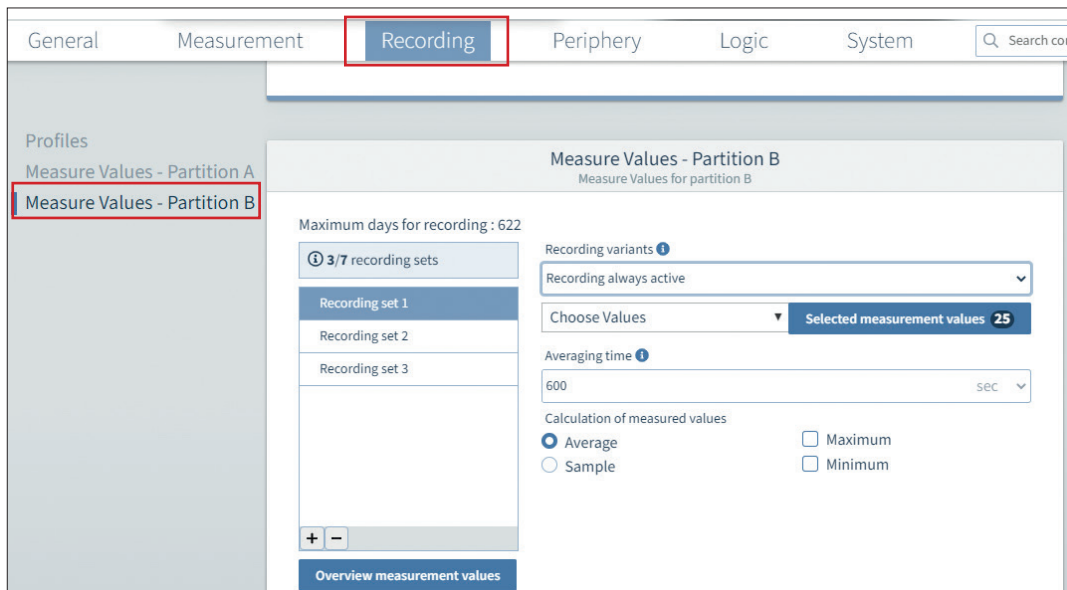


Fig. Recording configuration of memory partition B in the GridVis device configurator

13.18.4 Use cases – Recording examples

Use case 1

The meter is read out daily. Recording runs on both memory partitions 24 hours a day, 7 days a week. For example, the meter records the conventional measured values for energy management such as current, voltage, power, energy.

Use case 2

The meter is read out daily. In addition to the conventional measured values for energy management, measured values are to be recorded over specific time periods or on an event-driven basis with a low time base.

Application case 3

The meter is read out once a year (e.g. meters in distribution substations). The meter user uses both partitions in order to obtain a very high recording depth overall. This use case occurs, for example, with utilities that record for up to 4 years.

Application case 4

The meter is read out once a year (e.g. meters in distribution substations). For example, the meter user uses partition A for recording long-term data (approx. 1400 days) such as current, voltage, power, energy, THD and cos phi, plus partition B for PQ data such as the 1st - 65th harmonics (81 days). Thus, in addition to the recording of all long-term data, the meter user also has the PQ data for a possible error case retroactively for 81 days.

INFORMATION

Take note when configuring the measured value recording:

The lower the averaging time that is set, the greater the volume of data in the respective partitions of the measurement device and in the database of the GridVis® software. In this regard, note the indication of "Recording duration in days":

- Long recording interval (e.g. 3600 s) = low data volume.
- Short recording interval (e.g. 600 s) = high data volume.

A full partition has a data volume of 24 MB, and a readout via the RS-485 interface can take several hours.

Recommendation: Use an Ethernet connection (RCM-EL module) for reading out large data volumes! Regular reading of your data does not require any action.

13.19 Events

The "Events" function helps when analyzing faults in the power or supply network. For each event, the meter starts a **Recording** of the measured values including lead and lag time before and after the event.

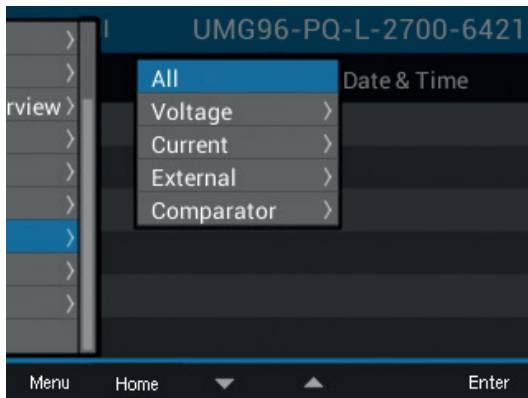


Fig. Submenu for displaying recorded events

Recorded events can be shown on the device display, but due to the display size, only with a short time segment of 2.5 s before and after the trigger time of the event.

The total recording time is 40 s (of which max. 20 s are lead time). 20 s each of lead time and lag time are preset. These times apply for a 50 Hz mains frequency – at 60 Hz it is 16.7 s of lead and lag time. To display the total recording duration, use the Event Browser in the GridVis® software.

i INFORMATION

The meter records the following during events:

- The full-wave RMS values for L1-L3 with a resolution of 20 ms.
- The full-wave RMS values for L4-L6 (neutral or residual current, only with RCM module) with a resolution of 200 ms.
- 204.8 sample points per full wave at 50 Hz and 170.6 sample points at 60 Hz.
- The type of event, the duration, the deviation, the date and the RMS value.
- 6000 events "Qualitatively" and 200 "Quantitatively" and shows them in the display.

The measurement device distinguishes between internal and external events:

13.19.1 Internal events

An internal event exists when set limit values are exceeded or undershot. When doing so, the meter compares the set limit values with the **full-wave RMS values** from the measuring channels.

When one of these events occurs, recording is started automatically:

- Voltage interruption (U_{off})
- Undervoltage (U_{min})
- Overvoltage (U_{max})
- Overcurrent (I_{max})
- Comparator event (see below)
- Fast voltage events (class S only)
- Frequency events (class S only)
- Overcurrent I4 (only with RCM module)
- Residual current I5, I6 (only with RCM module)

Comparator events (as of FW 3.50)

The result of a group 1 or 2 comparator can start an event recording, e.g. when the value falls below a threshold value (see section „13.14.7 Comparator (limit value monitoring)“ on page 72). You can configure comparator events in the GridVis® software under *Configuration > Logic > Comparator*.

You must configure the parameters for recording internal events exclusively in the GridVis® software (see section „13.19.3 Configuring events“ on page 88).

13.19.2 External events

You can also start ("trigger") an event recording using an external signal via:

- Modbus
- Digital inputs 1, 2 and 3.

Event logging via Modbus

When a Modbus event occurs, the meter starts sequence recording, which provides 20 ms values with a lead and lag time of 20 s each for the current and voltage.

You must trigger the external Modbus event in the GridVis® software or write a 1 to Modbus register 806.

The measurement device identifies an event via Modbus and displays it in the meter display with the trigger time:

| All events | | UMG 96-PQ-L | |
|------------|--------|-------------|--------------|
| Phase | Events | Date & Time | |
| --- | MODBUS | 21.10.21 | 07:59:36,489 |
| --- | MODBUS | 21.10.21 | 07:59:29,801 |
| --- | MODBUS | 21.10.21 | 07:59:29,000 |
| --- | MODBUS | 20.10.21 | 12:51:28,947 |
| L1..L3 | UMAX | 19.10.21 | 15:09:52,859 |
| L3 | UMAX | 19.10.21 | 15:09:52,859 |

Fig. Event list – entries of the Modbus events.

Event logging via digital inputs

External devices (signal generators) can be used, for example, to detect voltage dips when loads such as capacitors, motors or similar with high starting currents or inrush currents are switched in to circuits. In this case, the output of the external device must send a signal to a correspondingly configured digital input of the measurement device (cf. „9.1 Digital inputs“ on page 38).

The time stamp of the trigger time is also displayed in the event list:

| Ext. Dig. In | | UMG 96-PQ-L Test | |
|--------------|------------|------------------|--------------|
| Phase | Value | Date & Time | |
| --- | Dig. In. 3 | 26.10.21 | 15:50:11,532 |
| --- | Dig. In. 2 | 26.10.21 | 15:50:11,114 |
| --- | Dig. In. 1 | 26.10.21 | 15:50:11,114 |
| --- | Dig. In. 1 | 26.10.21 | 15:50:10,527 |
| --- | Dig. In. 2 | 26.10.21 | 15:50:10,519 |
| --- | Dig. In. 1 | 26.10.21 | 15:50:09,705 |

Fig. Event list – entries of the events on the respective digital input.

The trigger for the event can be the rising, falling or changing edge of the signal at the input.

You must configure the digital inputs in the GridVis® software (mode: *External event recording*) or in the following Modbus addresses:

| Digital input | Modbus address | Entry (short) | Start recording by |
|---------------|----------------|---------------|--------------------|
| Dig. In. 1 | 30046 | 5 | Rising edge |
| | | 6 | Falling edge |
| | | 7 | Changing edge |
| Dig. In. 2 | 30047 | 5 | Rising edge |
| | | 6 | Falling edge |
| | | 7 | Changing edge |
| Dig. In. 3 | 30048 | 5 | Rising edge |
| | | 6 | Falling edge |
| | | 7 | Changing edge |

Tab. Modbus addresses for event recording via digital inputs

13.19.3 Configuring events

You must configure internal events exclusively in the GridVis® software under *Configuration > Measurement > Power quality*.

You can also configure comparator events in the GridVis® software, however under *Configuration > Logic > Comparator*.

Specify limit values and the hysteresis as a percentage of the nominal value for the detection of:

- Undervoltage
- Overvoltage
- Voltage interruption
- Overcurrent
- and other cases with class S devices.

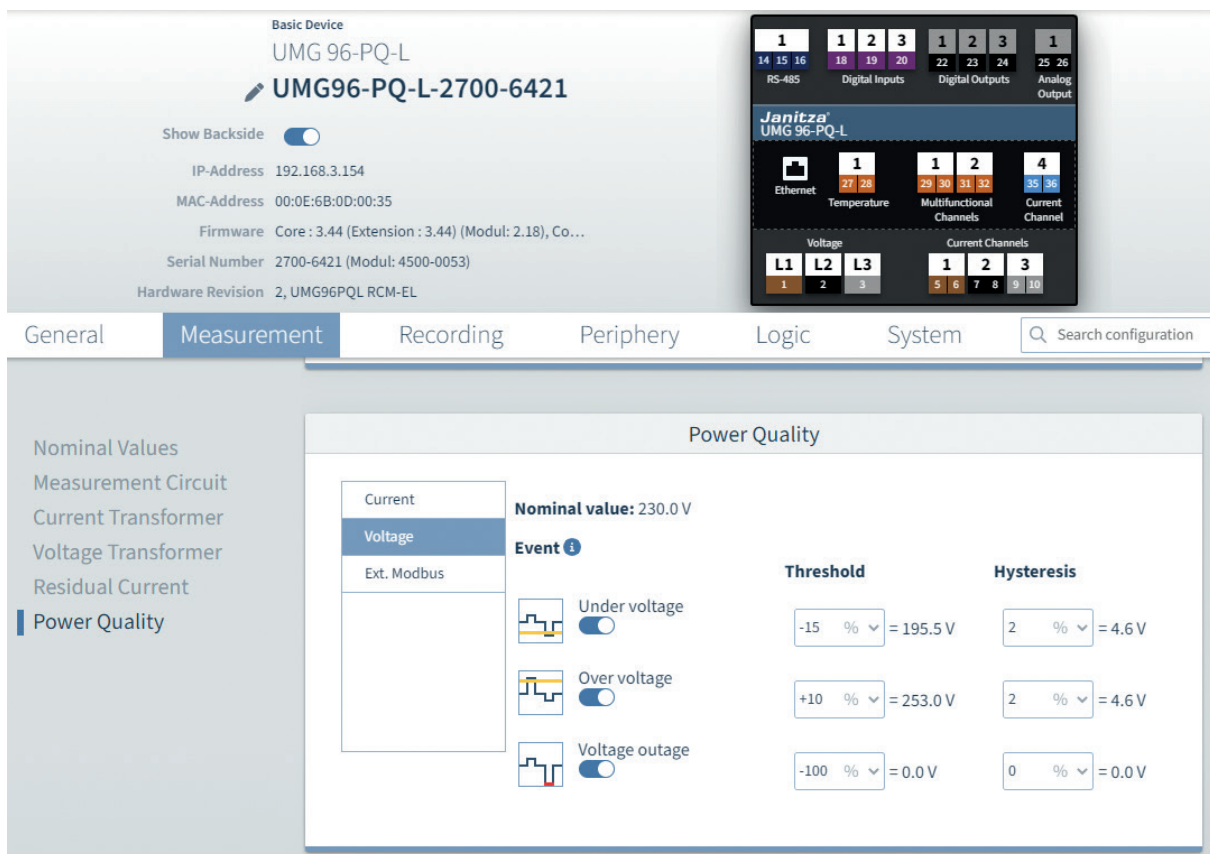


Fig. Configuration of the events in the GridVis software®


13.19.4 Event recording time

If an event has occurred, the measurement device records the associated measured value with 1000 full waves each as the lead and lag time. The length of the recording is therefore determined by the number of full waves. At 50 Hz, 1000 full waves correspond to the 20 s specified above. At 60 Hz, the lead and lag times are 16.7 s each.


Exception: If under *Recordings > Measured values Partition B* event-triggered recording is selected, then the **Recording time is 15 min.** (see section

„13.18.3 Default setting, Partition B“ on page 84).

If an event has not yet been completed at the end of the lag time, the measurement device starts another recording sequence at the end time of the event (cf. example 2). However, no sequence segment of the end time is shown on the meter display.

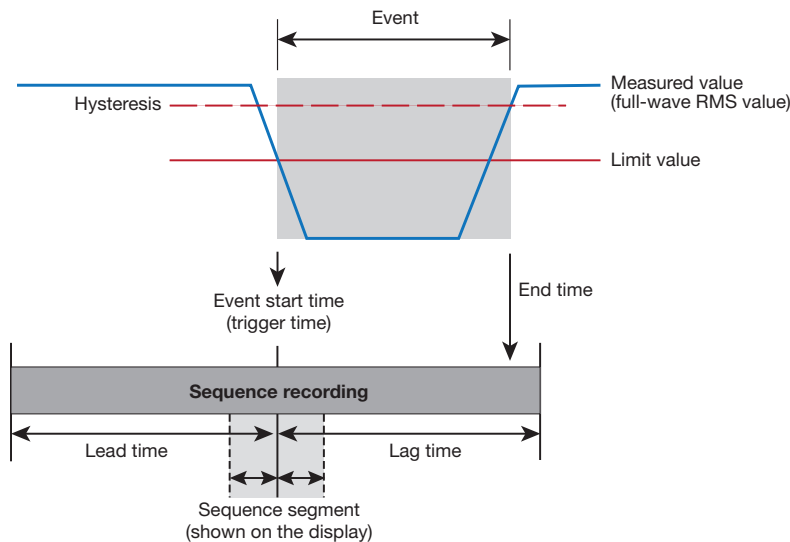

Example 1 of an event with a recording sequence (lead and lag time) and a sequence segment

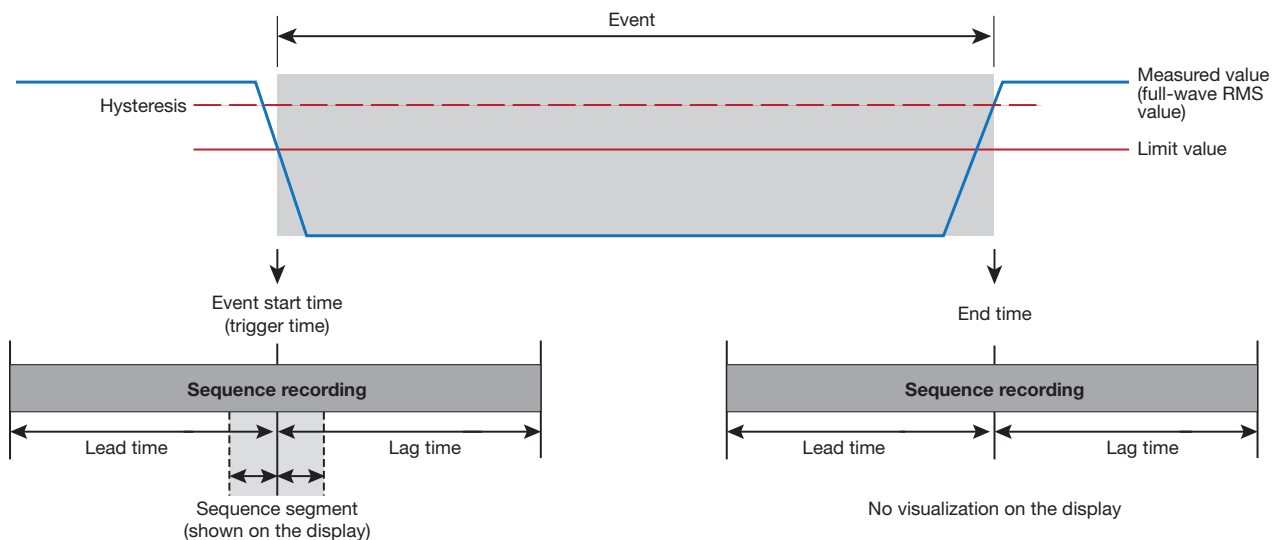

Example 2 of an event (> 20 s) with sequence recording (lead and lag time), sequence segment (displayed visualization) and sequence recording at the end time (lead and lag time)

13.19.5 Display of events

An overview of all events that have occurred is shown by the meter in lists for each event type. After selecting an event, the display shows a sequence segment of 2.5 s before and after the trigger time (cf. Example 1 on page 89).

Proceed as follows to display and evaluate a specific event on the meter:

- If you are not in the start screen, you can go to this view by pressing button 2 (Home).
- Open the menu with button 1 (Menu).
- Use buttons 3 (▼) and 4 (▲) to select the item *Event* and confirm with button 6 (Enter).
- The submenu with the event lists appears.



Fig. Events submenu

- Use buttons 3 (▼) and 4 (▲) to select the event type, e.g. the item *All*.
- Press button 6 (Enter).
- The *All events* window appears with an indication of the phase, event type, date and time of all events.

| All events | | UMG96-PQ-L-2700-0035 | |
|------------|--------|----------------------|--------------|
| Phase | Events | Date & Time | |
| L1..L3 | UMIN | 11.10.21 | 17:25:18,508 |
| L3 | UMIN | 11.10.21 | 17:25:18,589 |
| L2 | UMIN | 11.10.21 | 17:25:18,589 |
| L1 | UMIN | 11.10.21 | 17:25:18,589 |
| L1..L3 | UMAX | 11.10.21 | 17:25:18,508 |
| L3 | UMAX | 11.10.21 | 17:25:18,589 |

Fig. Event list with all events

- To display and evaluate an event, use buttons 3 (▼) and 4 (▲) to select the corresponding event (hold down button 3 (▼) or 4 (▲) to scroll).
- Confirm the selected list entry with button 6 (Enter).
- The window for evaluation of your event appears (in the example, the sequence of an undervoltage event U_{min}).

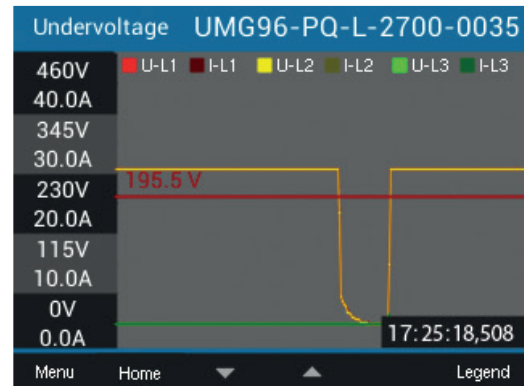


Fig. Sequence visualization of the undervoltage event

- Use button 6 (Legend) to show or hide the legend of the measuring channels.
- Use buttons 3 (▼) and 4 (▲) to switch the display to the previous or next event.
- Use button 1 (Menu) to go back through the displays step by step.

i INFORMATION

For better analysis, the GridVis® software visualizes recorded events in the event browser (Event Browser) and provides help on the events in the form of information texts and images. You can also retrieve the last completed event via Modbus-enabled third-party devices.

13.20 Tariff switching

The recording of electrical energy values (active, reactive and apparent energy) is done via internal meters for two tariffs each.

Switching between the tariffs (HT/LT) can be carried out via:

- Modbus
- Digital input 1
(see section „Digital inputs“ on page 68)

| Tariff | | | | UMG 96-PQ-L | | |
|--------|-----------------|---------------------|--------------------|-------------|--|--|
| Tariff | Active E. [kWh] | Reactive E. [kVARh] | Apparent E. [kVAh] | | | |
| 1 | 0 | 0 | 0 | | | |
| 2 | 0 | 10 | 10 | | | |
| 1 + 2 | 0 | 10 | 10 | | | |
| Menu | | | | Home | | |

Fig. Device display of the sum (L1..L3) of active, reactive and apparent energy according to tariffs

i INFORMATION

Configure tariff switching using the GridVis® software!

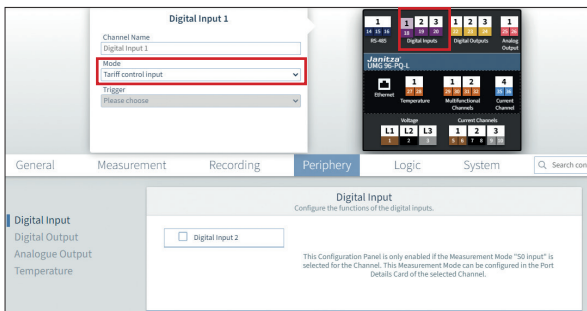


Fig. Configuration of digital input 1 as a tariff control input in the GridVis® software

13.21 Time synchronization

Synchronous data acquisition from several measurement devices requires that the device time in all measurement devices be synchronized regularly.

There are 4 options for time synchronization:

1. Via the **RS-485 interface** by means of a **UTC time stamp** in a Modbus address.
2. Via the **RS-485 interface** according to **DIN EN 60870** in several Modbus addresses.
3. Via the NTP protocol of a time server at the **Ethernet interface**. For this option, the device must have an Internet connection, e.g. via the 96-PA-RCM-EL module.
4. Via time pulses on **digital input 2** of the device.

The type of time synchronization must be configured in the GridVis® software.

13.21.1 RS-485 interface (UTC time pulse)

With this type of synchronization, the GridVis® software sends a UTC time stamp via the RS-485 interface (Modbus). The measurement device applies the time from the Modbus address 100.

13.21.2 RS-485 interface (DIN EN 60870)

The GridVis® software sends a time stamp for synchronization via Modbus. The Modbus addresses are based on the time structure of DIN EN 60870-5-4 in **local time** (summer/winter time):

| Modbus address | Function |
|----------------|---|
| 31500 | Synchronization in milliseconds |
| 31501 | Synchronization in minutes and hours |
| 31502 | Synchronization in date, weekdays, months |
| 31503 | Synchronization in years |

The device can monitor whether or not a time stamp for synchronization has been received. The monitoring time (*Validation interval*) is configurable (1 to 168 h, 0 = alarm switched off).

INFORMATION

If the validation interval has expired without the device having received a new time, the display shows the warning "Clock unsynchronized".

This warning is automatically removed as soon as the device has received a new time synchronization via the specified Modbus addresses.

Broadcast via Modbus

As an alternative to normal synchronization, any Modbus device can transmit the time as a broadcast data packet to other devices:

- One device is the time source (master) and sends the time in Modbus addresses as a broadcast.
- The devices connected via Ethernet or RS-485 receive the time without sending a synchronization signal in response.

13.21.3 Ethernet interface (NTP server)

To do so, the measurement device must be permanently connected to an NTP server on the Internet or in the local network via the module's Ethernet interface.

- In the device configuration of the GridVis® software, activate the time synchronization via NTP (external time server).
- Then configure the time synchronization via an NTP time server, e.g. from PTB (Physikalisch-Technische Bundesanstalt):

- ptbtime1.ptb.de
- ptbtime2.ptb.de
- ptbtime3.ptb.de

13.21.4 Digital input 2

You can round the device time up or down via a pulse at digital input 2. In the GridVis® device configurator, you can specify whether the pulse synchronizes minutes or hours. The examples in the table show how the device time is rounded up or down:

| | Time instant of the pulse (device time) | Pulse | New device time |
|------------------------|---|-------|-----------------|
| Configuration: Minutes | 12:18:29 | ⏏→ | 12:18:00 |
| | 12:18:30 | ⏏→ | 12:19:00 |
| Configuration: Hours | 12:29:59 | ⏏→ | 12:00:00 |
| | 12:30:01 | ⏏→ | 13:00:00 |

13.22 "Low battery" and "Set time" warnings

i INFORMATION

The measurement device

- Sets the time to the factory setting when the supply voltage is disconnected and the battery is simultaneously spent or after the battery is changed, meaning it is therefore considered "not set"!
- Saves correct data records only when the time is set!

To ensure that a battery change takes place without loss of data, the device warns of an imminent battery change with the warning message **"Battery voltage low"**:

| Battery level low 10:05 | | | | |
|-------------------------|---------|---------|----------------------|------|
| | Voltage | Current | Power | PF1 |
| L1 | 223V | 0.03A | 0.00kW | 1.00 |
| L2 | 223V | 0.03A | 0.00kW | 1.00 |
| L3 | 223V | 0.03A | 0.00kW | 1.00 |
| L1..L3 | 50.06Hz | 0.09A | 0.00kW | 1.00 |
| Active energy | | | Reactive energy ind. | |
| L1..L3 | 0.0kWh | | 0.0kvarh | |
| Menu | | | Alarms | |

Fig. Warning "Battery level low"

- **Change the battery as described in section „15.6 Clock/Battery“ on page 111!**
- After the battery change, the device display shows the warning message **"Please set the time"**.
- Configure the time (date, time) as described in chap. 12.6 on page 53.

| Please set the time 10:00 | | | | |
|---------------------------|---------|---------|----------------------|------|
| | Voltage | Current | Power | PF1 |
| L1 | 223V | 0.03A | 0.00kW | 1.00 |
| L2 | 223V | 0.03A | 0.00kW | 1.00 |
| L3 | 223V | 0.03A | 0.00kW | 1.00 |
| L1..L3 | 50.06Hz | 0.09A | 0.00kW | 1.00 |
| Active energy | | | Reactive energy ind. | |
| L1..L3 | 0.0kWh | | 0.0kvarh | |
| Menu | | | Alarms | |

Fig. Warning "Please set the time"

13.23 Power quality according to class S (option)

Class S measurement devices according to IEC 61000-4-30 are used as network analyzers for continuous monitoring of power quality (PQ).

Already installed measurement devices can be enabled for class S via software.

The UMG 96-PQ-L "Class S" also records the following power quality performance characteristics:







- Interharmonics
- Flicker
- Unbalance of voltage and current
- Mains signal voltages (ripple control signals)
- Rapid voltage changes
- Over/under frequency events

With a UMG 96-PQ-L "Class S", you can record the power quality (PQ) according to DIN EN 50160 down to subdistribution panels:

- All PQ measured values can be displayed with the GridVis® software and visualized using reports, or read out in Modbus addresses (current and historical values in each case).
- You can also configure the recording of PQ measured values in the GridVis® software (*Recordings > Profile*) or with the Modbus address list.
- The GridVis® software and the Modbus address list are available for download on our website (www.janitza.com).

i INFORMATION

The "Power Quality Characteristics" manual contains more detailed information on the power quality characteristics described below, including information on their causes and effects.

| Disturbance category | Recorded data | Measurement device display | Via GridVis®/Modbus: | |
|---|--|----------------------------|----------------------|---|
| | | | Measured values | Configuration |
| Interharmonics  | Interharmonics voltage and current L1, L2, L3 and their relative share | No display | Yes | Recording |
| Flicker  | Flicker instantaneous value, Short-term and long-term flicker | | Yes | Recording, Setting the frequency (50 or 60 Hz) |
| Unbalance  | Voltage and current: Instantaneous value, average value, min/max values with time instants | | Yes | Recording |
| Mains signal voltage  | Voltage level for set frequency | | Yes | Recording, setting the ripple control frequency |
| Rapid voltage changes  | As with other internal events, see: chap. 13.19 on page 86 | Only display of the event | Yes | Switch on/off, Nominal values in V/A, limit values and in percent |
| Over/under frequency events  | | | Yes | |

Tab. Recorded power quality measured values according to class S

13.23.1 Interharmonics

Interharmonics are sinusoidal oscillations whose frequency is not an integer multiple of the fundamental frequency. They can cause flickering of displays and lamps, as well as heat and transmission problems.

13.23.2 Flicker

A flicker is a brief fluctuation of the operating voltage, which, in the case of unregulated electric light sources (fluorescent tubes, incandescent lamps), leads to a visually perceptible fluctuation of the luminance. Flicker is caused, for example, by periodic load fluctuations of larger consumers and the associated voltage drop on lines.

13.23.3 Unbalance

In an unbalanced network, the three phase voltages and currents are either unequal in magnitude or have a phase shift other than 120°.

13.23.4 Mains signal voltage

Ripple control signals, for example, are modulated with the aid of mains signal voltages. They also represent a disturbance of the ideal sinusoidal waveform, which can impair the function of electrical equipment. The EN 50160 standard requires that this signal be recorded with a 3-second interval.

13.23.5 Rapid voltage changes

The measurement device detects voltage dips, voltage swells and voltage interruptions according to IEC 61000-4-30. These trigger the recording as with other internal events (see chap. 13.19 on page 86).

13.23.6 Over/under frequency events

If the power drawn is greater or less than the power fed in over time, frequency variations can occur which can damage sensitive equipment (e.g. motors) and cause additional heat loss. Such frequency

events trigger recording as an internal event (see chap. 13.19 on page 86).

13.23.7 Subsequent class S activation

For devices that are already installed, class S activation is still possible via the GridVis® software for a fee.

- Order part number 5236020 stating the serial number of the device. We will then send you a generated activation code by email.

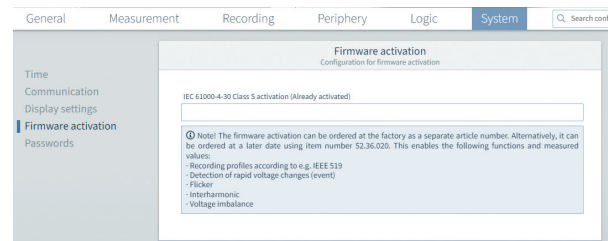


Fig. Firmware activation in the GridVis® software


- Enter the activation code in the device configurator in the GridVis® software under *System > Firmware activation*.
- Transfer the configuration to the device.

This enables the device for class S and the additional functions for PQ monitoring are also available.

i INFORMATION

Each activation code is specific to the device with that serial number. Once a device has been activated, it cannot be reset to its previous state.

14. Overview of menus and displays

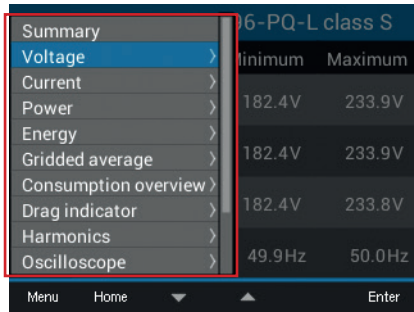


Opening a menu

- Press button 1 (*Menu*) to open the menu.
- Use buttons 3 (▼) and 4 (▲) to select the desired menu and confirm with button 6 (*Enter*).

The most important displays are shown below (depending on the equipment).

14.1 Overview menu (start screen)

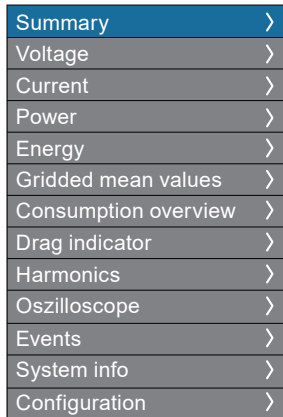

Start screen (depending on the connection variant)

| Summary | | UMG 96-PQ-L | | | |
|---------|---------|---------------|-------|----------------------|--|
| | Voltage | Current | Power | PF1 | |
| L1 | 223V | 0.03A | 0.0kW | ≈ 1.00 | |
| L2 | 223V | 0.03A | 0.0kW | ≈ 1.00 | |
| L3 | 223V | 0.03A | 0.0kW | ≈ 1.00 | |
| L1..L3 | 50.06Hz | 0.09A | 0.0kW | ≈ 1.00 | |
| | | Active energy | | Reactive energy ind. | |
| L1..L3 | | 0.0kWh | | 0.0kvarh | |

Three-phase 4-conductor system: Display of

- Voltage L1-N, L2-N, L3-N, frequency;
- Current L1, L2, L3 and sum of L1..L3;
- Power L1, L2, L3 and sum of L1..L3;
- Power factor and sum of L1..L3;
- Sum of active and reactive energy L1-L3

| Summary | | UMG 96-PQ-L | | | |
|---------|---------|---------------|--------|----------------------|--|
| | Voltage | Current | Power | PF1 | |
| L1-L2 | 0V | 0.000A | --- | --- | |
| L2-L3 | 0V | 0.000A | --- | --- | |
| L3-L1 | 0V | 0.000A | --- | --- | |
| L1..L3 | 50.00Hz | 0.000A | 0.00kW | < 1.00 | |
| | | Active energy | | Reactive energy cap. | |
| L1..L3 | | -0.0kWh | | 0.0kvarh | |

Three-phase 3-conductor system: Display of

- Voltage L1-L2, L2-L3, L3-L1, frequency;
- Current L1, L2, L3 and vectorial sum of L1..L3;
- Sum values: Power, power factor, active and reactive energy L1-L3

| Summary | | UMG 96-PQ-L | | | |
|---------|---------|-------------|----|-------|--|
| | I | I max. | U | 3 x P | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| L3 | 0.00A | 0.00A | 0V | 0.0kW | |
| | | --- | | --- | |
| | | Frequency | | | |
| L3 | 50.00Hz | | | | |


Symmetrically loaded networks 3 x L3 (3p1w): Display of

- Current, maximum current and voltage per network
- Power per network (multiplied by factor 3)
- Frequency

i INFORMATION

- With the 3p1w connection variant (3 x L3), the start screen shows correct measured values. Other display indicators are not designed for this connection variant and may show invalid measured values. This mainly affects the following menus or displays:
- Voltage >Phasor diagram
 - Power (active, reactive and apparent power)
 - Energy (active, reactive and apparent energy, tariff)
 - Consumption overview
 - Drag indicator

14.2 Voltage menu

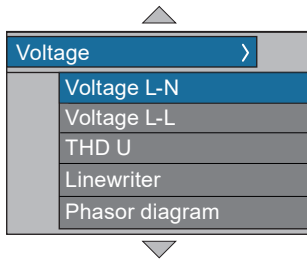

Voltage L-N

| Voltage UMG 96-PQ-L class S | | | |
|-----------------------------|--------|---------|---------|
| | Value | Minimum | Maximum |
| L1-N | 230.2V | 0.0V | 234.4V |
| L2-N | 230.2V | 0.0V | 234.4V |
| L3-N | 230.1V | 0.0V | 234.3V |
| f | 50.0Hz | 49.9Hz | 50.0Hz |

Display of voltage L1-N, L2-N, L3-N, the min/max values and the frequency

Voltage L-L

| Voltage UMG 96-PQ-L | | | |
|---------------------|-------|---------|---------|
| | Value | Minimum | Maximum |
| L1-L2 | 1.3V | 0.1V | 223.8V |
| L2-L3 | 2.0V | 0.1V | 223.7V |
| L1-L3 | 0.0V | 0.0V | 0.0V |


Display of voltage L1-L2, L2-L3, L1-L3 and their min. / max. values

THD U

| THD U UMG96-PQ-L-2700-6421 | | | |
|----------------------------|--------|---------|---------|
| | Value | Minimum | Maximum |
| L1-N | 69.06% | 45.90% | 121.1% |
| L2-N | 143.0% | 81.49% | 164.2% |
| L3-N | 229.8% | 122.0% | 1127% |


Total distortion factors of the voltages relative to the fundamental oscillation

History

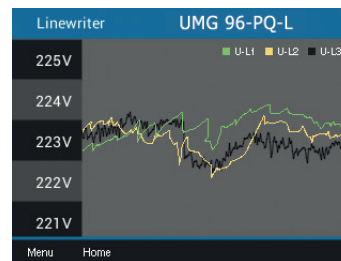


Display of voltage history of L1-N, L2-N, L3-N

Phasor diagram (star) (Three-phase 4-conductor system)

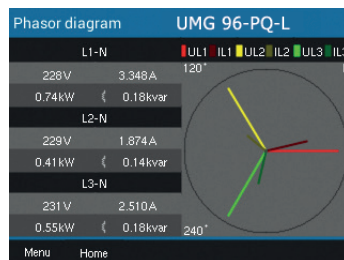


Phase shifts between voltages (long) and currents (short).
For colors, see Configuration > Display.

Phasor diagram (triangle) (Three-phase 3-conductor system)

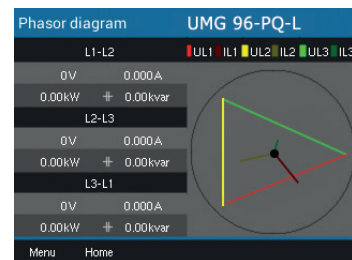

Phase shifts between voltages (long) and currents (short).
For colors, see Configuration > Display.

14.3 Current menu

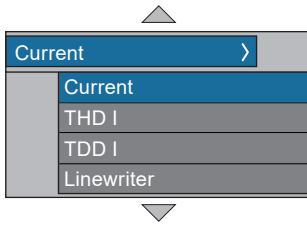

Current

| Current | | UMG 96-PQ-L class S | |
|---------|--------|---------------------|--------|
| | Value | Max. avg. | Max. |
| L1 | 0.7A | 0.7A | 0.7A |
| L2 | 0.7A | 0.7A | 0.7A |
| L3 | 0.7A | 0.7A | 0.7A |
| L4 | --- | --- | --- |
| L1..L3 | 2.071A | 2.069A | 2.137A |
| Menu | | Home | Delete |

Current L1-N, L2-N, L3-N, L4.
L1..L3 is the calculated neutral conductor current (sum of the vectors L1, L2, L3)

THD-I

| THD I | | UMG 96-PQ-L | |
|-------|--------|-------------|---------|
| | Value | Minimum | Maximum |
| L1 | 16.19% | 15.84% | 16.43% |
| L2 | 16.19% | 15.78% | 16.46% |
| L3 | 16.23% | 15.82% | 16.41% |
| Menu | | Home | Min/Max |


Total distortion factors of the currents relative to the fundamental oscillation

TDD I

| TDD I | | UMG96-PQ-L-2700-6421 | |
|-------|--------|----------------------|---------|
| | Value | Average | Maximum |
| L1 | 0.000% | 0.000% | 0.000% |
| L2 | 0.000% | 0.000% | 0.000% |
| L3 | 0.000% | 0.000% | 0.000% |
| Menu | | Home | Delete |


Distortion relative to the configured nominal current (Total Demand Distortion)

History

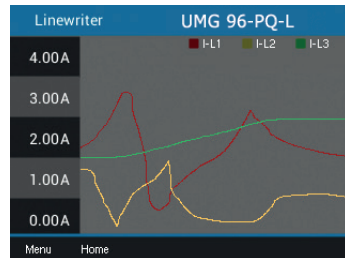

Current histories L1-N, L2-N, L3-N

14.4 Power menu

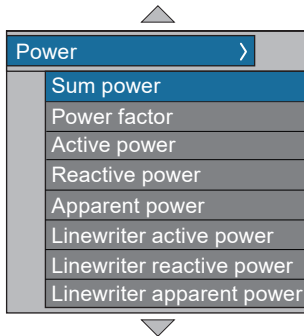

Total power

| Power UMG 96-PQ-L | | | |
|-------------------|----------|---------|----------|
| | Value | Minimum | Maximum |
| P | -0.1 W | -0.1 W | 0.1 W |
| Q | 19.6 VAr | 0.0 VAr | 19.7 VAr |
| S | 19.9 VA | 0.1 VA | 23.1 VA |

Sum (L1..L3) of active, reactive, apparent power and their min./max. values

Power factor

| Power factor UMG 96-PQ-L-LP | |
|-----------------------------|--------|
| | Value |
| L1 | + 1.00 |
| L2 | + 1.00 |
| L3 | + 1.00 |
| L1..L3 | + 1.00 |


Amount of active power in relation to apparent power

Active, reactive, apparent power

| Active power UMG 96-PQ-L | | | |
|--------------------------|--------|---------|---------|
| | Value | Minimum | Maximum |
| L1 | -0.0 W | -0.0 W | 0.5 W |
| L2 | -0.0 W | -0.5 W | 0.0 W |
| L3 | -0.0 W | -0.0 W | 0.0 W |


Power values L1-N, L2-N, L3-N and their min./max. values (only available in three-phase 4-conductor systems)

History of active, reactive, apparent power

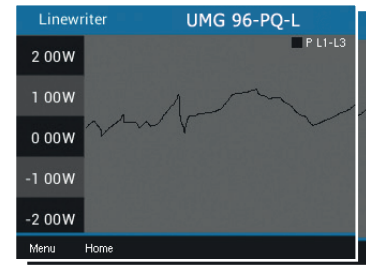

History of active, reactive or apparent power (sum L1..L3)

14.5 Energy menu

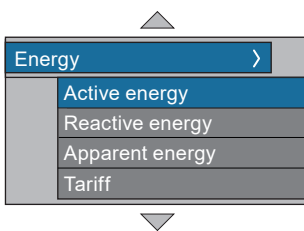

Active, reactive, apparent energy

| Active energy UMG 96-PQ-L | |
|---------------------------|---------|
| Sum L1..L3 | |
| Total | 0.0 kWh |
| Consumed | 0.0 kWh |
| Delivered | 0.0 kWh |


Sum (L1..L3) of active, reactive and apparent energy

Tariff

| Tariff UMG 96-PQ-L | | | |
|--------------------|-----------------|---------------------|--------------------|
| Tariff | Active E. [kWh] | Reactive E. [kVArh] | Apparent E. [kVAh] |
| 1 | 0 | 0 | 0 |
| 2 | 0 | 10 | 10 |
| 1 + 2 | 0 | 10 | 10 |

Sum (L1..L3) of active, reactive and apparent energy according to tariffs

14.6 Gridded averages menu

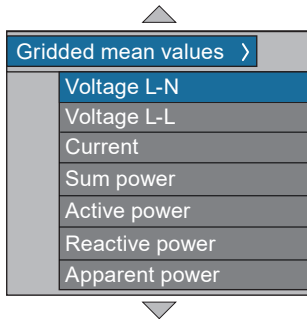

Voltage L-N

| Gridded U L-N | | UMG 96-PQ-L | | |
|---------------|-------|-------------|---------|--|
| | Value | Minimum | Maximum | |
| L1-N | 0.0V | 0.0V | 0.0V | |
| L2-N | 0.0V | 0.0V | 0.0V | |
| L3-N | 0.0V | 0.0V | 0.0V | |

Gridded averages for voltages

Voltage L-L

| Gridded U L-L | | UMG 96-PQ-L | | |
|---------------|-------|-------------|---------|--|
| | Value | Minimum | Maximum | |
| L1-L2 | 0.0V | 0.0V | 0.0V | |
| L2-L3 | 0.0V | 0.0V | 0.0V | |
| L3-L1 | 0.0V | 0.0V | 0.0V | |

Gridded averages for voltages

Current

| Gridded I | | UMG 96-PQ-L-LP | | |
|-----------|-------|----------------|---------|--|
| | Value | Minimum | Maximum | |
| L1 | 0.0A | 0.0A | 0.0A | |
| L2 | 0.0A | 0.0A | 0.0A | |
| L3 | 0.0A | 0.0A | 0.0A | |
| L4 | 0.0A | 0.0A | 0.0A | |
| L1..L3 | 0.0A | 0.0A | 0.0A | |

Gridded averages for currents

Total power

| Gridded Power | | UMG 96-PQ-L-LP | | |
|---------------|-------|----------------|---------|--|
| | Value | Minimum | Maximum | |
| P | 0kW | 0kW | 0kW | |
| Q | 0kvar | 0kvar | 0kvar | |
| S | 0kVA | 0kVA | 0kVA | |

Gridded averages for active power

Active power *

| Gridded P | | UMG 96-PQ-L-LP | | |
|-----------|-------|----------------|---------|--|
| | Value | Minimum | Maximum | |
| L1 | 0.0kW | 0.0kW | 0.0kW | |
| L2 | 0.0kW | 0.0kW | 0.0kW | |
| L3 | 0.0kW | 0.0kW | 0.0kW | |
| L1..L3 | 0kW | 0kW | 0kW | |

Gridded averages for active power

Reactive power *

| Gridded Q | | UMG 96-PQ-L-LP | | |
|-----------|---------|----------------|---------|--|
| | Value | Minimum | Maximum | |
| L1 | 0.0kvar | 0.0kvar | 0.0kvar | |
| L2 | 0.0kvar | 0.0kvar | 0.0kvar | |
| L3 | 0.0kvar | 0.0kvar | 0.0kvar | |
| L1..L3 | 0kvar | 0kvar | 0kvar | |

Gridded averages for reactive power


Apparent power *

| Gridded S | | UMG 96-PQ-L-LP | | |
|-----------|--------|----------------|---------|--|
| | Value | Minimum | Maximum | |
| L1 | 0.0kVA | 0.0kVA | 0.0kVA | |
| L2 | 0.0kVA | 0.0kVA | 0.0kVA | |
| L3 | 0.0kVA | 0.0kVA | 0.0kVA | |
| L1..L3 | 0kVA | 0kVA | 0kVA | |


Gridded averages for apparent power

* only available for 4w3m, 3p1w

14.7 Consumption overview menu

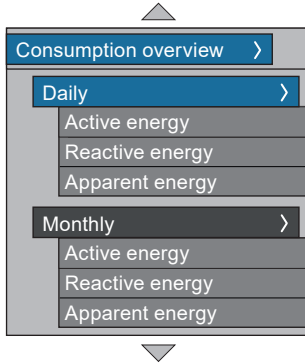


Daily

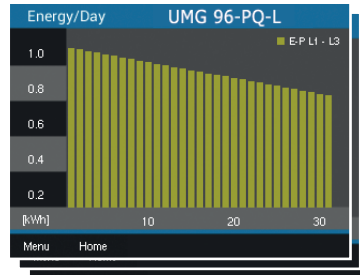


Display of active, reactive or apparent energy per day of the current month

Monthly

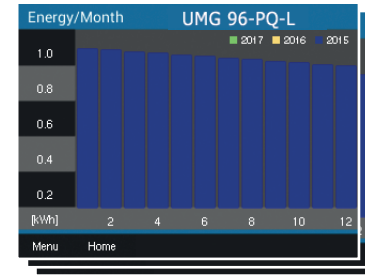

Display of active, reactive or apparent energy per month of the last three years

14.8 Drag indicator menu

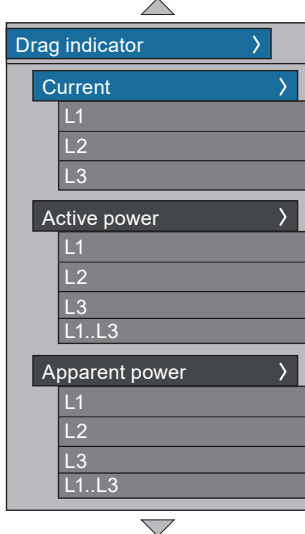

Current L1, L2, L3

| Current L1 UMG 96-PQ-L | | | |
|------------------------|--------|-------------|-------|
| Drag indicator | Value | Date & Time | |
| 1. | 5.033A | 27.07.20 | 11:38 |
| 2. | 4.158A | 27.07.20 | 11:40 |
| 3. | 3.825A | 27.07.20 | 11:37 |

Drag indicator: The 3 highest, last-measured values, averaged over the set period duration.

Drag indicator display of the currents with the 3 maximum values and time stamp

Active power L1, L2, L3

| Active power L1 UMG 96-PQ-L | | | |
|-----------------------------|--------|-------------|---------|
| Drag indicator | Value | Date & Time | |
| 1. Con. | 1395W | 14.07.20 | 10:50 |
| 2. Con. | 1188W | 01.08.20 | 09:58 |
| 3. Con. | 0.000W | - - - - | - - - - |
| 1. Del. | 395W | 14.07.20 | 10:50 |
| 2. Del. | 270W | 01.08.20 | 09:58 |
| 3. Del. | 0.000W | - - - - | - - - - |

Drag indicator display of the active powers (Con. = consumed, Del. = delivered)

Active power, sum L1..L3

| Active power Σ UMG 96-PQ-L | | | |
|-----------------------------------|-------|-------------|-------|
| Drag indicator | Value | Date & Time | |
| 1. Con. | 3487W | 27.07.20 | 11:38 |
| 2. Con. | 2886W | 27.07.20 | 11:40 |
| 3. Con. | 2201W | 27.07.20 | 11:37 |
| 1. Del. | 1395W | 27.07.20 | 11:43 |
| 2. Del. | 1395W | 27.07.20 | 11:44 |
| 3. Del. | 1188W | 27.07.20 | 11:42 |

Drag indicator display of the active power sum L1..L3 (Con. and Del.)

Apparent power L1, L2, L3

| Apparent pwr L1 UMG 96-PQ-L | | | |
|-----------------------------|-------|-------------|-------|
| Drag indicator | Value | Date & Time | |
| 1. | 739VA | 27.07.20 | 11:38 |
| 2. | 818VA | 27.07.20 | 11:40 |
| 3. | 737VA | 27.07.20 | 11:37 |


Drag indicator display of the apparent power

Apparent power, sum L1..L3


| Apparent pwr Σ UMG 96-PQ-L | | | |
|-----------------------------------|--------|-------------|-------|
| Drag indicator | Value | Date & Time | |
| 1. | 3487VA | 27.07.20 | 11:38 |
| 2. | 2886VA | 27.07.20 | 11:40 |
| 3. | 2201VA | 27.07.20 | 11:37 |

Drag indicator display of the apparent power sum L1..L3

14.9 Harmonics menu

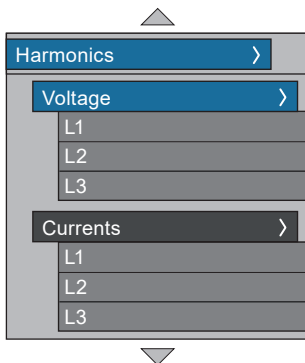


Voltage L1, L2, L3

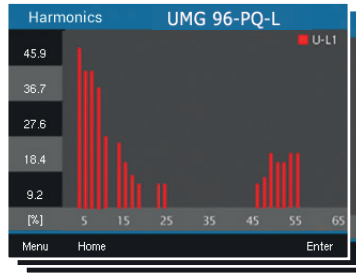

Display of harmonics up to the 65th harmonic. (Voltage L1, L2, L3)

Current L1, L2, L3

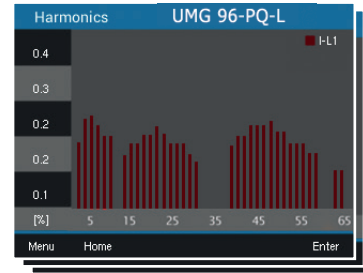


Display of harmonics up to the 65th harmonic. (Current L1, L2, L3)


i INFORMATION

Further menu items are available with module 96-PA-RCM-EL.

14.10 Oscilloscope menu

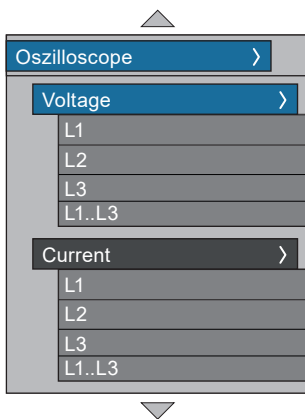


Voltage L1 / L2 / L3

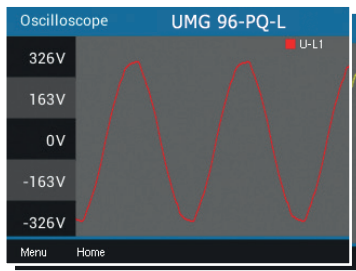


Display oscillogram of voltage L1, L2 or L3

Voltage L1..L3

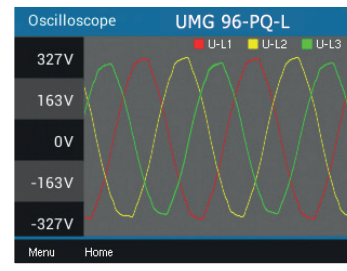


Display oscillogram of voltages L1, L2 and L3

Current L1 / L2 / L3

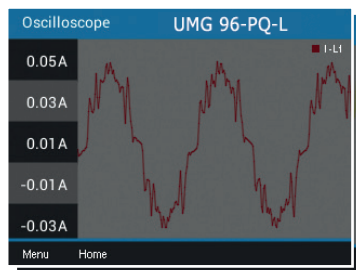


Display oscillogram of the currents L1, L2 or L3

Current L1 / L2 / L3

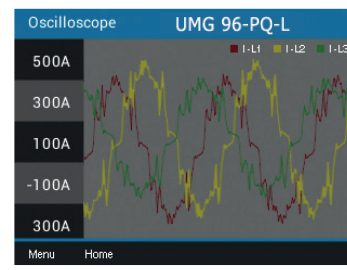

Display oscillogram of the currents L1, L2 or L3


14.11 Events menu

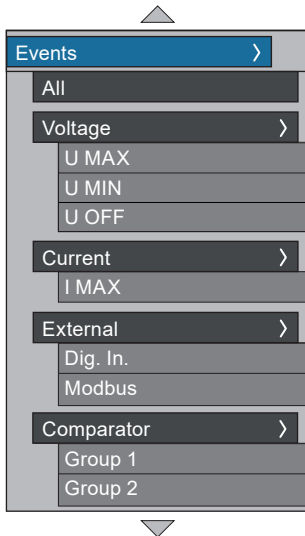

All events

| Phase | Events | Date & Time |
|--------|--------|-----------------------|
| L1..L3 | UMIN | 11.10.21 17:25:18,508 |
| L3 | UMIN | 11.10.21 17:25:18,589 |
| L2 | UMIN | 11.10.21 17:25:18,589 |
| L1 | UMIN | 11.10.21 17:25:18,589 |
| L1..L3 | UMAX | 11.10.21 17:25:18,508 |
| L3 | UMAX | 11.10.21 17:25:18,589 |

List of all events in the three-phase 4-wire system

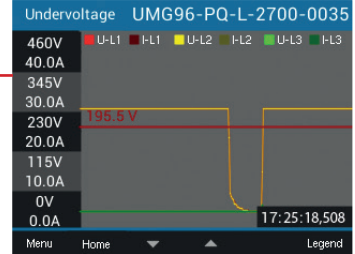


Sequence of undervoltage in three-phase 4-wire system

All events

| Phase | Events | Date & Time |
|--------|--------|-----------------------|
| --- | MODBUS | 02.11.21 14:20:24,000 |
| L1..L3 | UMAX | 02.11.21 14:13:07,960 |
| L3-L1 | UMAX | 02.11.21 14:13:07,960 |
| L2-L3 | UMAX | 02.11.21 14:13:07,960 |
| L1-L2 | UMAX | 02.11.21 14:13:07,960 |

List of all events in the three-phase 3-wire system

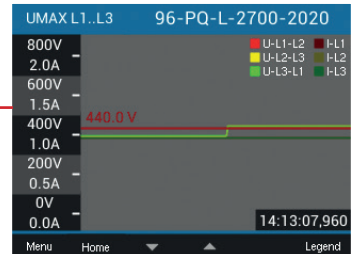

Sequence of an overvoltage in the three-phase 3-wire system

INFORMATION


Further menu entries are available with module 96-PA-RCM-EL or with class S measurement devices.

The manner of display for events and sequences differs depending on the configured **Connection variant** (see section „12.4.3 Connection variant“ on p. 49).

Overvoltage U MAX

| Phase | Value | Date & Time |
|--------|---------|-----------------------|
| L3 | 259.7 V | 28.10.21 11:03:14,939 |
| L2 | 259.6 V | 28.10.21 11:03:14,939 |
| L1 | 260.0 V | 28.10.21 11:03:14,939 |
| L1..L3 | 260.0 V | 28.10.21 10:59:14,940 |
| L3 | 259.9 V | 28.10.21 10:59:14,940 |
| L2 | 259.9 V | 28.10.21 10:59:14,940 |

List of overvoltage events

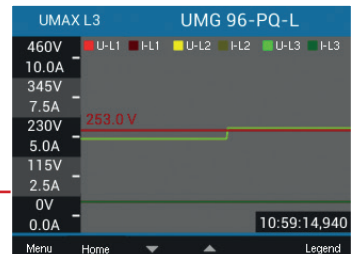


Sequence of an overvoltage event

Undervoltage U MIN

| Phase | Value | Date & Time |
|--------|---------|-----------------------|
| L1..L3 | 165.0 V | 11.10.21 17:25:18,589 |
| L3 | 68.7 V | 11.10.21 17:25:18,589 |
| L2 | 68.1 V | 11.10.21 17:25:18,589 |
| L1 | 68.1 V | 11.10.21 17:25:18,589 |
| L1..L3 | 110.6 V | 11.10.21 17:25:13,527 |
| L3 | 68.9 V | 11.10.21 17:25:13,527 |

List of undervoltage events

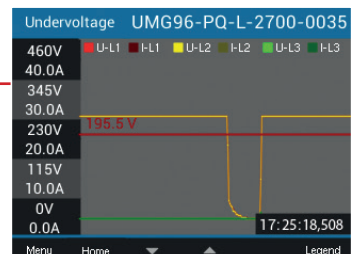


Sequence of an undervoltage event

Voltage interruption U OFF

| Phase | Value | Date & Time |
|--------|--------|-----------------------|
| L1..L3 | 9.8 V | 11.10.21 17:25:10,520 |
| L3 | 6.9 V | 11.10.21 17:25:10,520 |
| L2 | 7.1 V | 11.10.21 17:25:10,500 |
| L1 | 7.1 V | 11.10.21 17:25:10,500 |
| L1..L3 | 10.6 V | 11.10.21 17:08:40,200 |
| L3 | 3.8 V | 11.10.21 17:08:40,200 |

List of voltage interruptions

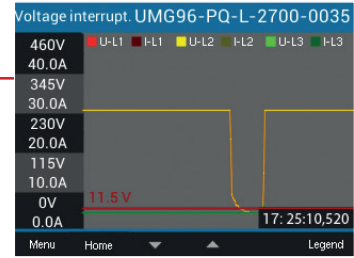


Sequence of a voltage interruption

Overcurrent I MAX

| Phase | Value | Date & Time |
|--------|--------|-----------------------|
| L1..L3 | 6.00 A | 28.10.21 11:12:10,340 |
| L3 | 5.92 A | 28.10.21 11:12:10,340 |
| L1 | 5.84 A | 28.10.21 11:12:10,340 |
| L2 | 6.00 A | 28.10.21 11:12:10,340 |
| L1..L3 | 6.00 A | 28.10.21 11:10:10,340 |
| L3 | 6.00 A | 28.10.21 11:10:10,340 |

List of all overcurrent events

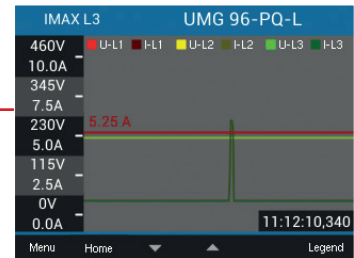


Sequence of an overcurrent event

External > Digital input

| Phase | Value | Date & Time |
|-------|------------|-----------------------|
| --- | Dig. In. 0 | 11.10.21 17:20:10,039 |
| --- | Dig. In. 0 | 11.10.21 17:20:10,039 |
| --- | Dig. In. 0 | 11.10.21 17:19:29,039 |
| --- | Dig. In. 0 | 11.10.21 17:19:29,039 |
| --- | Dig. In. 0 | 11.10.21 17:18:43,039 |
| --- | Dig. In. 0 | 11.10.21 17:18:43,039 |

List of external events via digital inputs

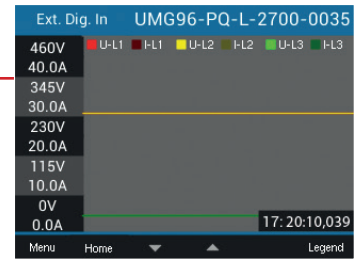


Sequence of an event at a digital input

External > Modbus

| Phase | Value | Date & Time |
|-------|-------|-----------------------|
| --- | --- | 11.10.21 17:15:11,411 |
| --- | --- | 11.10.21 17:15:09,489 |
| --- | --- | 11.10.21 17:15:07,476 |
| --- | --- | 11.10.21 17:14:49,000 |

List of external Modbus events

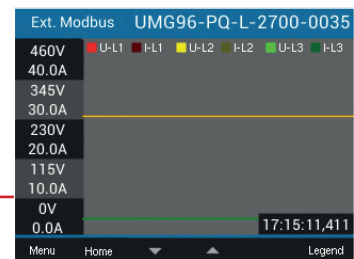


Sequence of a Modbus event

Comparator

| Address | Name | Date & Time |
|---------|--------|-----------------------|
| 1000 | UMINL1 | 09.09.24 08:26:38,018 |

List of the events that were triggered by a comparator

14.12 System Info menu

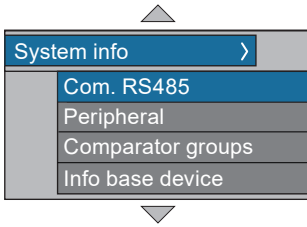

i INFORMATION

Further menu items are available with module 96-PA-RCM-EL.

RS-485 communication

| Com. RS485 | | UMG 96-PQ-L | |
|----------------|--------|-------------|-------|
| | RX | TX | Error |
| RS485 | 0 | 0 | 0 |
| RS485 Mode | Modbus | | |
| Device address | 1 | | |
| Baud rate | 115200 | | |
| Timeout | 350 ms | | |
| Menu Home | | | |


Received (RX), sent (TX) and faulty data packets, RS-485 mode, device address, baud rate and timeout

Peripherals

| Peripheral | | UMG 96-PQ-L | | |
|-------------|-------|-------------|-------|--|
| I/O | No. 1 | No. 2 | No. 3 | |
| Digital in | LOW | LOW | LOW | |
| Digital out | LOW | HIGH | LOW | |
| Analog out | 0.0mA | | | |
| Menu Home | | | | |


States of the digital inputs and outputs, value of the analog output

Comparator groups

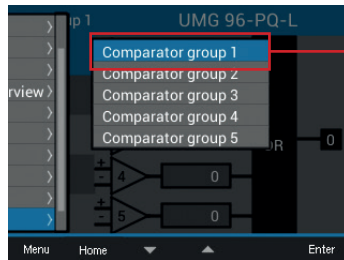

Selection of a comparator group

Comparator group 1

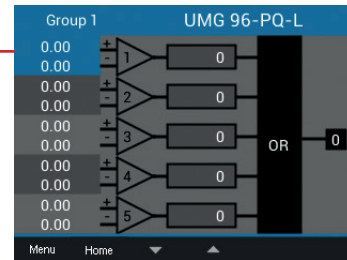

Display of limit value, actual value, comparator running time, logic and status

Basic device info

| Info base device | | UMG 96-PQ-L-LP | |
|------------------|------------------|----------------|--|
| Type | UMG 96-PQ-L-LP | | |
| Serial no. | 21000002 | | |
| SW/HW-Version | 3.55 / 1 | | |
| Software ID | 369648eebe9ebd0f | | |
| | 4bbe8934a1a3ea2a | | |
| Uptime | 0d 00h 01m 25s | | |
| Malo ID | --- | | |
| Menu Home | | | |

Device type, serial number, Firmware/hardware version, Software ID, Running time (since last power-on or software reset), Market location ID

14.13 Configuration menu – Password entry

The configuration of the measurement device can be protected with a password (the default setting is 00000, i.e. no password).

If a password is set, you must enter it to view or change the device configuration.

| | |
|----------------------|---|
| Summary | > |
| Voltage | > |
| Current | > |
| Power | > |
| Energy | > |
| Gridded mean values | > |
| Consumption overview | > |
| Drag indicator | > |
| Harmonics | > |
| Oszilloscope | > |
| Events | > |
| System info | > |
| Configuration | > |

Querying the current password

| Configuration | |
|---------------|--------------------------------------|
| Password | 00000 |
| Version | 3.10 |
| Software ID | 7b967fed0351809e 096364c82ada249c |
| Esc Enter | |

| Configuration | |
|---------------|--------------------------------------|
| Password | 00000 |
| Version | 3.40 |
| Software ID | 7b967fed0351809e 096364c82ada249c |
| Esc Enter | |

Enter the password using buttons 3 (▼) and 4 (▲).
Switch between the digits using buttons 2 (◀) and 5 (▶).

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |
| Esc ▼ ▲ Enter | |

After entering the password, you can access the configuration (see the following pages).



14.14 Configuration menu – without password/after password entry

| | |
|----------------------|---|
| Summary | > |
| Voltage | > |
| Current | > |
| Power | > |
| Energy | > |
| Gridded mean values | > |
| Consumption overview | > |
| Drag indicator | > |
| Harmonics | > |
| Oszilloscope | > |
| Events | > |
| System info | > |
| Configuration | > |

For information on the entries in the Configuration menu, see section, 12. Configuration" on p. 44.

Language

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

Setting the language, German/English

Communication

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

| Communication | |
|----------------|-----------|
| Field bus | |
| Device address | 1 |
| Baud rate | 115200 |
| Framing | 1 stopbit |

Fieldbus settings device address, baud rate and data frame

Measurement

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

Transformer

| Measurement | |
|-----------------|------|
| Transformer | -> |
| Nominal values | -> |
| Connection type | 4w3m |

Settings for the transformers, the nominal values and the connection variant (without RCM module)

| Measurement | | |
|---------------------|---------|-----------|
| | primary | secondary |
| Current transformer | 5A | 5A |
| Voltage transformer | 400V | 400V |

Settings of current and voltage transformers (primary and secondary)

Measurement

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |
| Esc | Enter |

Nominal values

| Measurement | |
|-------------------|------------------|
| Transformer | -> |
| Nominal values | -> |
| Connection type | 4w3m |
| Module mode | Residual current |
| Residual current | -> |
| Temp. sensor type | PT100 |
| Esc | Enter |

Settings for the transformers, nominal values and the connection variant. The lower 3 settings are only available in combination with the RCM module.

| Nominal values | |
|----------------|-------------------|
| Frequency | Auto (42,5-69 Hz) |
| Voltage | 230V |
| Current TDD | 150A |
| Current L1-L3 | 100A |
| Current L4 | 100A |
| Esc | Enter |

Nominal value settings, e.g: Current TDD: Nominal current under full load. Current L1..L3 (primary) and current L4 (neutral conductor current): for over-current events.

Display

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |
| Esc | Enter |

| Display | |
|----------------------|-------|
| Brightness | 70% |
| Standby delay | 900s |
| Brightness (standby) | 30% |
| Auto Home return | No |
| Home delay | 90s |
| Colors | -> |
| Esc | Enter |

Settings for brightness, standby time after and brightness (standby)

| Display | |
|----------------------|-------|
| Brightness | 70% |
| Standby delay | 900s |
| Brightness (standby) | 30% |
| Auto Home return | Yes |
| Home delay | 90s |
| Colors | -> |
| Esc | Enter |

Settings for automatic return to the start screen

| Display | |
|----------------------|-------|
| Brightness | 70% |
| Standby delay | 900s |
| Brightness (standby) | 30% |
| Auto Home return | Yes |
| Home delay | 90s |
| Colors | -> |
| Esc | Enter |

| | Colors | |
|-----|---------|---------|
| | Voltage | Current |
| L1 | | |
| L2 | | |
| L3 | | |
| Esc | Enter | |

Settings for the display colors of voltage and current (L1, L2, L3)

System

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

| System | |
|-------------------|---------------------|
| Version | 3.55 |
| Serial no. | 21000002 |
| Module version | 2.18 |
| Module serial no. | 45000053 |
| Time | 02.07.2024 15:58:59 |
| Password | 10000 |
| Reset | -> |

| Reset | |
|------------------|----|
| Energy | No |
| Min./Max. values | No |
| Factory settings | No |
| Restart | No |

Firmware version and serial number.
Setting the time and password

Resetting of energy measured values,
min. and max. values.
Reset to standard factory settings or
restart of the measurement device

Modbus editor

| Configuration | |
|---------------|---------|
| Language | English |
| Communication | -> |
| Measurement | -> |
| Display | -> |
| System | -> |
| Modbus Editor | -> |

| Communication | |
|---------------|------------|
| Modbus Editor | |
| Address | 30001 |
| Value | 0 |
| Minimum | 0 |
| Maximum | 65535 |
| Type | short |
| Access | read/write |


Display Modbus register (address, value)
and set values

15. Service and maintenance

Prior to outbound delivery, the device is subjected to various safety tests and is marked with a seal. If a device is opened, the safety tests must be repeated. A warranty is only assumed for unopened devices.

15.1 Repair and calibration

Repair and calibration of the device must only be carried out by the manufacturer or an accredited laboratory! The manufacturer recommends calibrating the device every 5 years!

 **WARNING**

Warning of unauthorized tampering or improper use of the device.
 Opening, dismantling or unauthorized manipulation of the device which goes beyond the mechanical, electrical or other operating limits indicated can lead to material damage or injury, up to and including death.

- Only electrically qualified personnel are permitted to work on the devices and their components, assemblies, systems and current circuits!
- Always use your device or component only in the manner described in the associated documentation.
- In the event of visible damage, or for the purpose of repair and calibration, return the device to the manufacturer!

15.2 Front panel foil and display

Please note the following for the care and cleaning of the front foil and the display:

INFORMATION

Material damage due to improper care and cleaning of the device.

The use of water or other solvents, such as denatured alcohol, acids, acidic agents for the front foil or the display can damage or destroy the device during cleaning. Water can, for example, penetrate into the device housing and destroy the device.

- Clean the device, the front foil or the display with a soft cloth.
- Use a cloth moistened with clear water for heavy soiling.
- Clean the front panel foil and the display, e.g. fingerprints, with a special LCD cleaner and a lint-free cloth.
- Do not use acids or acidic agents to clean the devices.

15.3 Service

For questions not answered or described in this manual, please contact the manufacturer. Please be certain to have the following information ready to answer any questions:

- Device designation (see rating plate)
- Serial number (see rating plate)
- Software release (see system display)
- Measured voltage and supply voltage
- An exact error description.

15.4 Device adjustment

The manufacturer adjusts the devices before delivery. No readjustment is required when the environmental conditions are complied with.

15.5 Firmware update

For a firmware update, connect your device to a computer and obtain access via the **GridVis®** software:

- Open the Firmware Update Wizard by clicking on "Update device" in the "Extras" menu.
- Select your update file and perform the update.

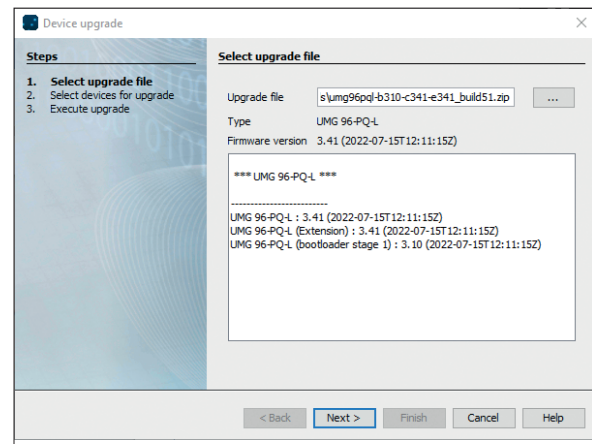


Fig. Updating the device firmware in the GridVis® software

15.6 Clock/Battery

The supply voltage supplies the internal clock of the measurement device. If the supply voltage fails, the battery takes over the supply of voltage to the clock. The clock provides date and time information, for example for recordings and min. and max. values.

INFORMATION

The device:

- Saves correct data records only when the time is set!
 - Sets the time to the factory setting when the supply voltage is disconnected and the battery is simultaneously spent or after the battery is changed, meaning it is therefore considered “not set”.
-

The life expectancy of the battery is at least 5 years at a storage temperature of +45° C. The typical battery life is 8 to 10 years.

The battery can be replaced via the battery insert on the bottom of the device. **When replacing the battery, make sure that the battery type and polarity are correct** (positive pole points to the rear of the device; negative pole points to the front of the device)!

Pay attention to the following when replacing the battery:



WARNING

Risk of injury due to electrical voltage!

Severe bodily injury or death can result from:

- Touching bare or stripped leads that are energized.
- Device inputs that pose a hazard when touched.

Observe the following when handling your device and when replacing the battery; before starting work:

- Disconnect the system/device from the power supply!
 - Secure it against being switched on!
 - Check to be sure it is de-energized!
 - Ground and short circuit!
 - Cover or block off adjacent live parts!
-

INFORMATION

Grease or dirt on the contact surfaces forms a contact resistance which shortens the service life of the battery. Only touch the battery by the edges.

16. Procedure in the event of a malfunction

| Failure mode | Cause | Remedy |
|---|--|---|
| No display | External fuse for the supply voltage has tripped. | Replace fuse. |
| No current display. | No measured voltage connected. | Connect measured voltage. |
| | No measured current connected. | Connect measured current. |
| Displayed current is too great or too small. | Current measurement on the wrong phase. | Check connection and correct if necessary. |
| | Current transformer factor incorrectly programmed. | Read and program the current transformer ratio on the current transformer. |
| | The peak current value at the measurement input was exceeded by current harmonics. | Install current transformers with a higher current transformer ratio. |
| | The current at the measurement input is too low. | Install current transformers with a lower current transformer ratio. |
| Displayed voltage is too low or too high. | Measurement on the wrong phase. | Check connection and correct if necessary. |
| | Voltage transformer programmed incorrectly. | Read the voltage transformer ratio on the voltage transformer and program. |
| Displayed voltage is too low. | Overrange. | Use a voltage transformer. |
| | The voltage peak value at the measurement input was exceeded due to harmonics current. | Attention! Make sure that the measurement inputs are not overloaded. |
| Phase shift, ind./cap. | Current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |
| Active power consumption / delivered is interchanged. | At least one current transformer connection is reversed. | Check connection and correct if necessary. |
| | A current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |
| Active power too small or too great. | The programmed current transformer ratio is incorrect. | Read and program the current transformer ratio on the current transformer |
| | The current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |
| | The programmed voltage transformer ratio is incorrect. | Read the voltage transformer ratio on the voltage transformer and program. |
| An input or output is not responding. | The input/output was programmed incorrectly. | Check programming and correct if necessary. |
| | The input/output was connected incorrectly. | Check connection and correct if necessary. |
| Display "Overrange" | The measuring range has been exceeded | Check connection and correct if necessary. Correct current/voltage transformer ratio. |
| No connection to the device. | RS-485 - Incorrect device address. - Different bus speeds (baud rate) and / or data frames - Incorrect protocol. - No termination. | - Correct the device address. - Correct the speed (baud rate). - Correct the data frame. - Correct the protocol. - Terminate bus with termination resistor. |
| Despite the above measures, the device does not function. | Device defective. | Send the device and error description to the manufacturer for inspection. |

17. Technical data

| General | |
|---|--|
| Net weight (with attached plug-in connectors) | approx. 250 g (0.55 lbs) |
| Package weight (incl. accessories) | approx. 500 g (1.1 lbs) |
| Battery | Type Lithium CR2032, 3 V, (UL 1642 approved) |
| Data memory | 64 MB |
| Backlight service life | 40000 h (backlight reduces to approx. 50% over this period) |
| Impact resistance | IK07 according to IEC 62262 |

| Transport and storage | |
|--|------------------------------------|
| The following information applies to devices that are transported or stored in their original packaging. | |
| Free fall | 1 m (39.37 in) |
| Temperature | -25 °C (-13 °F) to +70 °C (158 °F) |
| Relative air humidity (non-condensing) | 0 to 90% RH |

| Environmental conditions during operation | |
|--|---|
| Install the device in a weather-protected and stationary location. Protection class II according to IEC 60536 (VDE 0106, Part 1). | |
| Rated temperature range | -10 °C (14 °F) ... +55 °C (131 °F) |
| Relative air humidity (non-condensing) | 0 to 75% RH |
| Operating elevation | 0 .. 2000 m (6562 ft) above sea level |
| Pollution degree | 2 |
| Mounting orientation | As desired |
| Ventilation | No forced ventilation required. |
| Protection against foreign matter and water - Front - Rear - Front with seal | IP40 according to EN60529 IP20 according to EN60529 IP54 according to EN60529 |

| Supply voltage | | |
|---|--|---|
| Option 230 V | Nominal range | AC 90 V - 277 V (50/60 Hz) or DC 90 V - 250 V, 300 V CAT III |
| | Power consumption | max. 4.5 VA / 2 W |
| Option 24 V | Nominal range | AC 24 V - 90 V (50/60Hz) or DC 24 V - 90 V, 150 V CAT III |
| | Power consumption | max. 4.5 VA / 2 W |
| Operating range | +-10% of nominal range | |
| Internal fuse, not replaceable | Type T1A / 250 V DC / 277 V AC according to IEC 60127 | |
| Recommended overcurrent protective device for the line protection (UL approval) | Option 230 V: 6 - 16 A (Char. B) Option 24 V: 1 - 6 A (Char. B) | |

| Potential isolation and electrical safety of the interfaces |
|--|
| The RS-485 interface has: <ul style="list-style-type: none"> · Double insulation to the inputs of the voltage and current measurement. · Functional insulation relative to the supply voltage, to the digital inputs/outputs and to the analog output. · If module 96-PA-RCM-EL is present, there is also functional insulation to the Ethernet interface and to the measurement inputs for residual current and temperature. |
| The interfaces of the connected devices require double or reinforced insulation to mains voltages (according to IEC 61010-1). |

| Potential isolation and electrical safety of the digital inputs and outputs (I/O) and the analog output |
|---|
| The digital inputs and outputs as well as the analog output are equipped with: <ul style="list-style-type: none"> · Double insulation to the inputs of the voltage and current measurement. · Functional insulation relative to each other, to the supply voltage and to the RS-485 interface. · If module 96-PA-RCM-EL is present, there is also functional insulation to the Ethernet interface and to the multifunction channels. |

| Voltage measurement | |
|---|--|
| Three-phase 4-conductor systems with rated voltages up to | 417 V / 720 V (+-10%) according to IEC 347 V / 600 V (+-10%) according to UL |
| Three-phase 3-conductor systems with rated voltages up to | 600 V (+10%) |
| Single-phase 2-conductor system with rated voltages up to | 480 V (+-10%) |
| Overvoltage category | 600 V CAT III, 300 V CAT IV |
| Rated surge voltage | 6 kV |
| Protection of the voltage measurement | 1 - 10 A tripping characteristic B(with IEC/UL approval) |
| Measuring range L-N | 0 ¹⁾ .. 600 V _{rms} (max. overvoltage 800 V _{rms}) |
| Measuring range L-L | 0 ¹⁾ .. 1040 V _{rms} (max. overvoltage 1350 V _{rms}) |
| Resolution | 0.01 V |
| Crest factor | 2.45 (related to the measuring range) |
| Impedance | 3 MΩ/phase |
| Power consumption | approx. 0.1 VA |
| Sampling frequency | 13.67 kHz |
| Sampling frequency (IT variant) | 13.98 kHz |
| Frequency of the fundamental oscillation - Resolution | 45 Hz .. 65 Hz 0.01 Hz |
| Fourier analysis | 1st - 65th Harmonics |

1) The device only determines measured values if a voltage L1-N of greater than 20 V_{eff} (4-conductor measurement) or a voltage L1-L2 of greater than 34 V_{eff} (3-conductor measurement) is applied to voltage measurement input V1.

| Current measurement | |
|---------------------------------|-------------------------------------|
| Nominal current | 5 A |
| Measuring range | 0.005 .. 6 A _{rms} |
| Crest factor | 2 (relative to 6 A _{rms}) |
| Overvoltage category | 300 V CAT II |
| Rated surge voltage | 2 kV |
| Power consumption | approx. 0.2 VA (Ri=5 mΩ) |
| Overload for 1 s | 60 A (sinusoidal) |
| Resolution | 0.1 mA (display 0.01 A) |
| Sampling frequency | 13.67 kHz |
| Sampling frequency (IT variant) | 13.98 kHz |
| Fourier analysis | 1st - 65th Harmonics |

| Serial interface | |
|-----------------------------------|---|
| RS-485 - Modbus RTU/client device | 9.6 kbps, 19.2 kbps, 38.4 kbps, 57.6 kbps, 115.2 kbps |

| Digital outputs | |
|---|---------------------------------|
| 3 digital outputs, solid state relays, not short-circuit proof. | |
| Switching voltage | max. 33 V AC, 40 V DC |
| Switching current | max. 50 mA _{eff} AC/DC |
| Response time | approx. 200 ms |
| Pulse output | max. 50 Hz (energy pulses) |

| Digital inputs | |
|--|---------------------------------------|
| 3 digital inputs, solid state relays, not short-circuit proof. | |
| Maximum counter frequency | 20 Hz |
| Input signal applied | 18 V .. 28 V DC (typically 4 mA) |
| Input signal not applied | 0 .. 5 V DC, current less than 0.5 mA |

| Cable length (digital inputs/outputs) | |
|---------------------------------------|------------|
| Up to 30 m (32.81 yd) | Unshielded |
| Greater than 30 m (32.81 yd) | Shielded |

| Analog outputs | |
|-----------------------|-------------------|
| External power supply | max. 33 V |
| Current | 0 .. 20 mA |
| Update time | 1 s |
| Load | max. 300 Ω |
| Resolution | 10 bit |

| Connection capacity of the terminals (supply voltage) | |
|--|---------------------------------------|
| Connectible conductors. Only connect one conductor per terminal point! | |
| Single core, multi-core, fine-stranded | 0.2 - 4.0 mm ² , AWG 28-12 |
| Wire ferrules (non-insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Wire ferrules (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Strip length | 7 mm (0.2756 in) |

| Connection capacity of the terminals (voltage measurement) | |
|--|---------------------------------------|
| Connectible conductors. Only connect one conductor per terminal point! | |
| Single core, multi-core, fine-stranded | 0.2 - 4.0 mm ² , AWG 28-12 |
| Wire ferrules (non-insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Wire ferrules (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Strip length | 7 mm (0.2756 in) |

| Connection capacity of the terminals (current measurement) | |
|--|---------------------------------------|
| Connectible conductors. Only connect one conductor per terminal point! | |
| Single core, multi-core, fine-stranded | 0.2 - 4 mm ² , AWG 28-12 |
| Wire ferrules (non-insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Wire ferrules (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Strip length | 7 mm (0.2756 in) |

| Connection capacity of the terminals (serial interface) | |
|--|---------------------------------------|
| Connectible conductors. Only connect one conductor per terminal point! | |
| Single core, multi-core, fine-stranded | 0.2 - 1.5 mm ² , AWG 28-16 |
| Wire ferrules (non-insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Wire ferrules (insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Tightening torque | 0.2 - 0.25 Nm (1.77 - 2.21 lbf in) |
| Strip length | 7 mm (0.2756 in) |

| Connection capacity of the terminals (digital inputs/outputs, analog output) | |
|---|---------------------------------------|
| Connectible conductors. Only connect one conductor per terminal point! | |
| Single core, multi-core, fine-stranded | 0.2 - 1.5 mm ² , AWG 28-16 |
| Wire ferrules (non-insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Wire ferrules (insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Tightening torque | 0.2 - 0.25 Nm (1.77 - 2.21 lbf in) |
| Strip length | 7 mm (0.2756 in) |

17.1 Performance characteristics of functions

| Function | Symbol | Accuracy class | Measuring range | Display range |
|---------------------------------------|------------|--|----------------------|-----------------------|
| Total active power | P | 0.5 ¹⁾ (IEC61557-12) | 0 W .. 12.6 kW | 0 W .. 999 GW |
| Total reactive power | QA, Qv | 1 (IEC61557-12) | 0 var .. 16.6 kvar | 0 var .. 999 Gvar |
| Total apparent power | SA, Sv | 0.5 ¹⁾ (IEC61557-12) | 0 VA .. 12.6 kVA | 0 VA .. 999 GVA |
| Total active energy | Ea | 0.2 ¹⁾ (IEC61557-12) 0.2S ¹⁾ (IEC62053-22) 0.2 (ANSI C12.20) | 0 Wh .. 999 GWh | 0 Wh .. 999 GWh * |
| Total reactive energy | ErA, ErV | 1 (IEC61557-12) | 0 varh .. 999 Gvarh | 0 varh .. 999 Gvarh * |
| Total apparent energy | EapA, EapV | 0.5 ¹⁾ (IEC61557-12) | 0 VAh .. 999 GVAh | 0 VAh .. 999 GVAh * |
| Frequency | f | 0.05 (IEC61557-12) | 42.5 Hz .. 69 Hz | 42.50 Hz .. 69.00 Hz |
| Phase current | I | 0.2 (IEC61557-12) | 0 Arms .. 7 Arms | 0 A .. 999 kA |
| Neutral conductor current calculated | INc | 1.0 (IEC61557-12) | 0.03 A .. 25 A | 0.03 A .. 999 kA |
| Voltage | U L-N | 0.2 (IEC61557-12) | 10 Vrms .. 600 Vrms | 0 V .. 999 kV |
| Voltage | U L-L | 0.2 (IEC61557-12) | 18 Vrms .. 1040 Vrms | 0 V .. 999 kV |
| Power factor | PFA, PFV | 0.5 (IEC61557-12) | 0.00 .. 1.00 | 0.00 .. 1.00 |
| Transient overvoltages | Utr | - | - | - |
| Voltage harmonics | Uh | Cl. 1 (IEC61000-4-7) | 1 .. 65 | 0 V .. 999 kV |
| THD of voltage ²⁾ | THDu | 1.0 (IEC61557-12) | 0% .. 999% | 0% .. 999% |
| THD of voltage ³⁾ | THD-Ru | - | - | - |
| Current harmonics | Ih | Cl. 1 (IEC61000-4-7) | 1 .. 65 | 0 A .. 999 kA |
| THD of current ²⁾ | THDi | 1.0 (IEC61557-12) | 0% .. 999% | 0% .. 999% |
| THD of current ³⁾ | THD-Ri | - | - | - |
| Mains signal voltage | MSV | - | - | - |
| Short-term flicker, long-term flicker | Pst, Plt | Class 1 (IEC61000-4-15) | 0.4 Pst .. 10.0 Pst | 0 .. 10 |

1) Accuracy class 0.2/0.2S with ..5A transformer.
Accuracy class 0.5/0.5S with ..1A transformer.

2) Referenced to the fundamental oscillation.

3) Referenced to the effective value.

* When the maximum total energy values are reached, the display returns to 0 W.

17.2 Modbus addresses of frequently used measured values

| Address | Format | RD/WR | Variable | Unit | Comment |
|---------|--------|-------|-----------------|------|--|
| 19000 | float | RD | _ULN[0] | V | Voltage L1-N |
| 19002 | float | RD | _ULN[1] | V | Voltage L2-N |
| 19004 | float | RD | _ULN[2] | V | Voltage L3-N |
| 19006 | float | RD | _ULL[0] | V | Voltage L1-L2 |
| 19008 | float | RD | _ULL[1] | V | Voltage L2-L3 |
| 19010 | float | RD | _ULL[2] | V | Voltage L3-L1 |
| 19012 | float | RD | _ILN[0] | A | Apparent current, L1 |
| 19014 | float | RD | _ILN[1] | A | Apparent current, L2 |
| 19016 | float | RD | _ILN[2] | A | Apparent current, L3 |
| 19018 | float | RD | _I_SUM3 | A | Sum; $I_N=I_1+I_2+I_3$ |
| 19020 | float | RD | _PLN[0] | W | Active power L1 |
| 19022 | float | RD | _PLN[1] | W | Active power L2 |
| 19024 | float | RD | _PLN[2] | W | Active power L3 |
| 19026 | float | RD | _P_SUM3 | W | Sum; $P_{sum3}=P_1+P_2+P_3$ |
| 19028 | float | RD | _SLN[0] | VA | Apparent power L1 |
| 19030 | float | RD | _SLN[1] | VA | Apparent power L2 |
| 19032 | float | RD | _SLN[2] | VA | Apparent power L3 |
| 19034 | float | RD | _S_SUM3 | VA | Sum; $S_{sum3}=S_1+S_2+S_3$ |
| 19036 | float | RD | _QLN[0] | var | Reactive power (mains frequency) L1 |
| 19038 | float | RD | _QLN[1] | var | Reactive power (mains frequency) L2 |
| 19040 | float | RD | _QLN[2] | var | Reactive power (mains frequency) L3 |
| 19042 | float | RD | _Q_SUM3 | var | Sum; $Q_{sum3}=Q_1+Q_2+Q_3$ |
| 19044 | float | RD | _COS_PHI[0] | | Fund. power factor, CosPhi; UL1 IL1 |
| 19046 | float | RD | _COS_PHI[1] | | Fund. power factor, CosPhi; UL2 IL2 |
| 19048 | float | RD | _COS_PHI[2] | | Fund. power factor, CosPhi; UL3 IL3 |
| 19050 | float | RD | _FREQ | Hz | Frequency |
| 19052 | float | RD | _PHASE_SEQ | | Rotating field; 1=right, 0=none, -1=left |
| 19054* | float | RD | _WH_V[0] | Wh | Active energy L1, consumed |
| 19056* | float | RD | _WH_V[1] | Wh | Active energy L2, consumed |
| 19058* | float | RD | _WH_V[2] | Wh | Active energy L3, consumed |
| 19060 | float | RD | _WH_V_HT_SUML13 | Wh | Active energy L1..L3 |
| 19062 | float | RD | _WH_V[0] | Wh | Active energy L1, consumed |
| 19064 | float | RD | _WH_V[1] | Wh | Active energy L2, consumed |
| 19066 | float | RD | _WH_V[2] | Wh | Active energy L3, consumed |
| 19068 | float | RD | _WH_V_HT_SUML13 | Wh | Active energy L1..L3, consumed, tariff 1 |
| 19070 | float | RD | _WH_Z[0] | Wh | Active energy L1, delivered |
| 19072 | float | RD | _WH_Z[1] | Wh | Active energy L2, delivered |
| 19074 | float | RD | _WH_Z[2] | Wh | Active energy L3, delivered |
| 19076 | float | RD | _WH_Z_SUML13 | Wh | Active energy L1..L3, delivered |
| 19078 | float | RD | _WH_S[0] | VAh | Apparent energy L1 |
| 19080 | float | RD | _WH_S[1] | VAh | Apparent energy L2 |
| 19082 | float | RD | _WH_S[2] | VAh | Apparent energy L3 |
| 19084 | float | RD | _WH_S_SUML13 | VAh | Apparent energy L1..L3 |
| 19086* | float | RD | _IQH[0] | varh | Reactive energy, inductive, L1 |
| 19088* | float | RD | _IQH[1] | varh | Reactive energy, inductive, L2 |
| 19090* | float | RD | _IQH[2] | varh | Reactive energy, inductive, L3 |
| 19092 | float | RD | _IQH_SUML13 | varh | Reactive energy L1..L3 |
| 19094 | float | RD | _IQH[0] | varh | Reactive energy, inductive, L1 |
| 19096 | float | RD | _IQH[1] | varh | Reactive energy, inductive, L2 |
| 19098 | float | RD | _IQH[2] | varh | Reactive energy, inductive, L3 |

* The assignment of the marked device addresses does not correspond to the assignment of other devices in the UMG series.

| Address | Format | RD/WR | Variable | Unit | Comment |
|---------|--------|-------|-------------|------|---------------------------------|
| 19100 | float | RD | _IQH_SUML13 | varh | Reactive energy L1..L3, ind. |
| 19102 | float | RD | _CQH[0] | varh | Reactive energy, capacitive, L1 |
| 19104 | float | RD | _CQH[1] | varh | Reactive energy, capacitive, L2 |
| 19106 | float | RD | _CQH[2] | varh | Reactive energy, capacitive, L3 |
| 19108 | float | RD | _CQH_SUML13 | varh | Reactive energy L1..L3, cap. |
| 19110 | float | RD | _THD_ULN[0] | % | Harmonics, THD,U L1-N |
| 19112 | float | RD | _THD_ULN[1] | % | Harmonics, THD,U L2-N |
| 19114 | float | RD | _THD_ULN[2] | % | Harmonics, THD,U L3-N |
| 19116 | float | RD | _THD_ILN[0] | % | Harmonics, THD,I L1 |
| 19118 | float | RD | _THD_ILN[1] | % | Harmonics, THD,I L2 |
| 19120 | float | RD | _THD_ILN[2] | % | Harmonics, THD,I L3 |

17.3 Number formats

| Type | Size | Minimum | Maximum |
|--------|--------|-----------|--------------|
| short | 16 bit | -2^{15} | $2^{15} - 1$ |
| ushort | 16 bit | 0 | $2^{16} - 1$ |
| int | 32 bit | -2^{31} | $2^{31} - 1$ |
| uint | 32 bit | 0 | $2^{32} - 1$ |
| float | 32 bit | IEEE 754 | IEEE 754 |

17.4 Note on saving measured values and configuration data

i INFORMATION

Saving measured values and configuration data!

In the event of an **operating voltage failure** the recording can be interrupted for a maximum of 5 minutes. The following **measured values are saved by the device every 5 minutes** in a non-volatile memory:

- Comparator timer
- S0 meter readings
- Minimum, maximum and average values (without date and time)
- Energy values

The device saves configuration data immediately!

17.5 Dimensional drawings

The figures are for illustration purposes only and are not to scale.

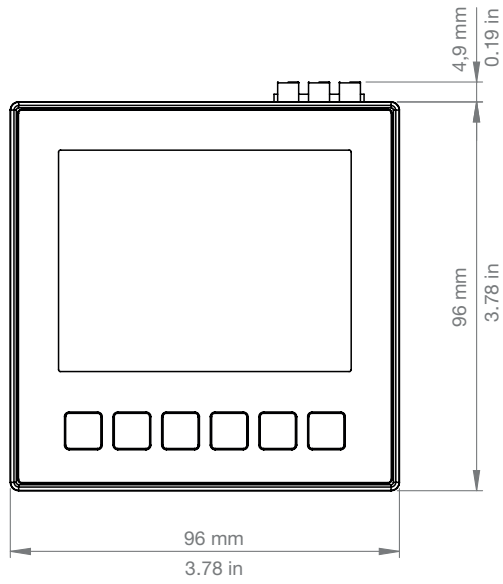


Fig. Front view

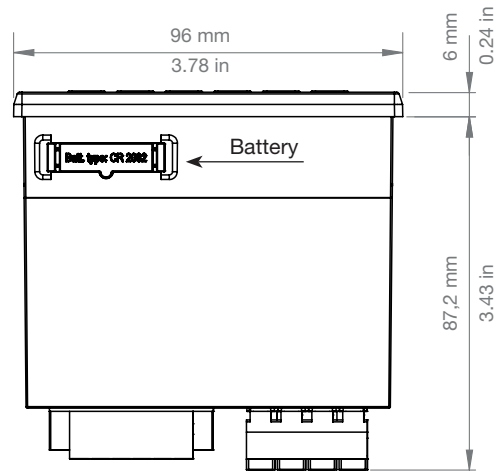


Fig. Bottom view

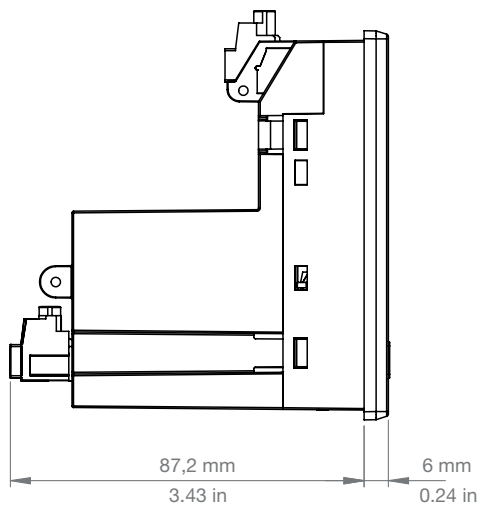


Fig. Side view


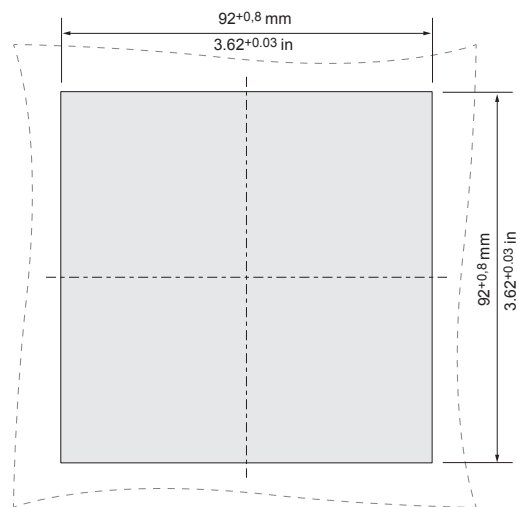


Fig. Cutout dimensions

17.6 Connection example

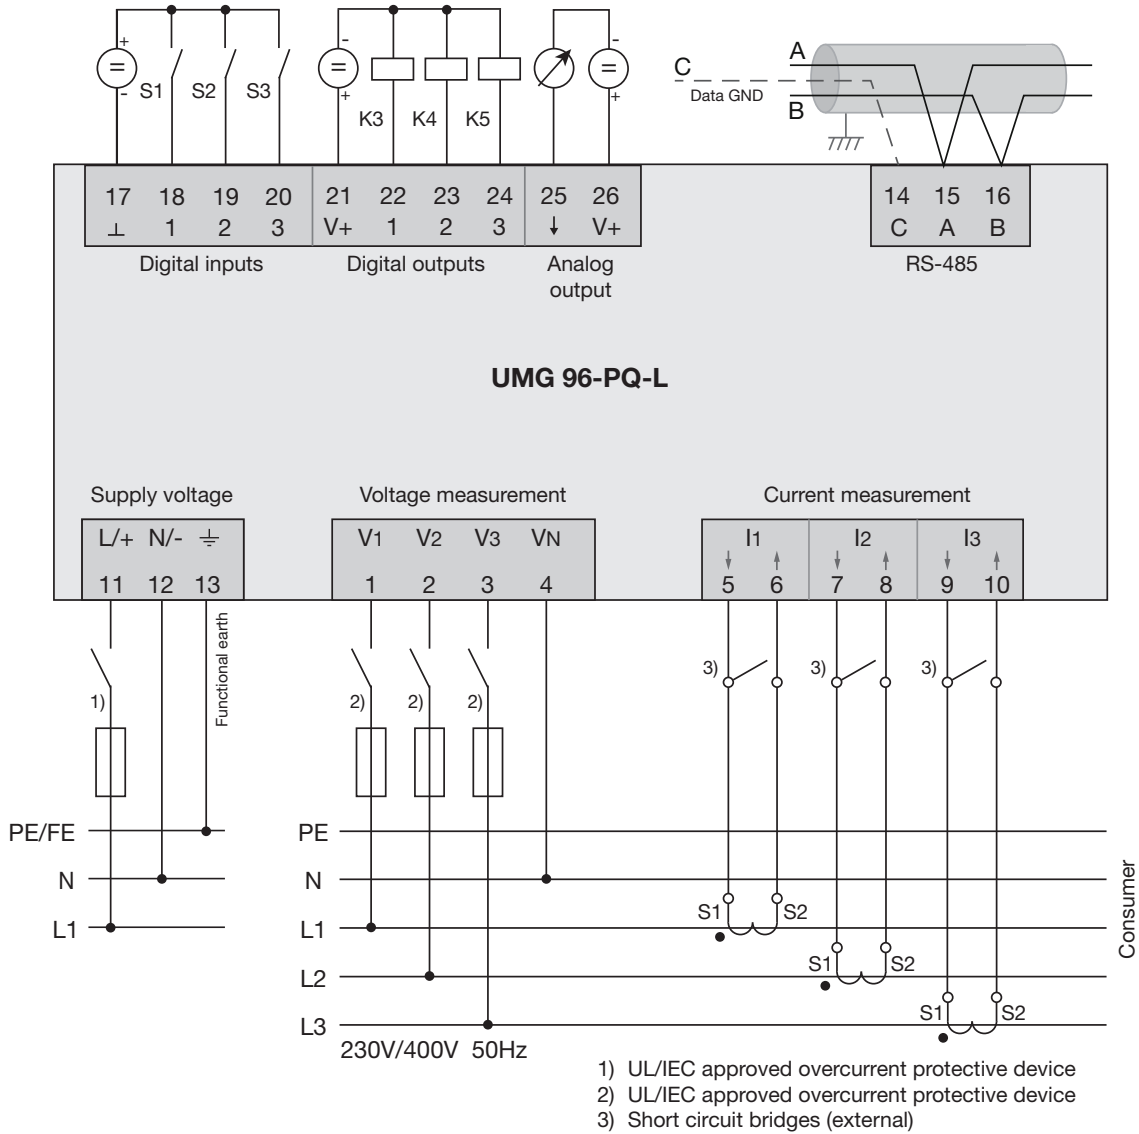

Janitza[®]

Janitza electronics GmbH
Vor dem Polstück 6 | 35633 Lahnau
Germany

Tel.: +49 6441 - 9642-0
info@janitza.com | www.janitza.com